

hold-time

Syntax	hold-time <i>seconds</i> ;
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family (inet inet6) address <i>address</i> (vrrp vrrp-inet6-group) <i>group-id</i> preempt], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family (inet inet6) address <i>address</i> (vrrp vrrp-inet6-group) <i>group-id</i> preempt]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	In a Virtual Router Redundancy Protocol (VRRP) configuration, set the hold time before a higher-priority backup router preempts the master router.
Default	VRRP preemption is not timed.
Options	<i>seconds</i> —Hold-time period. Range: 0 through 3600 seconds Default: 0 seconds (VRRP preemption is not timed.)
Usage Guidelines	See Configuring a Backup Router to Preempt the Master Router.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

Published: 2010-01-13