

ignore-attached-bit

Syntax	ignore-attached-bit;
Hierarchy Level	[edit logical-systems <i>logical-system-name</i> protocols isis], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols isis], [edit protocols isis], [edit routing-instances <i>routing-instance-name</i> protocols isis]
Release Information	Statement introduced before JUNOS Release 7.4. Statement introduced in JUNOS Release 9.0 for EX Series switches.
Description	Ignore the attached bit on IS-IS Level 1 routers. Configuring this statement allows the routing device to ignore the attached bit on incoming Level 1 LSPs. If the attached bit is ignored, no default route, which points to the routing device which has set the attached bit, is installed.
Default	The ignore-attached-bit statement is disabled by default.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	■ Configuring IS-IS

Published: 2010-04-14