

indication

Syntax indication (ignore | normal | require);

Hierarchy Level [edit interfaces *interface-name* serial-options dce-options],
[edit interfaces *interface-name* serial-options dte-options]

Release Information Statement introduced before JUNOS Release 7.4.

Description For X.21 interfaces only, configure the from-DCE signal indication.

Options ignore—The from-DCE signal is ignored.

normal—Normal indication signal handling as defined by ITU-T Recommendation X.21.

require—The from-DCE signal must be asserted.

Default: normal

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ Configuring the Serial Signal Handling

Published: 2010-04-20