

interface

Syntax interface *interface-name* {
 disable;
 hello-interval *seconds*;
 hold-time *seconds*;
 transport-address (interface | loopback);
}

Hierarchy Level [edit logical-systems *logical-system-name* protocols ldp],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ldp],
[edit protocols ldp],
[edit routing-instances *routing-instance-name* protocols ldp]

Release Information Statement introduced before JUNOS Release 7.4.

Description Enable LDP on one or more router interfaces.

Default LDP is disabled on all interfaces.

Options *interface-name*—Name of an interface. To configure all interfaces, specify **all**.

The remaining statements are explained separately.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics ■ Enabling and Disabling LDP

Published: 2010-04-28