

interfaces

Syntax interfaces { ... }

Hierarchy Level [edit]

Release Information Statement introduced before JUNOS Release 7.4.

Description Configure interfaces on the router.

Default The management and internal Ethernet interfaces are automatically configured. You must configure all other interfaces.

Usage Guidelines See the *JUNOS Network Interfaces Configuration Guide*.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Published: 2010-04-28