

local-engine

Syntax local-engine {
 user *username* {
 authentication-md5 {
 authentication-password *authentication-password*;
 }
 authentication-none;
 authentication-sha {
 authentication-password *authentication-password*;
 }
 privacy-aes128 {
 privacy-password *privacy-password*;
 }
 privacy-des {
 privacy-password *privacy-password*;
 }
 privacy-3des {
 privacy-password *privacy-password*;
 }
 privacy-none {
 privacy-password *privacy-password*;
 }
 }
}

Hierarchy Level [edit snmp v3 usm]

Release Information Statement introduced before JUNOS Release 7.4.
Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Configure local engine information for the user-based security model (USM).
The remaining statements are explained separately.

Required Privilege Level snmp—To view this statement in the configuration.
snmp-control—To add this statement to the configuration.

Related Topics ■ [Creating SNMPv3 Users](#)

Published: 2010-04-27