

local-password

Syntax local-password *password*;

Hierarchy Level [edit interfaces *interface-name* ppp-options pap],
[edit interfaces *interface-name* unit *logical-unit-number* ppp-options pap],
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* ppp-options pap]

Release Information Statement introduced in JUNOS Release 8.3.

Description Configure the host password for sending PAP requests.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Topics**
- Configuring the Local Password
 - Configuring the PPP Password Authentication Protocol

Published: 2010-04-20