

loose-check

Syntax	loose-check;
Hierarchy Level	[edit protocols pim interface <i>interface-name</i> bfd-liveness-detection authentication], [edit routing-instances <i>routing-instance-name</i> protocols pim interface <i>interface-name</i> bfd-liveness-detection authentication]
Release Information	Statement introduced in JUNOS Release 9.6.
Description	Optionally modify the default of strict checking for BFD authentication, and specify loose checking instead. When loose checking is configured, packets are accepted without authentication being checked at each end of the BFD session. The use of this statement is intended for transitional periods only.
Required Privilege Level	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
Related Topics	<ul style="list-style-type: none">■ authentication■ Configuring BFD Authentication for PIM■ Overview of BFD Authentication for PIM

Published: 2009-10-09