

maximum-hop-count

Syntax	maximum-hop-count <i>number</i> ;
Hierarchy Level	[edit forwarding-options helpers bootp], [edit forwarding-options helpers bootpinterface <i>interface-group</i>]
Release Information	Statement introduced before JUNOS Release 7.4. Statement introduced in JUNOS Release 9.0 for EX Series switches.
Description	Specify the maximum number of hops allowed.
Options	<i>number</i> —Maximum number of hops. Default: 4 hops
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	■ Configuring Routers, Switches, and Interfaces as DHCP and BOOTP Relay Agents

Published: 2010-04-15