

## menu-item

---

**Syntax** menu-item (*menu-name* | *menu-option*);

**Hierarchy Level** [edit chassis lcd-menu]

**Release Information** Statement introduced in JUNOS Release 10.2 for EX Series switches.

**Description** Disable or enable the Maintenance menu, the Status menu, or an individual option in one of those menus in the LCD panel.

**Options** *menu-name*—Name of the LCD menu:

- maintenance-menu
- status-menu

*menu-option*—Specific option on one of the LCD menus. You must include the quotation marks when you type the option.

- "maintenance-menu halt-menu"—System halt option
- "maintenance-menu system-reboot"—System reboot option
- "maintenance-menu rescue-config"—Load rescue option
- "maintenance-menu vc-uplink-config"—(EX4200 switches only) Request VC port option for an EX4200 switch in a Virtual Chassis configuration
- "maintenance-menu factory-default"—Factory default option
- "status-menu vcp-status"—(EX4200 switches only) Virtual Chassis port (VCP) status for an EX4200 switch in a Virtual Chassis configuration
- "status-menu sf-status1-menu"—(EX8200 switches only) Status of the switch fabric on the Switch Fabric and Routing Engine (SRE) module in slot SRE0 on EX8208 switches. Status of the switch fabric on the Switch Fabric (SF) modules in slots SF0 and SF1 on EX8216 switches.
- "status-menu sf-status2-menu"—(EX8200 switches only) Status of the switch fabric on the SRE module in slot SRE1 on EX8208 switches. Status of the switch fabric on the SF modules in slots SF2–SF5 on EX8216 switches.
- "status-menu sf-status3-menu"—(EX8216 switches only) Status of the switch fabric on the SF modules in slots SF6 and SF7
- "status-menu power-status"—(EX3200, EX4200, and EX4500 switches only) Status of the power supply
- "status-menu psu-status1-menu"—(EX8200 switches only) Status of the power supplies in slots P0 and P1
- "status-menu psu-status2-menu"—(EX8200 switches only) Status of the power supplies in slots P2–P5

- "status-menu environ-status"—Status of the fan and the temperature
- "status-menu show-version"—The version of JUNOS Software for EX Series switches loaded on the switch

**Required Privilege Level** view-level—To view this statement in the configuration.  
control-level—To add this statement to the configuration.

- Related Topics**
- Configuring the LCD Panel on EX Series Switches (CLI Procedure)
  - LCD Panel in EX3200 and EX4200 Switches
  - LCD Panel in EX4500 Switches
  - LCD Panel in an EX8200 Switch

---

Published: 2010-04-26