

mode

Syntax mode (dense | sparse | sparse-dense);

Hierarchy Level [edit logical-systems *logical-system-name* protocols pim interface *interface-name*],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols
pim interface *interface-name*],
[edit protocols pim interface *interface-name*],
[edit routing-instances *routing-instance-name* protocols pim interface *interface-name*]

Release Information Statement introduced before JUNOS Release 7.4.
Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Configure PIM to operate in sparse, dense, or sparse-dense mode.

Options dense—Operate in dense mode.

sparse—Operate in sparse mode.

sparse-dense—Operate in sparse-dense mode.

Default: sparse

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics

- [Configuring PIM Dense Mode Properties](#)
- [Configuring PIM Sparse-Dense Mode Properties](#)
- [JUNOS Multicast Protocols Configuration Guide](#)

Published: 2010-04-16