

## mtu

---

<b>Syntax</b>	mtu <i>bytes</i> ;
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> ], [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family <i>family</i> ]
<b>Release Information</b>	Statement introduced before JUNOS Release 7.4.
<b>Description</b>	Maximum transmission unit (MTU) size for the media or protocol. The default MTU size depends on the device type. Not all devices allow you to set an MTU value, and some devices have restrictions on the range of allowable MTU values.
<b>Options</b>	<i>bytes</i> —MTU size. <b>Range:</b> 0 through 5012 bytes <b>Default:</b> 1500 bytes (inet, inet6, and iso families), 1448 bytes (mpls)
<b>Usage Guidelines</b>	See Configuring MRRU on Multilink and Link Services Logical Interfaces.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Topics</b>	<i>JUNOS Network Interfaces Configuration Guide</i>

---

Published: 2010-04-28