

ntp

Syntax ntp {
 authentication-key *number* type *type* value *password*;
 boot-server *address*;
 broadcast <*address*> <*key key-number*> <*version value*> <*ttl value*>;
 broadcast-client;
 multicast-client <*address*>;
 peer *address* <*key key-number*> <*version value*> <*prefer*>;
 server *address* <*key key-number*> <*version value*> <*prefer*>;
 source-address *source-address*;
 trusted-key [*key-numbers*];
}

Hierarchy Level [edit system]

Release Information Statement introduced before JUNOS Release 7.4.
Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Configure NTP on the router or switch.

The remaining statements are explained separately.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Topics ■ Synchronizing and Coordinating Time Distribution Using NTP

Published: 2010-04-26