

password (DHCP Local Server)

Syntax password *password-string*;

Hierarchy Level [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server authentication],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server dhcpv6 authentication],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server dhcpv6 group *group-name* authentication],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server group *group-name* authentication],
[edit logical-systems *logical-system-name* system services dhcp-local-server authentication],
[edit logical-systems *logical-system-name* system services dhcp-local-server dhcpv6 authentication],
[edit logical-systems *logical-system-name* system services dhcp-local-server dhcpv6 group *group-name* authentication],
[edit logical-systems *logical-system-name* system services dhcp-local-server group *group-name* authentication],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server authentication],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server dhcpv6 authentication],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server dhcpv6 group *group-name* authentication],
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* system services dhcp-local-server group *group-name* authentication],
[edit routing-instances *routing-instance-name* system services dhcp-local-server authentication],
[edit routing-instances *routing-instance-name* system services dhcp-local-server dhcpv6 authentication],
[edit routing-instances *routing-instance-name* system services dhcp-local-server dhcpv6 group *group-name* authentication],
[edit routing-instances *routing-instance-name* system services dhcp-local-server group *group-name* authentication],
[edit system services dhcp-local-server authentication],
[edit system services dhcp-local-server dhcpv6],
[edit system services dhcp-local-server dhcpv6 group *group-name* authentication],
[edit system services dhcp-local-server group *group-name* authentication]

Release Information Statement introduced in JUNOS Release 9.1.

Description Configure the password that is sent to the external AAA authentication server for subscriber authentication.

Options *password-string*—Authentication password.

Required Privilege Level system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Related Topics ■ Using External AAA Authentication Services with DHCP

Published: 2010-04-26