

## ppp-subscriber-services

---

**Syntax** ppp-subscriber-services (disable | enable);

**Hierarchy Level** [edit chassis]

**Release Information** Statement introduced in JUNOS Release 10.2.

**Description** Enable dynamic PPP subscriber services on non-PPPoE interfaces on certain PICs.



**NOTE:** When you include this statement, the relevant PICs restart. This action disrupts subscribers already logged in via those PICs. You can confirm completion of the restart by issuing the **show chassis pic fpc-slot *slot-number* pic-slot *slot-number*** command.

---

**Options** disable—Disable subscriber services.

enable—Enable subscriber services.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Topics**
- For hardware requirements, see Hardware Requirements for PPP Subscriber Services on Non-Ethernet Interfaces
  - show chassis pic
  - Attaching Dynamic Profiles to MLPPP Bundles

---

Published: 2010-04-15