

preempt

Syntax	(preempt no-preempt) { [Unresolved xref] seconds; }
Hierarchy Level	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family llc2 redundancy-group <i>group-number</i>], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family llc2 redundancy-group <i>group-number</i>]
Release Information	Statement introduced before JUNOS Release 7.4.
Description	Configure whether a DLSw backup router can preempt a master router: <ul style="list-style-type: none">■ preempt—Allow the master router to be preempted.■ no-preempt—Prohibit the preemption of the master router. <p>The remaining statement is explained separately.</p>
Default	If you omit this statement, the backup router cannot preempt a master router.
Usage Guidelines	See Configuring LLC2 Options.
Required Privilege Level	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Topics	For information about the <code>preempt</code> statement at the [edit interfaces <i>interface-name</i> unit <i>unit-number</i> family inet address <i>address</i> (vrrp-group vrrp-inet6-group) <i>group-number</i>] or [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>unit-number</i> family (inet inet6) address <i>address</i> (vrrp-group vrrp-inet6-group) <i>group-number</i>] hierarchy level, see the <i>JUNOS High Availability Configuration Guide</i> .

