

priority-cost

| | |
|---------------------------------|--|
| Syntax | priority-cost <i>priority</i> ; |
| Hierarchy Level | [edit interfaces <i>interface-name</i> unit <i>unit-number</i> family llc2 redundancy-group <i>group-number</i> priority <i>priority</i> track interface <i>interface-name</i>] |
| Release Information | Statement introduced in JUNOS Release 8.1. |
| Description | When configuring DLSw Ethernet redundancy, configure a DLSw router's priority cost for becoming the master default router. The router with the highest priority within the group becomes the master. |
| Options | priority-cost <i>priority</i> —The value subtracted from the configured DLSw priority when the tracked interface is down, forcing a new master router election. The sum of all the costs for all interfaces or routes that are tracked must be less than or equal to the configured priority of the DLSw group. Range: 1 through 254 |
| Usage Guidelines | See Configuring LLC2 Options. |
| Required Privilege Level | interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. |

