

## priority (DLSw)

---

<b>Syntax</b>	<code>priority <i>priority</i>;</code>
<b>Hierarchy Level</b>	[edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i> redundancy-group <i>group-number</i> ], [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family inet address <i>address</i> redundancy-group <i>group-number</i> ]
<b>Release Information</b>	Statement introduced in JUNOS Release 7.5.
<b>Description</b>	When configuring DLSw Ethernet redundancy on Fast Ethernet and Gigabit Ethernet interfaces, configure a DLSw router's priority for becoming the master default router. The router with the highest priority within the group becomes the master.
<b>Options</b>	<i>priority</i> —Router's priority for being elected to be the master router in the VRRP group. A larger value indicates a higher priority for being elected. <b>Range:</b> 1 through 255 <b>Default:</b> 100 (for backup routers)
<b>Usage Guidelines</b>	See Configuring LLC2 Options.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

