

redundancy

Syntax redundancy {
 cfep *slot* (always | preferred);
 failover {
 on-disk-failure;
 on-loss-of-keepalives;
 }
 feb {
 redundancy-group *group-name* {
 description *description*;
 feb *slot-number* (backup | primary);
 no-auto-failover;
 }
 }
 graceful-switchover;
 keepalive-time *seconds*;
 routing-engine *slot-number* (backup | disabled | master);
 sfm *slot-number* (always | preferred);
 ssb *slot-number* (always | preferred);
}

Hierarchy Level [edit chassis]

Release Information Statement introduced before JUNOS Release 7.4.

Description Configure redundancy options.

Options The statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Topics**
- Chassis Redundancy Hierarchy
 - Configuring Routing Engine Redundancy
 - Configuring CFEB Redundancy on the M10i Router
 - Configuring FEB Redundancy on the M120 Router
 - Configuring SFM Redundancy on M40e and M160 Routers
 - Configuring SSB Redundancy on the M20 Router