

## restart-time

---

<b>Syntax</b>	restart-time <i>seconds</i> ;
<b>Hierarchy Level</b>	[edit protocols (bgp   rip   ripng) graceful-restart], [edit logical-systems <i>logical-system-name</i> protocols (bgp   rip   ripng) graceful-restart], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols bgp graceful-restart], [edit routing-instances <i>routing-instance-name</i> protocols bgp graceful-restart]
<b>Release Information</b>	Statement introduced in JUNOS Release 8.3.
<b>Description</b>	Configure the duration of the Border Gateway Protocol (BGP), Routing Information Protocol (RIP), or next-generation RIP (RIPng) graceful restart period.
<b>Options</b>	<i>seconds</i> —Amount of time for the graceful restart period. <b>Range:</b> 1 through 600 <b>Default:</b> The range of values varies according the protocol: <ul style="list-style-type: none"><li>■ BGP—120</li><li>■ RIP/RIPng—60</li></ul>
<b>Usage Guidelines</b>	See Configuring Routing Protocols Graceful Restart and Configuring Routing Protocols Graceful Restart.
<b>Required Privilege Level</b>	view-level—To view this statement in the configuration. control-level—To add this statement to the configuration.
<b>Related Topics</b>	stale-routes-time

---

Published: 2010-01-13