

routing-instance

Syntax routing-instance {
 destination *routing-instance-name*;
 bridge-domain *name*;
}

Hierarchy Level [edit interfaces *interface-name* unit *logical-unit-number* tunnel],
[edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number* tunnel],
[edit protocols oam ethernet connectivity-fault-management maintenance-domain *name*]

Release Information Statement introduced before JUNOS Release 7.4.

Description To configure interfaces and logical-systems, specify the destination routing instance that points to the routing table containing the tunnel destination address.

To configure protocols for the oam ethernet connectivity-fault-management maintenance-domain, specify the routing-instance *name*.

Default The default Internet routing table is inet.0.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics

- [Configuring Maintenance Intermediate Points](#)
- [JUNOS Services Interfaces Configuration Guide](#)

Published: 2010-04-20