

routing-instance

Syntax `routing-instance routing-instance-name;`

Hierarchy Level `[edit snmp v3 target-address target-address-name]`

Release Information Statement introduced in JUNOS Release 8.3.
Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Specify a routing instance for an SNMPv3 trap target.

Options *routing-instance-name*—Name of the routing instance.

To configure a routing instance within a logical system, specify the logical system name followed by the routing instance name. Use a slash (/) to separate the two names (for example, `test-ls/test-ri`). To configure the default routing instance on a logical system, specify the logical system name followed by `default` (for example, `test-ls/default`).

Required Privilege Level `snmp`—To view this statement in the configuration.
`snmp-control`—To add this statement to the configuration.

Related Topics ■ [Configuring the Trap Target Address](#)

Published: 2010-04-27