

## rp-set

---

**Syntax**

```
rp-set {  
    address address <forward-msdp-sa>;  
}
```

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols pim local family (inet | inet6) anycast-pim],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols pim local family (inet | inet6) anycast-pim],  
[edit protocols pim local family (inet | inet6) anycast-pim],  
[edit routing-instances *routing-instance-name* protocols pim local family (inet | inet6) anycast-pim]

**Release Information** Statement introduced in JUNOS Release 7.4.  
Statement introduced in JUNOS Release 9.0 for EX Series switches.

**Description** Configure a set of rendezvous point (RP) addresses for anycast RP. You can configure up to 15 RPs.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Topics** ■ Example: Configuring PIM Anycast with MSDP

---

Published: 2010-04-16