

rpm

Syntax rpm (client | server);

Hierarchy Level [edit interfaces *interface-name* unit *logical-unit-number*]

Release Information Statement introduced in JUNOS Release 8.1.

Description Associate an RPM client (router that originates RPM probes) or RPM server with a specified Adaptive Services interface.

Options *client*—Identifier for RPM client router.
server—Identifier for RPM server router.

Usage Guidelines See Configuring RPM Timestamping.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Published: 2010-04-28