

rts-polarity

Syntax rts-polarity (negative | positive);

Hierarchy Level [edit interfaces *interface-name* serial-options]

Release Information Statement introduced before JUNOS Release 7.4.

Description Configure RTS signal polarity.

Options negative—Negative signal polarity.

positive—Positive signal polarity.

Default: positive

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ Configuring Serial Signal Polarities

Published: 2010-04-20