

server (DHCP and BOOTP Relay Agent)

Syntax server *address* {
 <logical-system *logical-system-name*> <routing-instance [*routing-instance-names*]>;
}

Hierarchy Level [edit forwarding-options helpers bootp],
[edit forwarding-options helpers bootp interface *interface-group*]

Release Information Statement introduced before JUNOS Release 7.4.
Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Configure the router or switch to act as a DHCP and BOOTP relay agent.

- Options**
- *address*—One or more addresses of the server.
 - logical-system *logical-system-name*—(Optional) Logical system of the server.
 - routing-instance [*routing-instance-names*]—(Optional) Routing instance name or names that belong to the DHCP or BOOTP relay agent.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ Configuring Routers, Switches, and Interfaces as DHCP and BOOTP Relay Agents

Published: 2010-04-15