

start-end-flag

Syntax start-end-flag (filler | shared);

Hierarchy Level [edit interfaces e1-fpc/pic/port],
[edit interfaces t1-fpc/pic/port],
[edit interfaces interface-name ds0-options],
[edit interfaces interface-name e1-options],
[edit interfaces interface-name e3-options],
[edit interfaces interface-name t1-options],
[edit interfaces interface-name t3-options]

Release Information Statement introduced before JUNOS Release 7.4.

Description For DS0, E1, E3, T1, and T3 interfaces, configure the interface to share the transmission of start and end flags.



NOTE: When configuring E1 or T1 interfaces on the 10-port Channelized E1/T1 IQE PIC, the **start-end-flag** statement must be included at the [edit interfaces e1-fpc/pic/port] or [edit interfaces t1-fpc/pic/port] hierarchy level as appropriate.

Options filler—Wait two idle cycles between the start and end flags.

shared—Share the transmission of the start and end flags. This is the default.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Topics**
- Configuring E1 Start and End Flags
 - Configuring the E3 Start and End Flags
 - Configuring T1 Start and End Flags
 - Configuring T3 Start and End Flags

Published: 2010-04-20