

threshold-count

Syntax threshold-count *count*;

Hierarchy Level [edit logical-systems *logical-system-name* protocols l2-learning global-mac-move],
[edit protocols l2-learning global-mac-move]

Release Information Statement introduced in JUNOS Release 9.4.
Support for logical systems added in JUNOS Release 9.6.

Description (MX Series routers only) Configure the threshold count value for MAC move reports.

Default 50

Options *count*—Number of MAC moves needed in the notification time to generate a MAC move report.

Required Privilege Level routing—To view this statement in the configuration.
routing-control—To add this statement to the configuration.

Related Topics ■ Configuring MAC Move Parameters

Published: 2010-05-11