

tm

Syntax tm (ignore | normal | require);

Hierarchy Level [edit interfaces *interface-name* serial-options dce-options],
[edit interfaces *interface-name* serial-options dte-options]

Release Information Statement introduced before JUNOS Release 7.4.

Description For EIA-530 interfaces only, configure the from-DCE signal, test-mode (TM).

Options ignore—The from-DCE signal is ignored.

normal—Normal TM signal handling as defined by the TIA/EIA Standard 530.

require—The from-DCE signal must be asserted.

Default: normal

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ [Configuring the Serial Signal Handling](#)

Published: 2010-04-20