

traceoptions

Syntax	<pre>traceoptions { file <i>name</i> <size <i>size</i>> <files <i>number</i>> <world-readable no-world-readable>; flag <i>flag</i> <flag-modifier> <disable>; }</pre>
Hierarchy Level	[edit protocols isis], [edit protocols (ospf ospf3)]
Release Information	Statement introduced before JUNOS Release 7.4. graceful-restart flag for IS-IS and OSPF/OSPFv3 added in JUNOS Release 8.4.
Description	Define tracing operations that graceful restart functionality in the router. To specify more than one tracing operation, include multiple flag statements.
Default	If you do not include this statement, no global tracing operations are performed.
Options	<p>disable—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as all.</p> <p>file <i>name</i>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log. We recommend that you place global routing protocol tracing output in the file routing-log.</p> <p>files <i>number</i>—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p>Range: 2 through 1000 files Default: 2 files</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the size option.</p> <p>flag <i>flag</i>—Tracing operation to perform. To specify more than one tracing operation, include multiple flag statements. The nonstop active routing tracing option is:</p> <ul style="list-style-type: none">■ graceful-restart—Tracing operations for nonstop active routing <p>no-world-readable—Restrict users from reading the log file.</p> <p>size <i>size</i>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches its maximum size,</p>

trace-file.0 is renamed *trace-file.1* and *trace-file* is renamed *trace-file.0*. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

Syntax: *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

Range: 10 KB through the maximum file size supported on your system

Default: 128 KB

If you specify a maximum file size, you also must specify a maximum number of trace files with the **files** option.

world-readable—Allow users to read the log file.

Required Privilege Level routing and trace—To view this statement in the configuration.
routing-control and trace-control—To add this statement to the configuration.

Related Topics ■ Tracking Graceful Restart Events

Published: 2010-04-28