

unit

Syntax unit *logical-unit-number* {
description *text*;
disable;
family *family-name* {...}
proxy-arp (restricted | unrestricted);
rpm;
(traps | no-traps);
vlan-id *vlan-id-number*;
}

Hierarchy Level [edit interfaces *interface-name*]

Release Information Statement introduced in JUNOS Release 9.0 for EX Series switches.

Description Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.

Options *logical-unit-number*—Number of the logical unit.
Range: 0 through 16,384

The remaining statements are explained separately.

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

- Related Topics**
- Configuring Gigabit Ethernet Interfaces (CLI Procedure)
 - Configuring Aggregated Ethernet Interfaces (CLI Procedure)
 - EX Series Switches Interfaces Overview
 - *JUNOS Software Network Interfaces Configuration Guide* at <http://www.juniper.net/techpubs/software/junos/junos101/index.html>

Published: 2010-01-19