

vpi (ATM CCC Cell-Relay Promiscuous Mode)

Syntax vpi *vpi-identifier*;

Hierarchy Level [edit interfaces *at-fpc/pic/port* atm-options promiscuous-mode]

Release Information Statement introduced before JUNOS Release 7.4.

Description For ATM interfaces, allow all VCIs in this VPI to open in ATM CCC cell-relay mode.

When you include vpi statements at the [edit interfaces *interface-name* atm-options promiscuous-mode] hierarchy level, the specified VPIs open in promiscuous mode.

Options *vpi-identifier*—ATM virtual path identifier. This is one of the VPIs that you define in the vci statement. (For a list of hierarchy levels at which you can include the vci statement, see vci.)

Range: 0 through 255

Required Privilege Level interface—To view this statement in the configuration.
interface-control—To add this statement to the configuration.

Related Topics ■ Configuring ATM Cell-Relay Promiscuous Mode

Published: 2010-04-20