

world-readable

| | |
|---------------------------------|---|
| Syntax | (world-readable no-world-readable); |
| Hierarchy Level | [edit forwarding-options port-mirroring traceoptions file], [edit forwarding-options sampling output file], [edit forwarding-options sampling traceoptionsfile] |
| Release Information | Statement introduced before JUNOS Release 7.4. |
| Description | Enable unrestricted file access. |
| Options | no-world-readable—Restrict file access to owner. This is the default. world-readable—Enable unrestricted file access. Default: no-world-readable |
| Usage Guidelines | See Configuring Port Mirroring or Configuring Traffic Sampling. |
| Required Privilege Level | interface—To view this statement in the configuration. interface-control—To add this statement to the configuration. |

Published: 2010-04-28