

Channelized OC Interface Operational Commands

Table 1 summarizes the command-line interface (CLI) commands to monitor and troubleshoot channelized OC interfaces. Commands are listed in alphabetical order.

Table 1: Channelized OC Interface Operational Mode Commands

Task or Information to Monitor	CLI Command
Display channelized OC3 IQ and IQE interface information.	show interfaces (Channelized OC3 IQ and IQE)
Display status information about channelized OC12 interfaces.	show interfaces (Channelized OC12)
Display channelized OC12 IQ and IQE interface information.	show interfaces (Channelized OC12 IQ and IQE)
Display the interface names of the physical channelized OC3 IQ and IQE interface and the channels configured on each interface.	show interfaces controller (Channelized OC3 IQ and IQE)
Display the interface names of the physical channelized OC12 IQ and IQE interface and the channels configured on each interface.	show interfaces controller (Channelized OC12 IQ and IQE)



NOTE: For more information about the channel type and level of channelization, and for information about the number of channels that are supported on channelized OC interfaces, see the *JUNOS Network Interfaces Configuration Guide*.

For channelization illustrations and configuration examples for channelized IQ and IQE interfaces, see the *JUNOS Feature Guide*.

Published: 2010-04-28