

Loopback Interface

The JUNOS Software automatically configures one loopback interface (lo0), choosing the first interface to come online as the default. You can also configure the loopback interface.

When you enter the `show interfaces` command, the loopback interface and its logical interfaces are displayed:

```
user@host> show interfaces ?
...
lo0
lo0.0
lo0.16385
...
```

The logical interface `lo0.16385` is a nonconfigurable interface for router control traffic.

Related Topics ■ [show interfaces \(Loopback\)](#)

Published: 2010-04-28