

## Configuring the JUNOS Software to Disable the Physical Operation of the Craft Interface

---

You can disable the physical operation of the craft interface front panel on the router. When you disable the operation of the craft interface, the buttons on the front panel, such as the alarm cutoff button, no longer function. To disable the craft interface operation, include the `craft-lockout` statement at the `[edit chassis]` hierarchy level:

```
[edit chassis]
craft-lockout;
```

- Related Topics**
- [Configuring the JUNOS Software to Determine Conditions That Trigger Alarms on Different Interface Types](#)
  - [Silencing External Devices Connected to the Alarm Relay Contacts](#)

---

Published: 2010-04-26