

## Disabling DHCP Relay

---

You can disable DHCP relay on all interfaces or a group of interfaces.

To disable DHCP relay agent:

1. Specify that you want to configure override options.

```
[edit forwarding-options dhcp-relay]
user@host# edit overrides
```

2. Disable the DHCP relay agent.

```
[edit forwarding-options dhcp-relay overrides]
user@host# set disable-relay
```

- Related Topics**
- Extended DHCP Relay Agent Overview
  - Deleting DHCP Local Server and DHCP Relay Override Settings

---

Published: 2010-04-15