

Assigning a NAT Pool

To assign a NAT pool, you create a media service configuration that contains the name of the NAT pool. You then specify the media service in a virtual interface configuration and in a PGCP rule. The PGCP rule assigns the media service for a specific virtual BGF.

To configure a media service:

1. Create a media service, and specify a name for the service.

```
[edit services pgcp]
user@host# edit media-service media-service-one
```

2. Assign the NAT pool to the media service.

```
[edit services pgcp media-service media-service-one]
user@host# set nat-pool bsg_rtp_nat_pool
```

Published: 2010-04-22