

Configuring Access to the Mobile IP Log File

By default, only the user who configures the tracing operation can access the log files. You can enable all users to read the log file and you can explicitly set the default behavior of the log file.

To specify that all users can read the log file:

- Configure the log file to be world-readable.

```
[edit services mobile-ip traceoptions]
user@host# set file mip_1_logfile_1 world-readable
```

To explicitly set the default behavior, only the user who configured tracing can read the log file:

- Configure the log file to be no-world-readable.

```
[edit services mobile-ip traceoptions]
user@host# set file mip_1_logfile_1 no-world-readable
```

- Related Topics**
- [Configuring Mobile IP](#)
 - [Tracing Mobile IP Operations](#)
 - [traceoptions \(Mobile IP\)](#)

Published: 2010-04-15