

JUNOS Software Minimum System Logging Configuration

To record or view system log messages, you must include the `syslog` statement at the `[edit system]` hierarchy level. Specify at least one destination for the messages, as described in Table 1. For more information about the configuration statements, see Single-Chassis System Logging Configuration Overview.

Table 1: Minimum Configuration Statements for System Logging

Destination	Minimum Configuration Statements
File	<pre>[edit system syslog] file filename { facility severity; }</pre>
Terminal session of one, several, or all users	<pre>[edit system syslog] user (username *) { facility severity; }</pre>
Router console	<pre>[edit system syslog] console { facility severity; }</pre>
Remote machine or the other Routing Engine on the router	<pre>[edit system syslog] host (hostname other-routing-engine) { facility severity; }</pre>

Related Topics ■ [JUNOS Software System Log Configuration Overview](#)

Published: 2010-04-26