

Viewing Current Users

To view a list of users logged in to the routing platform, select **Monitor > System View > System Information** in J-Web and scroll down to the Logged-in User Details section, or enter the `show system users` command in the CLI. The J-Web page and CLI output show all users logged into the routing platform from either J-Web or the CLI.

Published: 2010-04-29