

Security

- Firewall on page 1
- IPSec on page 1
- NAT on page 2

Firewall

To view stateful firewall filter information in the J-Web interface, select **Monitor > Security > Firewall > Stateful Firewall**. To display stateful firewall filter information for a particular address prefix, port, or other characteristic, type or select information in one or more of the Narrow Search boxes, and click **OK**.

Table 1 shows a summary of the information displayed on Firewall pages and the corresponding CLI **show** commands you can enter at the J-Web CLI terminal.

Table 1: Firewall Information and Corresponding CLI show Commands

Information Displayed	Corresponding CLI Command
Statistics Summary	
Stateful firewall filter statistics.	show services stateful-firewall statistics
Stateful Firewall	
Stateful firewall filter conversations.	show services stateful-firewall conversations
Flow table entries for stateful firewall filters.	show services stateful-firewall flows
IDS Information	
Information about an address under possible attack.	show services ids destination-table
Information about an address that is a suspected attacker.	show services ids source-table
Information about a particular suspected attack source and destination address pair.	show services ids pair-table

IPSec

To view information about configured IPSec tunnels and statistics, and IKE security associations for adaptive services interfaces select **Monitor > Security > IPSec** in the J-Web interface.

Table 2 shows a summary of the information displayed on the IPSec page and the corresponding CLI **show** commands you can enter at the J-Web CLI terminal.

Table 2: IPSec Information and Corresponding CLI show Commands

Information Displayed	Corresponding CLI Command
(Adaptive services interface only) IPSec statistics for the selected service set.	show services ipsec-vpn ipsec statistics
(Adaptive services interface only) IPSec security associations for the selected service set.	show services ipsec-vpn ipsec security-associations
(Adaptive services interface only) Internet Key Exchange (IKE) security associations.	show services ipsec-vpn ike security-associations

NAT

NAT pool information includes information about the address ranges configured within the pool on the routing platform. To view NAT pool information, select **Monitor > Security > NAT** in the J-Web interface.

Table 3 shows a summary of the information displayed on the NAT page and the corresponding CLI show command you can enter at the J-Web CLI terminal.

Table 3: NAT Information and Corresponding CLI show Command

Information Displayed	Corresponding CLI Command
Information about Network Address Translation (NAT) pools.	show services nat pool

Published: 2010-04-29