

ACTIVATE YOUR JUNIPER NETWORKS NETWORK AND SECURITY MANAGER (NSM) CAPACITY

This document briefly describes how to use your Juniper Networks Authorization Code to generate a license activation key for your Juniper Networks Network and Security Manager (NSM).

Four Easy Steps to Generate Your Juniper Networks License Activation Key

- Gather your Authorization Code and Device Serial Number.

Authorization Code: The 16-digit alphanumeric Authorization Code is sent via email in response to your order and is required to generate and activate the NSM license activation key for your Juniper Networks NSM software or NSMXpress. The Authorization Code is required to generate your license key—it is not the actual license key.

NSM Serial Number: The NSM serial number is a unique 16-character code Juniper Networks uses to identify your particular Juniper Networks NSM software or NSMXpress when generating license keys. You can find the device serial number at the back of the NSMXpress device. You can find the software serial number in the packaging you received with your NSM order for NSM software.


Install ID: A unique identifier required for NSM Software Only installations. The install ID is generated by the NSM software installation script.

High Availability: When NSM is installed in a High Availability configuration, generation of the license requires the install ID and Serial Number from the primary and the secondary server. When a license is generated for a High Availability environment, it is required to have the “Need High Availability Key” checked and the Serial Number, Install ID of the secondary Server should be defined.
- Sign in to the Juniper Networks License Management System (LMS) at www.juniper.net/generate_license, select the Network and Security Manager link, then follow the instruction in the system user interface.
- The Juniper License Management System provides the license key in one of two ways:

 - Download your license key to your computer.
 - You receive an email that contains the license key.
- NSM GUI:** Tools > NSM License Information > Install New License > select the file with the license key, and then click Open.

NSM CLI: During installation of NSM software, the installer prompts to enter the location of license file. Enter the License File Path > Enter the NSM server path where you have saved the license file generated by Juniper LMS system.

Obtaining and Activating License Keys

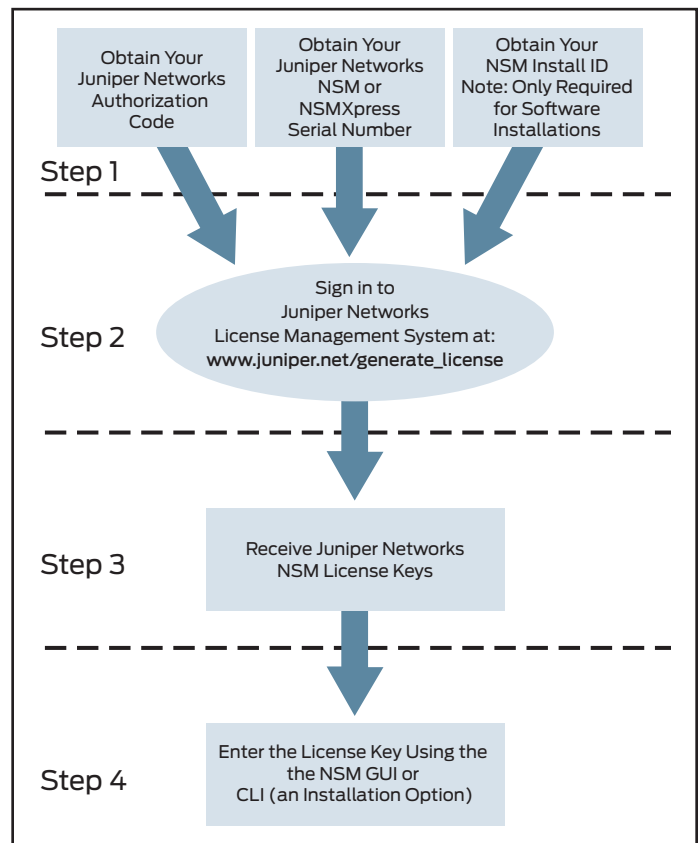

For more detailed information regarding license keys, refer to the [Network and Security Manager Installer Guide](#).

For additional assistance, you may contact Juniper Networks Customer Care at +1-888-314-5822 (United States) or +1-408-936-1572 (outside the United States). Alternately, you may also open a case online via the Juniper Customer Support Center (CSC) Case Manager.