Mist 設定マニュアル

- Site configuration -

Site レベルの AP 設定

ジュニパーネットワークス株式会社 2021年7月 Ver 1.0



はじめに

- ◆ 本マニュアルは、『Site レベルの AP 設定』について説明します
- ◆ 手順内容は 2021年7月 時点の Mist Cloud にて確認を実施しております 実際の画面と表示が異なる場合は以下のアップデート情報をご確認下さい https://www.mist.com/documentation/category/product-updates/
- ◆ 設定内容やパラメータは導入する環境や構成によって異なります 各種設定内容の詳細は下記リンクよりご確認ください <u>https://www.mist.com/documentation/</u>
- ◆ 他にも多数の Mist 日本語マニュアルを「ソリューション&テクニカル情報サイト」に掲載しております <u>https://www.juniper.net/jp/ja/local/solution-technical-information/mist.html</u>



Site レベルの AP 設定

1. [Organization] から [Site Configuration] を 2. 対象となる Site を選択します 選択します

Mist					
↔ Monitor	Monitor Wireless Wired WA	N Location Insights site Primary Site -			
🔥 Marvis™ 🔒	東京駅丸の内駅前広場				
္လ Clients	Settings Basic organization information and security setting	Config Templates Apply consistent configuration across multiple site:			
• Access Points	Site Configuration Create and manage sites and site groups	Labels Define org labels for users, APs, WLANs, etc			
Switches	RF Templates Apply consistent RF Settings across multiple sites	Administrators Configure administrator accounts and access levels			
Gateways	Mobile SDK Configuration for the mobile SDK	Audit Logs View the audit logs for your organization			
🗸 Location	Inventory View and manage Device inventory	Subscriptions View and configure Subscriptions			
D Analytics	Device Profiles Apply consistent configuration across multiple APs	(d Mist Edges View and configure Mist Edges			
B Network	Mist Tunnels View and configure Mist Tunnels	Switch Templates Apply switch configuration across multiple sites			
Organization	Pre-shared Keys Create keys for users and groups				
	12:00 am - 12:10 am, Jul 1: Bytes: no data, 0	0.00 Mbps			

7 Sit	7 Sites						
Filter	Filter Q						
Name		RF Template	Time Zone	Address			
Site_00	Japan		Asia/Tokyo	日本、東京都東京			
Site_01	Japan		Asia/Tokyo	日本、東京都東京			
Site_02	Japan		Japan	日本、大阪府大阪市			
Site_03	Japan		Asia/Tokyo	日本、東京都東京			
Site_04	Japan		Japan	日本、愛知県名古屋市			
Site_05	Japan		Japan	日本、宮城県仙台市			
Site_05	Japan		Japan	日本、福岡県福岡市			

3

Site レベルの AP 設定

3. Site レベルの AP 設定は「Access Point Settings」で行います



Site レベルの AP 設定

4. [Save] をクリックし変更内容を保存します



