Mist 運用マニュアル ファームウェア 手動アップグレード手順

ジュニパーネットワークス株式会社 2021年7月 Ver 1.0



はじめに

- ◆ 本マニュアルは、『ファームウェア 手動アップグレード手順』について説明します
- ◆ 手順内容は 2021年7月 時点の Mist Cloud にて確認を実施しております 実際の画面と表示が異なる場合は以下のアップデート情報をご確認下さい https://www.mist.com/documentation/category/product-updates/
- ◆ 設定内容やパラメータは導入する環境や構成によって異なります 各種設定内容の詳細は下記リンクよりご確認ください <u>https://www.mist.com/documentation/</u>
- ◆ 他にも多数の Mist 日本語マニュアルを「ソリューション&テクニカル情報サイト」に掲載しております <u>https://www.juniper.net/jp/ja/local/solution-technical-information/mist.html</u>



■運用ケース(例) ・ アクセスポイントのファームウェアを手動でアップデートしたい時





ファームウェア 手動アップグレード

1. [Access Points] をクリックします

Mist		DEMO		
Monitor	12 A(ccess Poir	nts site Live D	emo
▲ Marvis™			12	8
တို Clients			92% Connection	Status
• Access Points				
Switches	Filter	Q,		
Gateways				
🗸 Location		Status	∧ Name	MAC
		Connected	LD_Kitchen	DC:5
D Analytics		Connected	LD_EBC	5c:5
		Connected	LD_Marvis	5c:5
Network		Connected	LD_MCB_AP	5c:5
Organization		Connected	LD_GPS_AP	5c:5
		Connected	I.D. PS Support	505

対象のアクセスポイントを選択します ※複数のアクセスポイントを指定する事も可能です

Mist	LIVE D	EMO		
⋘ Monitor	12 AC	cess Points	site Live Demo 💌	
∦ Marvis™				12 7 1 Access Points Wireless Clients AP21
Clients				9286 Connection Status
• Access Points				100% VEARS
Switches	Filter	٩		
Gateways				
		Status	🔅 Name	MAC Address
✓ Location		Connected	LD_Kitchen	5c:5b:35:0e:06:6d
□□ Analytics		Connected	LD_EBC	5c:5b:35:0e:3c:f5
• ••••		Connected	LD_Marvis	5c:5b:35:0e:45:92
Network		Connected	LD_MCB_AP	5c:5b:35:2f:57:89
Organization		Connected	LD_GPS_AP	5c:5b:35:2f:59:7d
		Connected	LD_RS_Support	5c:5b:35:2f:5c:5c
		Connected	LD_IDF_B_AP	5c:5b:35:3e:4e:ca



ファームウェア 手動アップグレード

3. [Upgrade] をクリックし、アップブレードのバージョンを指定後、[Start Upgrade]をクリックします

	12 ACCESS POINTS site Live Demo -						More	ory Upgrade APs	Lingrade APs		
Å Marvis™						1 AP43			Opgrade Ar S		
OC Clients	Access Points Wireless Clients AP21 AP32 AP41 AP43										
• Access Points				92% Connection Status 100%	VLANS 82% Versio	n Compliance					
Switches	Filter	Q									
Gateways											
✓ Location		Status	∧ Name	MAC Address	Site	IP Address	Uptime	Model			
		• Connected	LD_Kitchen	5c:5b:35:0e:06:6d	Live Demo	192.168.2.97	1d 22h 45m	AP41	Upgrade APs Firmware		
D Analytics	<u> </u>	Connected	LD_EBC	5c:5b:35:0e:3c:f5	Live Demo	192.168.2.72	45d 8h 44m	AP41			
Network		Connected	LD_Marvis	5c:5b:35:0e:45:92	Live Demo	192.168.2.102	45d 8h 44m	AP41	Total Access Points selected to upgrade: 2		
		Connected	LD_MICB_AP	5c:5b:35:2f:59:7d	Live Demo	192.168.2.105	450 80 4400 27d 10b 28m	AP41			
Urganization		Connected	LD RS Support	5c:5b:35:2f:5c:5c	Live Demo	192.168.2.103	45d 8h 44m	AP41	Access Point Model: AP41		
		Connected	LD_IDF_B_AP	5c:5b:35:3e:4e:ca	Live Demo	192.168.2.142	49d 15h 6m	AP41	Selected Access Points: LD_tchen, LD_EBC		
		_						_	Ungrade to Version 0.9.22801 (rc1)		
			七回吐不可	๛๚๚๛	ッキュルタ	,					
		2百以上	で回吁でア	ッノクレー「	~9 る除	N		Ĺ			
ar un	arad	AC LICIN	$\gamma c \sim 1 \pi^2$	ミュンを有る	法化する	スト ネッ	トワーク	井市	Faster upgrades using peer to peer communication Start Upgrade		
si up	grau	CS USIN		ノコノ・ビ・コン	2109.6	シー、 イング					
	うど	(弗ももう	うつ 美日/	マップガレ	ドコピ	でオ					

アを他のアクセスポイントへ横展開するオプションです)

ファームウェア 手動アップグレード前後の画面

 アップグレード中はStatusがUpgrade状態 へ遷移します

Mist		DEMO				
↔ Monitor	12 A(cess Point	S site Live Demo	•		
A Marvis™				12	8 1	
္လ Clients				Access Points Win	eless Clients AP	
• Access Points				92% Connection	Status 100%	
Switches	Filter	٩				
Gateways						
🗸 Location		Status	*	Name	MAC Address	
		Connected		LD_EBC	5c:5b:25:0o	
Analytics		Connected			5c:5b:35:0e.	
D Network		Connected			5c:5b:35:2f:	
∞		Connected			50.50.35.21.	
Organization		Connected			50.50.35.21.	
		Connected		LD_IDF_B_AP	5C(5D):35:3e)	
		• Connected		LD_Sales_area	5c:5b:35:50:	
		Conn	0			
		Conn 🖸	アップグレ	ードの進	捗も確認出す	そます
		Conn				
		🚹 No ethernet li	nk	5c:5b:35:1e:bf:9f	5c:5b:35:1e:	
		Upgrading	40%	LD_Kitchen	5c:5b:35:0e:	

 StatusがConnected状態へ遷移すれば、 アップグレード完了です



IUNIPEr

6

Thank you

