

Chapter 33

Configure T3 Interfaces

T3 is the physical layer protocol used by the Digital Signal level 3 (DS-3) multiplexing method in North America. A T3 interface operates at a bit rate of 44.736 Mbps. The JUNOS software supports payload scrambling and subrate operation on each physical T3 interface. One encapsulation format, PPP, Frame Relay, or HDLC, must be configured for the interface. DS-3 standards supported include:

ANSI T1.107, T1.102

GR 499-core, GR 253-core

Bellcore TR-TSY-000009

AT&T Pub 54014

ITU G.751, G.703, G823

To configure T3-specific physical interface properties, include the `t3-options` statement at the [edit interfaces *interface-name*] hierarchy level:

```
[edit interfaces interface-name]  
t3-options {  
  bert-algorithm algorithm;  
  bert-error-rate rate;  
  bert-period seconds;  
  (cbit-parity | no-cbit-parity);  
  compatibility-mode (adtran | digital-link | kentrox | larscom | verilink)  
  <subrate value>;  
  fcs (32 | 16);  
  (feac-loop-respond | no-feac-loop-respond);  
  idle-cycle-flag value;  
  (long-buildout | no-long-buildout);  
  (loop-timing | no-loop-timing);  
  loopback (local | payload | remote);  
  (payload-scrambler | no-payload-scrambler);  
  start-end-flag value;  
}
```

You can configure the following T3 interface-specific properties:

Configure T3 BERT Properties on page 506

Disable T3 C-Bit Parity Mode on page 507

Configure the T3 CSU Compatibility Mode on page 508

Configure the T3 Frame Checksum on page 510

Configure the T3 FEAC Response on page 510

Configure the T3 Idle Cycle Flag on page 511

Configure the T3 Line Buildout on page 511

Configure the Channelized T3 Loop Timing on page 512

Configure T3 Loopback Capability on page 512

Configure T3 HDLC Payload Scrambling on page 514

Configure the T3 Start End Flags on page 515

For an example of T3 interface configuration, see “Examples: Configure T3 Interfaces” on page 515.

Configure T3 BERT Properties

You can configure a T3 interface to execute a bit error rate test (BERT) when the interface receives a request to run this test. You specify the duration of the test, the pattern to send in the bit stream, and the error rate to include in the bit stream by including the `bert-period`, `bert-algorithm`, and `bert-error-rate` statements at the `[edit interfaces interface-name t3-options]` hierarchy level:

```
[edit interfaces interface-name t3-options]
  bert-algorithm algorithm;
  bert-error-rate rate;
  bert-period seconds;
```

By default, the BERT period is 10 seconds. You can configure the BERT period to last from 1 through 239 seconds on some PICs and from 1 through 240 seconds on other PICs.

rate is the bit error rate. This can be an integer from 0 through 7, which corresponds to a bit error rate from 10^{-0} (1 error per bit) to 10^{-7} (1 error per 10 million bits).

algorithm is the pattern to send in the bit stream. The algorithm for the E1 BERT procedure is pseudo-2e15-o151 (pattern is $2^{15}-1$, as defined in the CCITT/ITU O.151 standard).

On T3 interfaces, you can also select the pattern to send in the bit stream by including the `bert-algorithm` statement at the [edit interfaces *interface-name* *interface-options*] hierarchy level:

```
[edit interfaces interface-name interface-options]
bert-algorithm algorithm;
```

For a list of supported algorithms, see the CLI possible completions; for example:

```
[edit interfaces t3-0/0/0 t3-options]
user@host# set bert-algorithm ?
Possible completions:
all-ones-repeating Repeating one bits
all-zeros-repeating Repeating zero bits
alternating-double-ones-zeros Alternating pairs of ones and zeros
alternating-ones-zeros Alternating ones and zeros
pseudo-2e10 Pattern is 2^10 - 1
...
```

For specific hierarchy information, see individual interface types. For information about running the BERT procedure, see the *JUNOS Internet Software Network and Services Interfaces Command Reference*.

Disable T3 C-Bit Parity Mode

C-bit parity mode controls the type of framing that is present on the transmitted T3 signal. When C-bit parity mode is enabled, the C-bit positions are used for the FEBE, FEAC, terminal data link, path parity, and mode indicator bits, as defined in ANSI T1.107a-1989. When C-bit parity mode is disabled, the basic T3 framing mode (M13) is used.

By default, C-bit parity mode is enabled. To disable C-bit parity mode and use M13 framing for your T3 link, include the `no-cbit-parity` statement at the [edit interfaces *interface-name* *t3-options*] hierarchy level:

```
[edit interfaces interface-name t3-options]
no-cbit-parity;
```

To return to the default, enabling C-bit parity mode, delete the `no-cbit-parity` statement from the configuration:

```
[edit]
user@host# delete interfaces t3-fpc/pic/port t3-options no-cbit-parity
```

To explicitly enable C-bit parity mode, include the `cbit-parity` statement at the [edit interfaces *interface-name* *t3-options*] hierarchy level:

```
[edit interfaces interface-name t3-options]
cbit-parity;
```

Configure the T3 CSU Compatibility Mode

Subrating a T3 interface reduces the maximum allowable peak rate by limiting the HDLC-encapsulated payload. Subrate modes configure the PIC to connect with channel service units (CSUs) that use proprietary methods of multiplexing. You can configure T3 interfaces to be compatible with a Digital Link, Kentrox, or Larscom CSU. For T3 intelligent queuing (IQ) channels only, you can also configure Adtran or Verilink CSU compatibility. To configure a T3 interface so that it is compatible with the CSU at the remote end of the line, include the compatibility statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
compatibility-mode (adtran | digital-link | kentrox | larscom | verilink) <subrate
value>;
```

The subrate of a T3 interface must exactly match that of the remote CSU. To specify the subrate, include the subrate statement in the configuration:

For Adtran CSUs, specify the subrate as a number from 1 through 588 that exactly matches the value configured on the CSU. A subrate value of 588 corresponds to 44.2 Mbps, or 100 percent of the HDLC-encapsulated payload. A subrate value of 1 corresponds to $44.2 / 588$, which is 75.17 kbps, or 0.17 percent of the HDLC-encapsulated payload.

For Digital Link CSUs, specify the subrate as the data rate you configured on the CSU in the format xKb or x.xMb. For Digital Link CSUs, you can specify the subrate value to match the data rate configured on the CSU in the format xkb or x.xMb. You can configure the subrate values shown in Table 38 on page 509.

For Kentrox CSUs, specify the subrate as a number from 1 through 69 that exactly matches the value configured on the CSU. A subrate value of 69 corresponds to 34.995097 Mbps, or 79.17 percent of the HDLC-encapsulated payload (44.2 Mbps). A subrate value of 1 corresponds to 999.958 kbps, which is 2.26 percent of the HDLC-encapsulated payload. Each increment of the subrate value corresponds to a rate increment of about 0.5 Mbps. Kentrox subrate is supported on E3 IQ and T3 IQ interfaces only.

For Larscom CSUs, specify the subrate as a number from 1 through 14 that exactly matches the value configured on the CSU. A subrate value of 14 corresponds to 44.2 Mbps, or 100 percent of the HDLC-encapsulated payload. A subrate value of 1 corresponds to $44.2 / 14$, which is 3.16 Mbps, 7.15 percent of the HDLC-encapsulated payload.

For Verilink CSUs, specify the subrate as a number from 1 through 28 that exactly matches the value configured on the CSU. A subrate value of 28 corresponds to 44.2 Mbps, or 100 percent of the HDLC-encapsulated payload, and a subrate value of 1 corresponds to 1.57891765 Mbps, or 3.57 percent of the HDLC-encapsulated payload.

Table 38: Subrate Values for T3 Digital Link Compatibility Mode

301 Kbps	601 Kbps	902 Kbps	1.2 Mbps	1.5 Mbps
1.8 Mbps	2.1 Mbps	2.4 Mbps	2.7 Mbps	3.0 Mbps
3.3 Mbps	3.6 Mbps	3.9 Mbps	4.2 Mbps	4.5 Mbps
4.8 Mbps	5.1 Mbps	5.4 Mbps	5.7 Mbps	6.0 Mbps
6.3 Mbps	6.6 Mbps	6.9 Mbps	7.2 Mbps	7.5 Mbps
7.8 Mbps	8.1 Mbps	8.4 Mbps	8.7 Mbps	9.0 Mbps
9.3 Mbps	9.6 Mbps	9.9 Mbps	10.2 Mbps	10.5 Mbps
10.8 Mbps	11.1 Mbps	11.4 Mbps	11.7 Mbps	12.0 Mbps
12.3 Mbps	12.6 Mbps	12.9 Mbps	13.2 Mbps	13.5 Mbps
13.8 Mbps	14.1 Mbps	14.4 Mbps	14.7 Mbps	15.0 Mbps
15.3 Mbps	15.6 Mbps	15.9 Mbps	16.2 Mbps	16.5 Mbps
16.8 Mbps	17.1 Mbps	17.4 Mbps	17.7 Mbps	18.0 Mbps
18.3 Mbps	18.6 Mbps	18.9 Mbps	19.2 Mbps	19.5 Mbps
19.8 Mbps	20.1 Mbps	20.5 Mbps	20.8 Mbps	21.1 Mbps
21.4 Mbps	21.7 Mbps	22.0 Mbps	22.3 Mbps	22.6 Mbps
22.9 Mbps	23.2 Mbps	23.5 Mbps	23.8 Mbps	24.1 Mbps
24.4 Mbps	24.7 Mbps	25.0 Mbps	25.3 Mbps	25.6 Mbps
25.9 Mbps	26.2 Mbps	26.5 Mbps	26.8 Mbps	27.1 Mbps
27.4 Mbps	27.7 Mbps	28.0 Mbps	28.3 Mbps	28.6 Mbps
28.9 Mbps	29.2 Mbps	29.5 Mbps	29.8 Mbps	30.1 Mbps
30.4 Mbps	30.7 Mbps	31.0 Mbps	31.3 Mbps	31.6 Mbps
31.9 Mbps	32.2 Mbps	32.5 Mbps	32.8 Mbps	33.1 Mbps
33.4 Mbps	33.7 Mbps	34.0 Mbps	34.3 Mbps	34.6 Mbps
34.9 Mbps	35.2 Mbps	35.5 Mbps	35.8 Mbps	36.1 Mbps
36.4 Mbps	36.7 Mbps	37.0 Mbps	37.3 Mbps	37.6 Mbps
37.9 Mbps	38.2 Mbps	38.5 Mbps	38.8 Mbps	39.1 Mbps
39.4 Mbps	39.7 Mbps	40.0 Mbps	40.3 Mbps	40.6 Mbps
40.9 Mbps	41.2 Mbps	41.5 Mbps	41.8 Mbps	42.1 Mbps
42.4 Mbps	42.7 Mbps	43.0 Mbps	43.3 Mbps	43.6 Mbps
43.9 Mbps	44.2 Mbps			

Configure the T3 Frame Checksum

By default, T3 interfaces use a 16-bit frame checksum. You can configure a 32-bit checksum, which provides more reliable packet verification. However, some older equipment might not support 32-bit checksums.

On a channelized OC-12 interface, the `fcs` statement is not supported. To configure FCS on each DS-3 channel, you must include the `t3-options fcs` statement in the configuration for each channel.

To configure a 32-bit checksum, include the `fcs` statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
fcs 32;
```

To return to the default 16-bit frame checksum, delete the `fcs 32` statement from the configuration:

```
[edit]
user@host# delete interfaces t3-fpc/pic/port t3-options fcs 32
```

To explicitly configure a 16-bit checksum, include the `fcs` statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
fcs 16;
```

Configure the T3 FEAC Response

The T3 far-end alarm and control (FEAC) signal is used to send alarm or status information from the far-end terminal back to the near-end terminal and to initiate T3 loopbacks at the far-end terminal from the near-end terminal.

By default, the routing platform does not respond to FEAC requests. To allow the remote CSU to place the local routing platform into loopback, you must configure the routing platform to respond to the CSU's FEAC request by including the `feac-loop-respond` statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
feac-loop-respond;
```

If you configure remote or local loopback with the T3 loopback statement, the routing platform does not respond to FEAC requests from the CSU even if you include the `feac-loop-respond` statement in the configuration. For the routing platform to respond, you must delete the loopback statement from the configuration.

To explicitly configure the routing platform not to respond to FEAC requests, include the `no-feac-loop` statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
no-feac-loop-respond;
```

Configure the T3 Idle Cycle Flag

By default, a T3 interface transmits the value 0x7E in the idle cycles. To have the interface transmit the value 0xFF (all ones) instead, include the `idle-cycle-flag` statement at the [edit interfaces *interface-name* t3-options] hierarchy level, specifying the `ones` option:

```
[edit interfaces interface-name t3-options]
idle-cycle-flag ones;
```

To explicitly configure the default value of 0x7E, include the `idle-cycle-flag` statement with the `flags` option:

```
[edit interfaces interface-name t3-options]
idle-cycle-flag flags;
```

Configure the T3 Line Buildout

A T3 interface has two settings for the T3 line buildout: a short setting, which is less than 255 feet (about 68 meters), and a long setting, which is greater than 255 feet and less than 450 feet. By default, the interface uses the short setting.

The `long-buildout` and `no-long-buildout` statements apply only to copper-cable-based T3 interfaces. You cannot configure a line buildout for a DS-3 channel on a Channelized OC-12 interface, which runs over fiber-optic cable. If you configure this statement on a Channelized OC-12 interface, it is ignored.

To have the interface drive a line that is longer than 255 feet and shorter than 450 feet, include the `long-buildout` statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
long-buildout;
```

To explicitly configure the default short line buildout, include the `no-long-buildout` statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
no-long-buildout;
```

Configure the Channelized T3 Loop Timing

For channelized T3 IQ interfaces, you can configure loop timing on all T1 IQ interfaces under the channelized T3 interface. The loop-timing and no-loop-timing statements apply only to channelized T3 IQ interfaces. If you attempt to include these statements on any other interface type, they are ignored.

To configure loop timing for all T1 channels under the channelized T3 interface, include the loop-timing statement at the [edit interfaces *ct3-fpc/pic/port* t3-options] hierarchy level:

```
[edit interfaces ct3-fpc/pic/port t3-options]
loop-timing;
```


To explicitly configure the default no loop timing for all T1 channels under the channelized T3 IQ interface, include the no-loop-timing statement at the [edit interfaces *ct3-fpc/pic/port* t3-options] hierarchy level:

```
[edit interfaces ct3-fpc/pic/port t3-options]
no-loop-timing;
```

Configure T3 Loopback Capability

You can configure loopback capability between the local T3 interface and the remote CSU, as shown in Figure 31. You can configure the loopback to be local or remote. With local loopback, the T3 interface can transmit packets to the CSU, but receives its own transmission back again and ignores data from the CSU. With remote loopback, packets sent from the CSU are received by the T3 interface, forwarded if there is a valid route, and immediately retransmitted to the CSU.

Figure 31: Remote and Local T3 Loopback

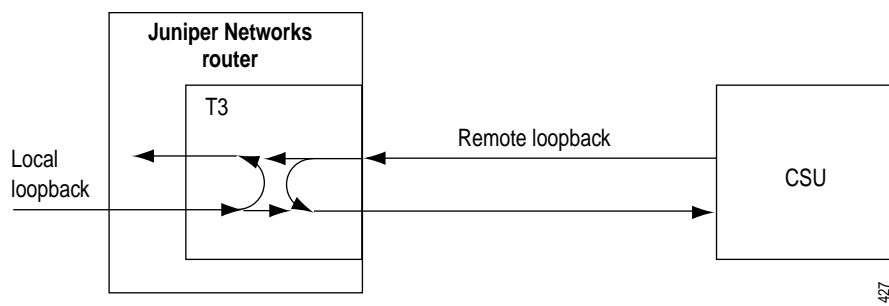

To configure loopback capability on a T3 interface, include the loopback statement at the [edit interfaces *interface-name* t3-options] hierarchy level:

```
[edit interfaces interface-name t3-options]
loopback (local | payload | remote);
```

Packets can be looped on either the local routing platform or the remote CSU. Local and remote loopback loop back both data and clocking information.

To exchange BERT patterns between a local routing platform and a remote routing platform, you include the loopback remote statement in the interface configuration at the remote end of the link. From the local routing platform, you issue the test interface command.

For more information about configuring BERT, see “Configure BERT Properties” on page 82. For more information about using operational mode commands to test interfaces, see the *JUNOS Internet Software Network and Services Interfaces Command Reference*.

For channelized T3, T1, and NxDS-0 IQ interfaces only, you can include the loopback payload statement in the configuration to loop back data only (without clocking information) on the remote routing platform’s PIC. In payload loopback, overhead is recalculated. For T3 IQ interfaces, you can include the loopback payload statement at the [edit interfaces ct3-fpc/pic/port] and [edit interfaces t3-fpc/pic/port:channel] hierarchy levels. For T1 interfaces, you can include the loopback payload statement in the configuration at the [edit interfaces t1-fpc/pic/port:channel] hierarchy level; it is ignored if included at the [edit interfaces ct1-fpc/pic/port] hierarchy level. For NxDS-0 interfaces, payload and remote loopback are the same. If you configure one, the other is ignored. NxDS-0 IQ interfaces do not support local loopback.

To determine whether a problem is internal or external, you can loop packets on both the local and the remote routing platform. To do this, include the no-keepalives and encapsulation cisco-hdlc statements at the [edit interfaces interface-name] hierarchy level and the loopback local statement at the [edit interfaces interface-name t3-options] hierarchy level, as shown in the following example:

```
[edit interfaces]
t3-1/0/0 {
  no-keepalives;
  encapsulation cisco-hdlc;
  t3-options {
    loopback local;
  }
  unit 0 {
    family inet {
      address 10.100.100.1/24;
    }
  }
}
```

With this configuration, the link stays up, so you can loop ping packets to a remote routing platform. The loopback local statement causes the interface to loop within the PIC just before the data reaches the transceiver.

To turn off the loopback capability, remove the loopback statement from the configuration:

```
[edit]
user@host# delete interfaces t3-fpc/pic/port t3-options loopback
```

You can determine whether there is an internal problem or an external problem by checking the error counters in the output of the `show interface interface-name extensive` command, for example:

```
user@host> show interfaces t3-fpc/pic/port extensive
```

For channel 0 on channelized interfaces only, you can include the `loopback` statement at the `[edit interfaces interface-name interface-type-options]` hierarchy level. The loopback setting configured for channel 0 applies to all channels on the channelized interface. The loopback statement is ignored if you include it at this hierarchy level in the configuration of other channels. To configure loopbacks on individual channels, you must include the `channel-type-options loopback` statement in the configuration for each channel. This allows each channel to be put in loopback mode independently.

For example, for DS-3 channels on a channelized OC-12 interface, the `sonet-options loopback` statement is supported only for channel 0; it is ignored if included in the configuration for channels 1 through 11. The SONET loopback configured for channel 0 applies to all 12 channels equally. To configure loopbacks on the individual DS-3 channels, you must include the `t3-options loopback` statement in the configuration for each channel. This allows each DS-3 channel can be put in loopback mode independently.

Configure T3 HDLC Payload Scrambling

T3 HDLC payload scrambling, which is disabled by default, provides better link stability. Both sides of a connection must either use or not use scrambling.

On a channelized OC-12 interface, the SONET `payload-scrambler` statement is ignored. To configure scrambling on the DS-3 channels on the interface, you can include the `t3-options payload-scrambler` statement at the `[edit interfaces interface-name t3-options]` hierarchy level for each DS-3 channel:

```
[edit interfaces interface-name t3-options]
payload-scrambler;
```

To explicitly disable HDLC payload scrambling, include the `no-payload-scrambler` statement at the `[edit interfaces interface-name t3-options]` hierarchy level:

```
[edit interfaces interface-name t3-options]
no-payload-scrambler;
```

To disable payload scrambling again (return to the default), delete the `payload-scrambler` statement from the configuration:

```
[edit]
user@host# delete interfaces t3-fpc/pic/port t3-options payload-scrambler
```

Configure the T3 Start End Flags

By default, a T3 interface waits two idle cycles between sending start and end flags. To configure the interface to share the transmission of start and end flags, include the `start-end-flag` statement at the [edit interfaces *interface-name* t3-options] hierarchy level, specifying the `shared` option.

```
[edit interfaces interface-name t3-options]
start-end-flag shared;
```

To explicitly configure the default of waiting two idle cycles between the start and end flags, include the `idle-cycle-flag` statement with the `filler` option:

```
[edit interfaces interface-name t3-options]
start-end-flag filler;
```

Examples: Configure T3 Interfaces

T3 interfaces can use PPP, Cisco HDLC, or Frame Relay encapsulation.

PPP Encapsulation on a DS-3 PIC

```
[edit]
interfaces {
  t3-fpc/pic/port {
    encapsulation ppp;
    t3-options {
      no-long-buildout;
      compatibility-mode larscom;
      payload-scrambler;
    }
    unit 0 {
      family inet {
        address 10.0.0.1/32 {
          destination 10.0.0.2;
        }
      }
      family iso;
    }
  }
}
```

**Cisco HDLC
Encapsulation on a
DS-3 PIC**

```
[edit]
interfaces {
  t3-fpc/pic/port {
    encapsulation cisco-hdlc;
    t3-options {
      no-long-buildout;
      compatibility-mode larscom;
      payload-scrambler;
    }
  }
  unit 0 {
    family inet {
      address 10.0.0.1/32 {
        destination 10.0.0.2;
      }
    }
    family iso;
  }
}
}
```

Configure Frame Relay encapsulation on two platforms, where one platform is a DTE device and the other is a DCE device:

On DTE Router

```
[edit]
interfaces {
  t3-fpc/pic/port {
    encapsulation frame-relay;
    t3-options {
      no-long-buildout;
      compatibility-mode larscom;
      payload-scrambler;
    }
  }
  unit 1 {
    dlci 1;
    family inet {
      address 10.0.0.1/32 {
        destination 10.0.0.2;
      }
    }
    family iso;
  }
  unit 2 {
    dlci 2;
    family inet {
      address 10.0.0.3/32 {
        destination 10.0.0.4;
      }
    }
    family iso;
  }
}
}
```

On DCE Router

```
[edit]
interfaces {
  t3-fpc/pic/port {
    dce;
    encapsulation frame-relay;
    t3-options {
      no-long-buildout;
      compatibility-mode larscom;
      payload-scrambler;
    }
    unit 1 {
      dlc1 1;
      family inet {
        address 10.0.0.2/32 {
          destination 10.0.0.1;
        }
      }
      family iso;
    }
    unit 2 {
      dlc1 2;
      family inet {
        address 10.0.0.4/32 {
          destination 10.0.0.3;
        }
      }
      family iso;
    }
  }
}
```

