

# CTP Series Circuit to Packet Platforms

## CTP150 Circuit to Packet Platform

### Quick Start Guide

February 2017  
Part Number: 530-033774  
Revision 02

This document describes how to install the Juniper Networks<sup>®</sup> CTP150 Circuit to Packet Platform.

#### Contents

CTP150 Platform Quick Start Description . . . . .	3
Step 1: Prepare the Site . . . . .	3
Before You Unpack the Platform . . . . .	3
Unpack the Platform . . . . .	3
Inspect the Components and Accessories . . . . .	4
If You Detect or Suspect Damage . . . . .	4
Step 2: Install the Platform . . . . .	4
Before You Begin Installation . . . . .	4
Option: Install the Platform in Freestanding Mode . . . . .	5
Option: Install the Platform in a Rack . . . . .	5
Step 3: Install Modules and Other Components . . . . .	5
Protect Modules and Slots . . . . .	6
Required Tools and Safety Items for Installation . . . . .	6
Safety Guidelines for Installing Modules . . . . .	6
Install an Interface Module . . . . .	7
Install CompactFlash Card and Replace Drive . . . . .	8
Step 4: Connect Cables . . . . .	9
Required Tools and Wires for Cabling . . . . .	9
Connect the Management Console . . . . .	9
Connect the Timing Port . . . . .	10
Connect the Serial Interface Module . . . . .	10
Connect the T1/E1 Interface Module . . . . .	10
Step 5: Access . . . . .	11
Console Access . . . . .	11
Direct Access . . . . .	12

HyperTerminal Access .....	12
SSH Access .....	13
Step 6: Power On .....	13
Safety Warnings .....	15
Compliance Statements .....	16
Federal Communications Commission (FCC) Statement .....	16
FCC Requirements for Consumer Products .....	17
Food and Drug Administration, Center for Devices and Radiological Health .....	17
Canadian Department of Communications Radio Interference Regulations .....	17
Industry Canada Notice CS-03 .....	17
DOC Explanatory Notes: Equipment Attachment Limitations .....	18
EC Declaration of Conformity .....	18
CTP Platform Documentation and Release Notes .....	19
Requesting Technical Support .....	20
Self-Help Online Tools and Resources .....	20
Opening a Case with JTAC .....	20
Revision History .....	21

---

## CTP150 Platform Quick Start Description

---

This Quick Start contains information you need to install and access the CTP150 platform. For complete installation instructions, see the *CTP150 Platform Hardware Documentation* at <http://www.juniper.net/techpubs/>.



**WARNING:** This Quick Start contains a summary of safety warnings in “[Safety Warnings](#)” on page 15. For a complete list of warnings for this router, including translations, see the *CTP150 Platform Hardware Documentation* at <http://www.juniper.net/techpubs/>.

Juniper Networks Circuit to Packet (CTP) products provide advanced technology and features required to reliably transport legacy time-division multiplexing (TDM) and other circuit-based applications across next-generation IP networks. CTP platforms create an IP packet flow from a serial data or analog voice connection at one end and provide the necessary processing to recreate the serial bit stream or analog signal from the received packet flow at the other end.

CTP platforms provide compact and lightweight chassis, high port density, and multiple Ethernet interfaces. Each CTP platform runs the CTP operating system (CTPOS) and can be managed by CTPView, a secure, Web-based management tool for provisioning, managing, running diagnostics, monitoring, and reporting on all CTP platform devices and circuits in the network.

### Step 1: Prepare the Site

---

- [Before You Unpack the Platform on page 3](#)
- [Unpack the Platform on page 3](#)
- [Inspect the Components and Accessories on page 4](#)
- [If You Detect or Suspect Damage on page 4](#)

#### Before You Unpack the Platform

Before you begin unpacking the platform, be sure you have the following tools:

- No. 2 Phillips screwdriver
- Utility knife
- Two people to assist in lifting

#### Unpack the Platform

Depending on the platform, it may be delivered boxed, bolted, and strapped to a skid. For your convenience, we recommend that you unpack the device in the location where you want to install it.

To unpack the device:

1. Cut the two straps that secure the carton to the skid, open the carton from the top, and remove the box of accessories that sits on top of the device.
2. Unlock the four plastic clips that hold the box to the skid by squeezing them in their center and pulling out, and then lift the carton off the device.
3. Remove the three screws that attach each of the two L-brackets to the device.
4. To avoid scratching the device when removing it from the skid, detach one of the L-brackets from the skid by removing the three screws.

## Inspect the Components and Accessories

After you remove the equipment from the shipping containers:

- Confirm the contents of each container.
- Inspect all external surfaces and external connectors for visible signs of damage.
- Inspect all accessories shipped with each unit.
- Document any damage noted during your inspection.
- Confirm that the device has the correct number and type of modules for your ordered configuration.

## If You Detect or Suspect Damage

If you detect or suspect damage to any equipment:

- Contact the shipper responsible for delivery, and formally report the damage.
- Contact your Juniper Networks sales representative or reseller.

## Step 2: Install the Platform

---

- [Before You Begin Installation on page 4](#)
- [Option: Install the Platform in Freestanding Mode on page 5](#)
- [Option: Install the Platform in a Rack on page 5](#)

## Before You Begin Installation

Before installing the device:

- Have a plan for installing the device that takes into consideration future expansion.
- Have the tools and accessories needed to complete the installation.
- Be sure that the space requirement of 3 feet (90 cm) behind the device or rack is met. Do not block air vents on the front or back of the router.

- Prepare the equipment racks by measuring and marking space for each device and plenum you plan to install.
- See the “[Safety Warnings](#)” on page 15

### Option: Install the Platform in Freestanding Mode

When installing the device on a table top or in any other freestanding mode, be sure to leave enough space around the device for adequate ventilation. Position the chassis with easy access to the connections that it needs for power, local communications, and remote communications.



**WARNING:** Two people are required to lift the device.



**CAUTION:** To prevent electrostatic damage to the device and its components, make sure persons handling the device wear an antistatic device.

### Option: Install the Platform in a Rack

To install the device in a rack, you need:

- Phillips screwdriver
- Four 10-32 x 3/8 Phillips screws for each device to be installed

To install the device in the rack:

1. With one person standing on the left side of the device and another standing on the right side, lift the device into the rack.
2. Position the device in its designated location in the equipment rack. Make sure the holes of the mounting brackets align evenly with the holes of the equipment rack on both sides.
3. Starting at the bottom of the device, have the second person secure the device in the equipment rack by using the 10-32 x 3/8 Phillips screws.

## Step 3: Install Modules and Other Components

- [Protect Modules and Slots](#) on page 6
- [Required Tools and Safety Items for Installation](#) on page 6
- [Safety Guidelines for Installing Modules](#) on page 6
- [Install an Interface Module](#) on page 7
- [Install CompactFlash Card and Replace Drive](#) on page 8

## Protect Modules and Slots

To protect the modules, other components, and slots when installing components, observe the following guidelines:



.....  
**CAUTION:** When handling components, use an antistatic wrist strap connected to one of the device's ESD grounding jacks, or to another grounding device. This action helps to protect the module from damage by electrostatic discharge.  
.....



.....  
**CAUTION:** Always handle a module by its edges. Do not touch the components, pins, leads, or solder connections.  
.....



.....  
**CAUTION:** If you meet strong resistance when attempting to seat a module using the ejectors, remove it from the chassis and confirm that the slot is designed to hold the module. Also, be sure that you have aligned the left and right edges in the correct matching module guides.  
.....



.....  
**CAUTION:** Be sure to cover every empty slot with a blank filler panel to protect the device from dust or other foreign substances and to ensure proper device cooling.  
.....



.....  
**CAUTION:** Do not discard the antistatic bag. When a module is not in use, store it in an antistatic bag.  
.....

## Required Tools and Safety Items for Installation

You need the following tools to install a CTP platform module:

- Phillips screwdriver
- Flathead screwdriver
- ESD wrist strap or other grounding device

## Safety Guidelines for Installing Modules

Before and during the installation process, observe the following warnings.



.....  
**WARNING:** Do not work on the device or connect or disconnect cables during lightning activity.  
.....



**WARNING:** Be sure circuit breakers for the power source are in the OFF position before attaching power cables.



**WARNING:** Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. Metal objects heat up when connected to power and ground and can cause serious burns or become welded to the terminals.



**WARNING:** Do not insert any metal object, such as a screwdriver, into an open slot or the midplane. Doing so can cause electric shock and serious burns.




**WARNING:** Never attempt to repair parts of modules yourself. Only trained customer service personnel are authorized to service parts. Call Juniper Networks Customer Service to make arrangements to return defective modules for repair.

## Install an Interface Module

The CTP150 platform has two possible interface modules, the serial or T1/E1 interface module that fit into the slots on the right side of the chassis (see [Figure 1 on page 7](#)).

**Figure 1: Interface Module Locations in the CTP150 Chassis**

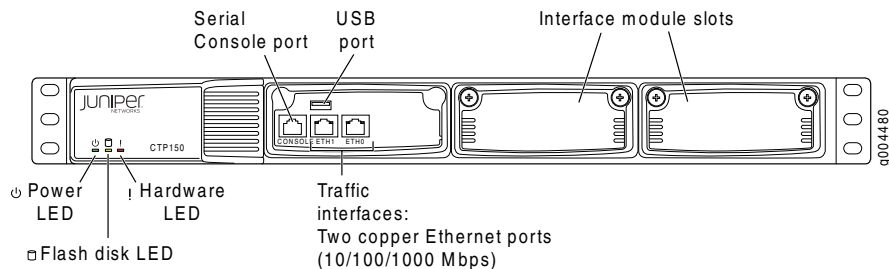

To install an interface module:

1. Ground yourself by using an antistatic wrist strap or other device, and connect it to one of the ESD grounding jacks, or to some other grounding device.
2. Choose the slot where you want to insert the module.
3. With a Phillips screwdriver, loosen the screws that secure the blank filler panel covering the empty chassis slot, if present, and remove the filler panel.
4. Remove the module from its antistatic bag, being careful not to touch module components, pins, leads, or solder connections.

5. Verify that the ejectors are in the open position (facing outward).
6. Guide the module into the chassis by placing it between the guides of the selected slot and pushing the module until it stops.

The module stops sliding when the ejectors make contact with the chassis.



**CAUTION:** If you meet strong resistance when attempting to seat the module using the ejectors, remove it from the chassis, and confirm that the slot is designed to hold the component. Also, be sure that you have aligned the left and right edges in the correct matching tracks.

7. Insert the module into the midplane by simultaneously pressing both ejectors inward and exerting forward pressure on the module. The small red release buttons should click into place.
8. Tighten the module's captive screws using a Phillips screwdriver.



**NOTE:** Tighten the captive screws completely before installing an adjacent module so that proper electromagnetic interference (EMI) gasket compression occurs. Failure to do this can make it difficult to install adjacent modules.


## Install CompactFlash Card and Replace Drive

The CTP150 model has a removable Type II CompactFlash card. The device should be powered off when you insert or remove the Flash drive. [Figure 2 on page 8](#) shows the Flash drive on the rear of the CTP150 chassis.



**CAUTION:** Although you can remove CompactFlash cards from a running device, we recommend that you do not do so. If you remove the card while data is being written to or copied from the CompactFlash card, data can be lost or corrupted. Therefore, we strongly recommend that you shut down the device before removing or inserting a CompactFlash card.

Figure 2: CTP150 Platform Flash Drive

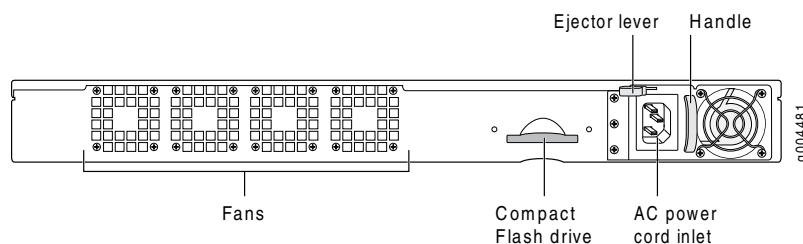



---

## Step 4: Connect Cables

---

- [Required Tools and Wires for Cabling on page 9](#)
- [Connect the Management Console on page 9](#)
- [Connect the Timing Port on page 10](#)
- [Connect the Serial Interface Module on page 10](#)
- [Connect the T1/E1 Interface Module on page 10](#)

### Required Tools and Wires for Cabling

Cabling your device takes only a few minutes. You need the following items for proper installation:

- 1/8-inch flathead screwdriver.
- 3/8-inch wrench or 3/8-inch nut-driver.
- No. 2 Phillips screwdriver.
- Ground wires—We recommend a minimum of 18-AWG ground wire for AC and DC-powered versions, if applicable.
- Two #10 keps nuts (supplied) to connect the ground (earth) wire to the ground terminal.
- Power module wiring—We recommend a minimum of 18-AWG wire for the device with a dual stud terminal lug with 5/8-inch spacing.

Consider the distance from the connection point and the configuration of the device when determining the size of wire used.

### Connect the Management Console

The **CONSOLE** port on the front of the chassis of the CTP150 platform is for management access (see [Figure 1 on page 7](#)). The 10/100Base-T Ethernet port accepts a male RJ-45 connector, providing an out-of-band connection for LAN access through an SSH session or SNMP.

The **CONSOLE** port is considered a data terminal equipment (DTE) interface. Direct connection to a terminal or PC (which also has a DTE interface) requires a crossover cable.

To connect the device to the network:

1. Insert an RJ-45 Ethernet cable connector into the **CONSOLE** port until it clicks into place.
2. Connect the other end of the cable to the appropriate Ethernet network for an out-of-band connection.

## Connect the Timing Port

The **CLK** port on either of the interface modules is for an external network clock reference interface. Only one clock interface is needed for the device:

- The serial interface module has an HD-26 CLK port (see [Figure 3 on page 10](#)).
- The T1/E1 interface module has an RJ-45 CLK port (see [Figure 4 on page 11](#)).

On the CLK port, differential clock signals are output on the pins 4 and 17 of the HD-26 connector. When an EIA-530A DCE-F serial cable (CTP150-CBL-DB25-DCE-F) is connected to the CLK port, the TT pins 24 and 11 of the DB25 connector output clock signals. If you configure a 32 kHz reference output, an RS-422 32 kHz clock signal is generated on the pins. Even if you disable the 32 kHz reference output and configure an external clock reference, the module expects an RS-422 clock input (of the configured frequency) on the same pins.

To connect the clock source input ports:


1. Attach the appropriate connector to the **CLK** port.
2. Attach the opposite end of the network timing cable to your network's clock source A.

## Connect the Serial Interface Module

The CTP150 platform serial interface module provides four HD-26 ports (see [Figure 3 on page 10](#)). To install the cable in a port:

1. Ground yourself by using an antistatic wrist strap or other device, and connect it to an ESD grounding jack, or to some other grounding device.
2. Slide the cable as far as you can into the module until it clicks into place.
3. Gently pull the cable to confirm that it is inserted correctly.

**Figure 3: CTP150 Platform Serial Interface Module**

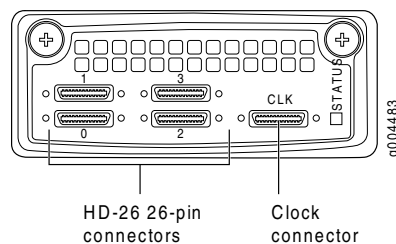


## Connect the T1/E1 Interface Module

The CTP150 platform T1/E1 interface module provides four RJ-45 connector ports (see [Figure 4 on page 11](#)). To install the cable in a port:

1. Ground yourself by using an antistatic wrist strap or other device, and connect it to an ESD grounding jack, or to some other grounding device.

2. Slide the cable as far as you can into the module until it clicks into place.
3. Gently pull the cable to confirm that it is inserted correctly.

**Figure 4: CTP150 Platform T1/E1 Interface Module**

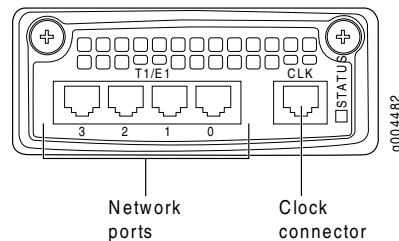

## Step 5: Access

- [Console Access on page 11](#)
- [Direct Access on page 12](#)
- [HyperTerminal Access on page 12](#)
- [SSH Access on page 13](#)

### Console Access

Before you power on the device, you must set up a management console. You use the console to communicate with the device during the power-on process, to set an IP address, and to manage the device using the command-line interface (CLI).

You can monitor and manage the device through either of these methods:

- **Console terminal**—Connect a console (PC, Macintosh, or UNIX workstation) directly to the device's serial **CONSOLE** port.

You can connect a console terminal (PC, Macintosh, or UNIX workstation) directly to the **CONSOLE** terminal port. When you connect a console directly to the device, you can configure the device without an IP address. To communicate with the device, you must have a terminal emulation program running on your PC or Macintosh. You can use any terminal emulation program, such as HyperTerminal. A UNIX workstation can use the emulator TIP.

- **Remote console**—Connect 10/100Base-T to the **CONSOLE** port to an Ethernet network, and run SSH from a remote console.

For initial access to the device, you need to physically connect your console directly to the device's RJ-45 port. Through this connection you use the CLI to set an IP address on the device. After you configure the IP address, you can access the device remotely (for example, through SSH).

## Direct Access

When you connect a console directly to the device, use the **CONSOLE** port on the RJ-45 connector. To connect a console directly to the device:

1. Connect the male RJ-45 connector to the **CONSOLE** port.
2. Connect the crossover adapter connector to your PC's serial port.
3. Power on the device.

When you power on the device, the CLI appears on your console's screen..



**NOTE:** Direct access through the **CONSOLE** serial port enables you to monitor the device while it boots.

## HyperTerminal Access

If your console uses a version of Microsoft Windows (such as Windows XP or Windows NT 4.0) that supports the HyperTerminal application, you can access the device through HyperTerminal.

1. Click the **Start** button and select **Programs->Accessories->Communications->HyperTerminal**.
2. In the HyperTerminal window, select **HyperTerminal**.
3. In the Connection Description dialog box, enter a name for your device in the Name field.
4. Select any icon to represent your terminal emulation, and click **OK**.
5. In the Connect To dialog box, in the Connect using field, select the appropriate COM port to use (for example, **COM1**), and click **OK**.
6. In the COM1 Properties dialog box, select the following settings:
  - Bits per second: 9600
  - Data bits: 8
  - Parity: None
  - Stop bits: 1
  - Flow control: Xon/Xoff
7. Click **OK**.

## SSH Access

When you have configured an IP address for the device, you can run SSH from a host to access the device through its Ethernet port. To connect the Ethernet port to the network:

1. Connect an Ethernet cable (RJ-45) to one of the two 10/100Base-T (RJ-45) ports on the front panel of the chassis.
2. Connect the other end of the cable to the appropriate Ethernet network for an out-of-band connection.



**CAUTION:** Do not change the IP address for the Ethernet interface that you are using to communicate with the device. If you change the address, you will lose the SSH session.

## Step 6: Power On



**CAUTION:** Evaluate the overall loading of the branch circuit before you install any equipment into a rack.

To power on the device:

1. Be sure that you have set up a management console.
2. Verify that the power source is operational.
3. Inspect all grounding and power connections to the device chassis.
4. Confirm that all cable connections are secure.
5. Monitor LEDs to verify that the device is booting properly.

The device goes through a boot process. When a prompt appears on the system console, the device is ready to be configured. If the system is new, the device boots to a first boot script. If the system is already operational, it boots to a login prompt.

The series of login prompts require the following settings:

1. Default username (**ctp**) and password (**ctp**). (We suggest that you change the root password after completing these steps.)
2. Supported protocol or protocols—(0) IPv4 only, (1) IPv6 only, or (2) IPv4 and IPv6. Enter the appropriate number value.
3. Default interface—From the list of available devices, such as **eth0** and **eth1** (or more), enter the one to be the default.
4. Hostname of the device.
5. IP address of the interface—Enter the IP address of the selected interface, or accept the loopback address (127.0.0.1) by default.

6. Netmask of the IP address—Enter the netmask (such as **255.255.255.128**), or accept 255.255.255.0 as the default.
7. Gateway IP address—Enter the IP address of the gateway, or accept the local address (127.0.0.1) as the default
8. Maximum transmission unit (MTU)—Enter the MTU in bytes, or accept 1500 bytes as the default.
9. Static routes added to the default interface, if any.
10. Date and time GMT (more precisely, UTC)—Enter these separately in digits for the month, day, hour, and minutes in Coordinated Universal Time (UTC), or accept the internal settings.

The device goes into startup mode.

For example:

```
...
***** Setting up the root password *****
Changing root's password!
Changing password for user root.
New password:
Retype new password:
BAD PASSWORD: it is too short
passwd: all authentication tokens updated successfully.
***** Setting up the network *****
Configure supported protocols:
0) IPv4 Only
1) IPv6 Only
2) IPv4 and IPv6
Please select your option (rtn for 0):
```

There are 4 ethernet devices available for use. The default device is the device through which the default gateway can be accessed.

Ctp circuits can run over any ethernet device, default or not. A default device must be configured, other devices may be configured and enabled, or disabled. Here is a list of the available devices and their descriptions:

```
eth0: 10/100/1000 Copper (front)
eth1: 10/100/1000 Copper (back)
eth2: 1000 Fiber (left)
eth3: 1000 Fiber (right)
```

What device would you like to make the IPV4 default device? (rtn for eth0): eth1  
OK, eth1 (10/100/1000 Copper (back)) will be configured as IPV4 default device.

Please input the hostname (return for (none)): nova\_54

```
==== Configuration for eth1 (default device):
Please input the ip (return for 127.0.0.1): 172.25.61.54
Please input the netmask (return for 255.255.255.0): 255.255.255.128
Please input the gateway (return for 127.0.0.1): 172.25.61.1
Please input the mtu in bytes (return for 1500):
```

Add route to interface eth1 [n]

```
=====
```

```

=== OS Security level set to LOW ===
=====

***** Setting up date/time *****
Setting the date (GMT). Please input the year [2008-2020] (return for 2010):

Setting the date (GMT). Please input the month [1-12] (return for 01):

Setting the date (GMT). Please input the day [1-31] (return for 11):

Setting the date (GMT). Please input the hour [0-23] (return for 20):

Setting the date (GMT). Please input the minute [0-59] (return for 22):

INIT: Entering runlevel: 3
Entering non-interactive startup
...

```

During initial power-on, the components of the platform run boot code, go through a series of self-diagnostic tests, and synchronize with each other.

When the tests are completed, use the LEDs on each module to determine the status of the device. Observe the module LEDs on the front or rear components.

## Safety Warnings

For your safety, before installing the device, review all safety warnings in this section.



**WARNING:** The recommended maximum ambient temperature is 40° C (104° F). For safe operation take into consideration the internal temperature within the rack.



**WARNING:** Install equipment in the rack from the bottom upward. Doing this helps maintain the stability of the rack and reduces the chance of the rack tipping over.



**WARNING:** Do not insert any metal object, such as a screwdriver, into an open slot or the backplane. Doing so can cause electric shock and serious burns.



**WARNING:** Connect the device or rack to ground (earth), and ensure that a reliable grounding path is maintained in the rack.



**WARNING:** Do not work on the device or connect or disconnect cables during lightning activity.



**WARNING:** Be sure that circuit breakers for the power source are in the OFF position before attaching power cables.



**WARNING:** Before servicing the device, turn off the power.



**WARNING:** Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. Metal objects heat up when connected to power and ground and can cause serious burns or become welded to the terminals.



**CAUTION:** Evaluate the overall loading of the branch circuit before you install any equipment into a rack.

---

## Compliance Statements

---

- [Federal Communications Commission \(FCC\) Statement on page 16](#)
- [FCC Requirements for Consumer Products on page 17](#)
- [Food and Drug Administration, Center for Devices and Radiological Health on page 17](#)
- [Canadian Department of Communications Radio Interference Regulations on page 17](#)
- [Industry Canada Notice CS-03 on page 17](#)
- [DOC Explanatory Notes: Equipment Attachment Limitations on page 18](#)
- [EC Declaration of Conformity on page 18](#)

### Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

This equipment is designed for use with properly shielded and terminated cables. Refer to the installation sections of this manual before operation.

Reference: CFR 47, Part 15J, Sect 15.105 April 18, 1989

**Caution:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## FCC Requirements for Consumer Products

This equipment complies with FCC rules, Part 68. On the back side of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.

If this equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice to give you an opportunity to maintain uninterrupted service.

If you experience trouble with this equipment, please contact the manufacturer for warranty/repair information. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

## Food and Drug Administration, Center for Devices and Radiological Health

This equipment complies with 21 CFR 1040.10 and 1040.11 for the safe use of lasers.

## Canadian Department of Communications Radio Interference Regulations

This Class B (or Class A, if so indicated on the registration label) digital apparatus meets the requirements of the Canadian Interference-Causing Equipment Regulations.

## Industry Canada Notice CS-03

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee that the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

**Notice:** The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

### DOC Explanatory Notes: Equipment Attachment Limitations

The Canadian Department of Communications label identifies certified equipment. This certification meets certain telecommunication network protective, operational and safety requirements. The department does not guarantee that the equipment will operate to the users satisfaction.

Before installing the equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above condition may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

### EC Declaration of Conformity

Figure 5 on page 19 shows the declaration of conformity for the CTP150 platform.

Figure 5: CTP150 Platform Declaration of Conformity



**Declaration of Conformity**  
**R&TTE Directive 1999/5/EC**  
**Low Voltage Directive 2006/95/EC**  
**EMC Directive 2004/108/EC**  
 according to EN 45014



**Juniper Networks, Inc.**  
 1194 N. Mathilda Ave  
 Sunnyvale, CA 94089 USA

declares under our sole responsibility that the product:

**CTP150**

is in conformity with the provisions of the Low Voltage Directive 2006/95/EC, EMC Directive 2004/108/EC and R&TTE Directive 1999/5/EC. The conformity has been assessed according to the procedure detailed in Annex II of the R&TTE Directive.

The following harmonized standards were applied:

<b>EMC</b>	<b>EN 300 386 v1.3.3: 2005</b>
	<b>EN 55022 Class A: 2006</b>
	<b>EN 55024 +A1+A2: 1998</b>
<b>Safety</b>	<b>EN 60950-1: 2001 1st Edition</b>

This product carries the CE Mark, which was first affixed in 2010.

Place  
 Sunnyvale, CA

Signature

Date  
 3/5/2010

**Kevin Kimma**  
**Compliance Manager**  
 1194 N. Mathilda Ave  
 Sunnyvale, CA 94089 USA

*DoC No: CTP150\_1*

## CTP Platform Documentation and Release Notes

For a list of related CTP platform documentation, see  
<http://www.juniper.net/techpubs/software/junos-jseries/index-main.html>.

If the information in the latest release notes differs from the information in the documentation, follow the *CTPOS Release Notes* and the *CTPView Server Release Notes*.

To obtain the most current version of all Juniper Networks<sup>®</sup> technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

## Requesting Technical Support

---

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the JTAC User Guide located at <http://www.juniper.net/customers/support/downloads/7100059-EN.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting support.html>.

## Revision History

---

February 2017—Revision 2

Copyright © 2017, Juniper Networks, Inc. All rights reserved.

Juniper Networks, the Juniper Networks logo, JUNOS, NetScreen, ScreenOS, and Steel-Belted Radius are registered trademarks of Juniper Networks, Inc. in the United States and other countries. JUNOSe is a trademark of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.