



Junos[®] OS for EX Series Ethernet Switches

Class of Service for EX Series Switches

Release

14.1X53



Published: 2014-12-18

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos[®] OS for EX Series Ethernet Switches Class of Service for EX Series Switches
Release 14.1X53
Copyright © 2014, Juniper Networks, Inc.
All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

About the Documentation	xiii
Documentation and Release Notes	xiii
Supported Platforms	xiii
Using the Examples in This Manual	xiii
Merging a Full Example	xiv
Merging a Snippet	xiv
Documentation Conventions	xv
Documentation Feedback	xvii
Requesting Technical Support	xvii
Self-Help Online Tools and Resources	xvii
Opening a Case with JTAC	xviii

Part 1

Chapter 1

Overview

CoS Overview	3
Junos OS CoS for EX Series Switches Overview	4
How Junos OS CoS Works	4
Default CoS Behavior on EX Series Switches	5
Understanding Junos OS CoS Components for EX Series Switches	6
Code-Point Aliases	6
Policers	6
Classifiers	6
Forwarding Classes	7
Tail Drop Profiles	7
Schedulers	7
Rewrite Rules	7
Understanding CoS Code-Point Aliases	8
Default Code-Point Aliases	8
Understanding CoS Classifiers	11
Behavior Aggregate Classifiers	11
Default Behavior Aggregate Classification	12
Multifield Classifiers	13
Understanding CoS Forwarding Classes	14
Default Forwarding Classes	14
Understanding CoS Tail Drop Profiles	17
Understanding CoS Schedulers	17
Default Schedulers	18
Excess Rate	18
Transmission Rate	19
Scheduler Buffer Size	19
Priority Scheduling	20

	Scheduler Drop-Profile Maps	20
	Scheduler Maps	21
	Understanding CoS Two-Color Marking	24
	Understanding CoS Rewrite Rules	25
	How Rewrite Rules Work	25
	Default Rewrite Rule	26
	Understanding Port Shaping and Queue Shaping for CoS on EX Series	
	Switches	27
	Port Shaping	27
	Queue Shaping	28
	Understanding Junos OS EZQoS for CoS Configurations on EX Series	
	Switches	28
	Understanding Using CoS with MPLS Networks on EX Series Switches	29
	EXP Classifiers and EXP rewrite Rules	29
	Guidelines for Using CoS Classifiers on CCCs	30
	Using CoS Classifiers with IP over MPLS	31
	Setting CoS Bits in an MPLS Header	31
	EXP Rewrite Rules	32
	Policer	33
	Schedulers	33
	Understanding CoS Queues on EX8200 Line Cards That Include Oversubscribed	
	Ports	34
	Oversubscribed Ports on Line Cards	34
	EX8200 Line Cards That Include Oversubscribed Ports	34
	Ingress Queueing	35
	Preclassification of Packets and Port Ingress Queueing	35
	Full Classification of Packets and Fabric Ingress Queueing	36
	Egress Queues	36
	Understanding Priority-Based Flow Control	37
	Reliability of Packet Delivery in Standard Ethernet Networks and in Layer 2	
	Networks	37
	Calculations for Buffer Requirements When Using PFC PAUSE	37
	How PFC and Congestion Notification Profiles Work With or Without	
	DCBX	38
	Understanding CoS Congestion Management	40
	Weighted Tail Drop Congestion Management	40
	Weighted Random Early Detection Congestion Management	41
	Segmented Drop Profile	41
	Interpolated Drop Profile	42
	Drop Profile Parameters	44
Part 2	Configuration	
Chapter 2	Configuration Examples	47
	Example: Configuring CoS on EX Series Switches	47
	Example: Combining CoS with MPLS on EX Series Switches	71
Chapter 3	Configuration Tasks	83
	Configuring CoS (J-Web Procedure)	84
	Defining CoS Code-Point Aliases (CLI Procedure)	85

Defining CoS Code-Point Aliases (J-Web Procedure)	85
Defining CoS Classifiers (CLI Procedure)	87
Defining CoS Classifiers (J-Web Procedure)	89
Defining CoS Forwarding Classes (CLI Procedure)	91
Defining CoS Forwarding Classes (J-Web Procedure)	91
Defining CoS Schedulers and Scheduler Maps (CLI Procedure)	93
Configuring a Scheduler and a Scheduler Map	93
Assigning a Scheduler Map to Interfaces	94
Assigning Scheduler Maps to Interfaces on EX8200 Line Cards That Include Oversubscribed Ports	94
Defining CoS Schedulers (J-Web Procedure)	95
Defining CoS Scheduler Maps (J-Web Procedure)	98
Configuring CoS Tail Drop Profiles (CLI Procedure)	100
Defining CoS Drop Profiles (J-Web Procedure)	100
Defining CoS Rewrite Rules (CLI Procedure)	102
Defining CoS Rewrite Rules (J-Web Procedure)	103
Assigning CoS Components to Interfaces (CLI Procedure)	106
Assigning CoS Components to Interfaces (J-Web Procedure)	106
Configuring Junos OS EZQoS for CoS (CLI Procedure)	108
Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure)	109
Configuring CoS	109
Configuring an LSP Policer	110
Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure)	111
Configuring CoS	111
Configuring an LSP Policer	112
Configuring CoS on Provider Switches of an MPLS Network (CLI Procedure)	113
Configuring MPLS on Provider Switches (CLI Procedure)	114
Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards (CLI Procedure)	115
Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure)	116
Configuring Shaping for CoS (CLI Procedure)	119
Configuring Port Shaping for CoS on an EX Series Switch	119
Configuring Queue Shaping for CoS on an EX Series Switch	119
Configuring CoS Congestion Management (CLI Procedure)	120
Configuring a Weighted Tail Drop Profile	121
Configuring a Weighted Random Early Detection Drop Profile	121
Chapter 4 Configuration Statements	123
[edit class-of-service] Configuration Statement Hierarchy on EX Series Switches	124
Supported Statements in the [edit class-of-service] Hierarchy Level	124
Unsupported Statements in the [edit class-of-service] Hierarchy Level	126
broadcast	127
buffer-size	128
class	129
class-of-service	130

classifiers	132
code-point (Congestion Notification)	133
code-point-aliases	133
code-points	134
congestion-notification-profile (Priority-Based Flow Control)	135
drop-probability (Fill Level)	136
drop-profile-map	136
dscp	137
dscp-ipv6	138
ethernet (CoS for Multidestination Traffic)	139
exp	140
family	141
forwarding-class	142
forwarding-classes	143
ieee-802.1	144
ieee-802.1 (Congestion Notification)	145
import	146
inet (CoS)	147
inet6 (CoS Multidestination)	147
inet-precedence	148
input (Congestion Notification)	149
interfaces	150
loss-priority (Classifiers and Rewrite Rules)	151
multi-destination	152
policing	153
priority (Schedulers)	154
protocol (Drop Profiles)	154
rewrite-rules	155
scheduler-map	156
scheduler-maps	157
schedulers (CoS)	158
shaping-rate	159
shared-buffer	160
transmit-rate (EX Series Switches)	161
tri-color (EX Series Switches)	162
unit	164

Part 3

Chapter 5

Administration

Routine Monitoring	167
Monitoring CoS Classifiers	167
Monitoring CoS Forwarding Classes	168
Monitoring Interfaces That Have CoS Components	170
Monitoring CoS Rewrite Rules	171
Monitoring CoS Scheduler Maps	172
Monitoring CoS Value Aliases	174
Monitoring CoS Drop Profiles	174

Chapter 6	Operational Commands	177
	show class-of-service	178
	show class-of-service classifier	183
	show class-of-service code-point-aliases	185
	show class-of-service drop-profile	187
	show class-of-service forwarding-class	190
	show class-of-service interface	192
	show pfe statistics traffic cpu	220
	show pfe statistics traffic egress-queues	224
	show pfe statistics traffic multicast	226
Part 4	Troubleshooting	
Chapter 7	Troubleshooting Procedures	233
	Troubleshooting CoS Schedulers on a 40-port SFP+ Line Card in an EX8200 Switch	233
	Troubleshooting a CoS Classifier Configuration for a TCAM Space Error	234

List of Figures

Part 1	Overview	
Chapter 1	CoS Overview	3
	Figure 1: Packet Flow Across the Network	5
	Figure 2: Graphical Representation of a Segmented Drop Profile	42
	Figure 3: Graphical Representation of an Interpolated Drop Profile on EX Series Switches Except EX4300 Switches	43
	Figure 4: Tail-Drop Profile Packet Drop on EX4300 Switches	44
Part 2	Configuration	
Chapter 2	Configuration Examples	47
	Figure 5: Topology for Configuring CoS	48

List of Tables

	About the Documentation	xiii
	Table 1: Notice Icons	xv
	Table 2: Text and Syntax Conventions	xv
Part 1	Overview	
Chapter 1	CoS Overview	3
	Table 3: Default Code-Point Aliases	8
	Table 4: Default BA Classification	12
	Table 5: Allowed BA Classification	12
	Table 6: Default Forwarding Classes for Unicast Traffic	15
	Table 7: Default Forwarding Classes for Multicast Traffic	15
	Table 8: Support for Scheduler Maps on Switches and Line Cards	21
	Table 9: Default Packet Header Rewrite Mappings	26
	Table 10: MPLS CoS Values	32
	Table 11: EX8200 Line Cards That Include Oversubscribed Ports	34
	Table 12: Input for PFC Congestion Notification Profile and Mapping to Traffic Class and Egress Queue	39
Part 2	Configuration	
Chapter 2	Configuration Examples	47
	Table 13: Configuration Components: VLANs	49
	Table 14: Configuration Components: Switch Ports on a 48-Port All-PoE Switch	49
	Table 15: CoS Configuration Components on the Ingress PE Switch	73
	Table 16: CoS Configuration Components of the Egress PE Switch	73
	Table 17: CoS Configuration Components of the Provider Switch	74
Chapter 3	Configuration Tasks	83
	Table 18: CoS Value Aliases Configuration Fields	86
	Table 19: BA-classifier Loss Priority Assignments	87
	Table 20: Classifiers Configuration Fields	89
	Table 21: Forwarding Classes Configuration Fields	92
	Table 22: Schedulers Configuration Page	96
	Table 23: Scheduler Maps Configuration Fields	99
	Table 24: Drop Profiles Configuration parameters	100
	Table 25: Rewrite Rules Configuration Page Summary	104
	Table 26: Assigning CoS Components to Logical Interfaces	107

Part 3	Administration	
Chapter 5	Routine Monitoring	167
	Table 27: Summary of Key CoS Classifier Output Fields	167
	Table 28: Summary of Key CoS Forwarding Class Output Fields	169
	Table 29: Summary of Key CoS Interfaces Output Fields	170
	Table 30: Summary of Key CoS Rewrite Rules Output Fields	171
	Table 31: Summary of Key CoS Scheduler Maps Output Fields	172
	Table 32: Summary of Key CoS Value Alias Output Fields	174
	Table 33: Summary of the Key Output Fields for CoS Red Drop Profiles	175
Chapter 6	Operational Commands	177
	Table 34: show class-of-service Output Fields	178
	Table 35: show class-of-service classifier Output Fields	183
	Table 36: show class-of-service code-point-aliases Output Fields	185
	Table 37: show class-of-service drop-profile Output Fields	187
	Table 38: show class-of-service forwarding-class Output Fields	190
	Table 39: show class-of-service interface Output Fields	193
	Table 40: show pfe statistics traffic cpu Output Fields	220
	Table 41: show pfe statistics traffic egress-queues Output Fields	224
	Table 42: show pfe statistics traffic multicast Output Fields	227

About the Documentation

- Documentation and Release Notes on page xiii
- Supported Platforms on page xiii
- Using the Examples in This Manual on page xiii
- Documentation Conventions on page xv
- Documentation Feedback on page xvii
- Requesting Technical Support on page xvii

Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

Supported Platforms

For the features described in this document, the following platforms are supported:

- EX Series

Using the Examples in This Manual

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

Documentation Conventions

Table 1 on page xv defines notice icons used in this guide.

Table 1: Notice Icons

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xv defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
Bold text like this	Represents text that you type.	To enter configuration mode, type the configure command: user@host> configure

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> show chassis alarms No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none">Introduces or emphasizes important new terms.Identifies guide names.Identifies RFC and Internet draft titles.	<ul style="list-style-type: none">A policy <i>term</i> is a named structure that defines match conditions and actions.<i>Junos OS CLI User Guide</i>RFC 1997, <i>BGP Communities Attribute</i>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name: [edit] root@# set system domain-name <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none">To configure a stub area, include the stub statement at the [edit protocols ospf area area-id] hierarchy level.The console port is labeled CONSOLE.
< > (angle brackets)	Encloses optional keywords or variables.	stub <default-metric metric>;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	broadcast multicast (string1 string2 string3)
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	rsvp { # Required for dynamic MPLS only
[] (square brackets)	Encloses a variable for which you can substitute one or more values.	community name members [<i>community-ids</i>]
Indentation and braces ({ })	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
Bold text like this	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none">In the Logical Interfaces box, select All Interfaces.To cancel the configuration, click Cancel.

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select Protocols>Ospf .

Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page at the Juniper Networks Technical Documentation site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <https://www.juniper.net/cgi-bin/docbugreport/>.
- E-mail—Send your comments to techpubs-comments@juniper.net. Include the document or topic name, URL or page number, and software version (if applicable).

Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>

- Download the latest versions of software and review release notes:
<http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications:
<http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum:
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

PART 1

Overview

- [CoS Overview on page 3](#)

CHAPTER 1

CoS Overview

- [Junos OS CoS for EX Series Switches Overview on page 4](#)
- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Understanding CoS Code-Point Aliases on page 8](#)
- [Understanding CoS Classifiers on page 11](#)
- [Understanding CoS Forwarding Classes on page 14](#)
- [Understanding CoS Tail Drop Profiles on page 17](#)
- [Understanding CoS Schedulers on page 17](#)
- [Understanding CoS Two-Color Marking on page 24](#)
- [Understanding CoS Rewrite Rules on page 25](#)
- [Understanding Port Shaping and Queue Shaping for CoS on EX Series Switches on page 27](#)
- [Understanding Junos OS EZQoS for CoS Configurations on EX Series Switches on page 28](#)
- [Understanding Using CoS with MPLS Networks on EX Series Switches on page 29](#)
- [Understanding CoS Queues on EX8200 Line Cards That Include Oversubscribed Ports on page 34](#)
- [Understanding Priority-Based Flow Control on page 37](#)
- [Understanding CoS Congestion Management on page 40](#)

Junos OS CoS for EX Series Switches Overview

When a network experiences congestion and delay, some packets must be dropped. Junos operating system (Junos OS) class of service (CoS) divides traffic into classes to which you can apply different levels of throughput and packet loss when congestion occurs. This allows packet loss to happen according to rules that you configure.

For interfaces that carry IPv4, IPv6, and MPLS traffic, you can configure Junos OS CoS features to provide multiple classes of service for different applications. CoS also allows you to rewrite the Differentiated Services code point (DSCP), IP precedence, 802.1p, or EXP CoS bits of packets egressing out of an interface, thus allowing you to tailor packets for the remote peers' network requirements. See [“Understanding Using CoS with MPLS Networks on EX Series Switches” on page 29](#) for more information about CoS for MPLS networks.

CoS provides multiple classes of service for different applications. You can configure multiple forwarding classes for transmitting packets, define which packets are placed into each output queue, and schedule the transmission service level for each queue.

In designing CoS applications, you must give careful consideration to your service needs and thoroughly plan and design your CoS configuration to ensure consistency and interoperability across all platforms in a CoS domain.

Because Juniper Networks EX Series Ethernet Switches implement CoS in hardware rather than in software, you can experiment with and deploy CoS features without affecting packet-forwarding and switching performance.



NOTE: CoS policies can be enabled or disabled on each interface of an EX Series switch. Also, each physical and logical interface on the switch can have custom CoS rules associated with it. When CoS is used in an MPLS network, there are some additional restrictions. See [“Understanding Using CoS with MPLS Networks on EX Series Switches” on page 29](#).

- [How Junos OS CoS Works on page 4](#)
- [Default CoS Behavior on EX Series Switches on page 5](#)

How Junos OS CoS Works

Junos OS CoS works by examining traffic entering at the edge of your network. The switches classify traffic into defined service groups to provide the special treatment of traffic across the network. For example, voice traffic can be sent across certain links, and data traffic can use other links. In addition, the data traffic streams can be serviced differently along the network path. As the traffic leaves the network at the far edge, you can rewrite the traffic to meet the policies of the targeted peer.


To support CoS, you must configure each switch in the network. Generally, each switch examines the packets that enter it to determine their CoS settings. These settings then dictate which packets are transmitted first to the next downstream switch. Switches at

the edges of the network might be required to alter the CoS settings of the packets that enter the network to classify the packets into the appropriate service groups.

Figure 1 on page 5 represents the network scenario of an enterprise. Switch A is receiving traffic from various network nodes such as desktop computers, servers, surveillance cameras, and VoIP telephones. As each packet enters, Switch A examines the packet's CoS settings and classifies the traffic into one of the groupings defined by the enterprise. This definition allows Switch A to prioritize resources for servicing the traffic streams it receives. Switch A might alter the CoS settings of the packets to better match the enterprise's traffic groups.

When Switch B receives the packets, it examines the CoS settings, determines the appropriate traffic groups, and processes the packets according to those settings. It then transmits the packets to Switch C, which performs the same actions. Switch D also examines the packets and determines the appropriate groups. Because Switch D sits at the far end of the network, it can rewrite the CoS bits of the packets before transmitting them.

Figure 1: Packet Flow Across the Network

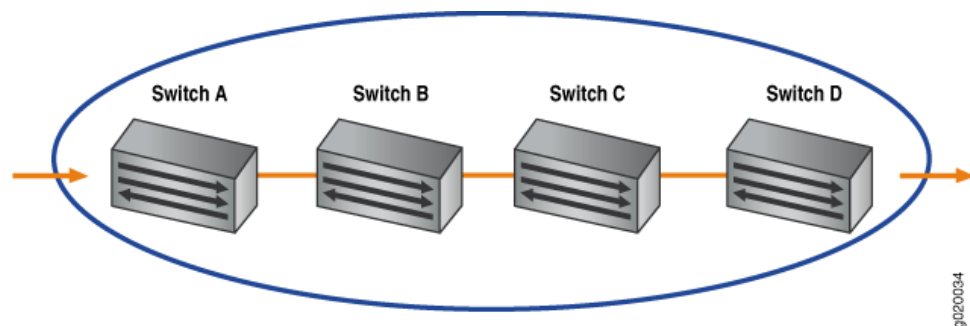

Default CoS Behavior on EX Series Switches

If you do not configure any CoS settings on the switch, the software performs some CoS functions to ensure that user traffic and protocol packets are forwarded with minimum delay when the network is experiencing congestion. Some CoS settings, such as classifiers, are automatically applied to each logical interface that you configure. Other settings, such as rewrite rules, are applied only if you explicitly associate them with an interface.

Related Documentation

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Understanding Junos OS EZQoS for CoS Configurations on EX Series Switches on page 28](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Example: Combining CoS with MPLS on EX Series Switches on page 71](#)

Understanding Junos OS CoS Components for EX Series Switches

This topic describes the Juniper Networks Junos operating system (Junos OS) class-of-service (CoS) components for Juniper Networks EX Series Ethernet Switches:

- [Code-Point Aliases on page 6](#)
- [Policers on page 6](#)
- [Classifiers on page 6](#)
- [Forwarding Classes on page 7](#)
- [Tail Drop Profiles on page 7](#)
- [Schedulers on page 7](#)
- [Rewrite Rules on page 7](#)

Code-Point Aliases

A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers, drop-profile maps, and rewrite rules.

Policers

Policers limit traffic of a certain class to a specified bandwidth and *burst size*. Packets exceeding the policer limits can be discarded. You define policers with filters that can be associated with input interfaces.

For more information about policers, see *Understanding the Use of Policers in Firewall Filters*.



NOTE: You can configure policers to discard packets that exceed the rate limits. If you want to configure CoS parameters such as **loss-priority** and **forwarding-class**, you must use firewall filters.

Classifiers

Packet classification associates incoming packets with a particular CoS servicing level. In Juniper Networks Junos operating system (Junos OS), *classifiers* associate packets with a forwarding class and loss priority and assign packets to output queues based on the associated forwarding class. Junos OS supports two general types of classifiers:

- Behavior aggregate or CoS value traffic classifiers—Examines the CoS value in the packet header. The value in this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP) value, IP precedence value, and IEEE 802.1p value.
- Multifield traffic classifiers—Examines multiple fields in the packet such as source and destination addresses and source and destination port numbers of the packet. With

multifield classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

Forwarding Classes

Forwarding classes group the packets for transmission. Based on forwarding classes, you assign packets to output queues. Forwarding classes affect the forwarding, scheduling, and marking policies applied to packets as they transit a switch. By default, four categories of forwarding classes are defined: best effort, assured forwarding, expedited forwarding, and network control. For EX Series switches, 16 forwarding classes are supported, providing granular classification capability.

Tail Drop Profiles

Drop profile is a mechanism that defines parameters that allow packets to be dropped from the network. Drop profiles define the meanings of the loss priorities. When you configure drop profiles you are essentially setting the value for queue fullness. The queue fullness represents a percentage of the queue used to store packets in relation to the total amount that has been allocated for that specific queue.

Loss priorities set the priority of dropping a packet. Loss priority affects the scheduling of a packet without affecting the packet's relative ordering. You can use the loss priority setting to identify packets that have experienced congestion. Typically you mark packets exceeding some service level with a high loss priority.

Schedulers

Each switch interface has multiple queues assigned to store packets. The switch determines which queue to service based on a particular method of scheduling. This process often involves determining which type of packet should be transmitted before another. You can define the priority, bandwidth, delay buffer size, and tail drop profiles to be applied to a particular queue for packet transmission.

A scheduler map associates a specified forwarding class with a scheduler configuration. You can associate up to four user-defined scheduler maps with the interfaces.

Rewrite Rules

A *rewrite rule* sets the appropriate CoS bits in the outgoing packet, thus allowing the next downstream device to classify the packet into the appropriate service group. Rewriting, or marking, outbound packets is useful when the switch is at the border of a network and must alter the CoS values to meet the policies of the targeted peer.



NOTE: Egress firewall filters can also assign forwarding class and loss priority so that the packets are rewritten based on forwarding class and loss priority.

Related Documentation

- [Understanding CoS Code-Point Aliases on page 8](#)
- [Understanding CoS Classifiers on page 11](#)
- [Understanding CoS Forwarding Classes on page 14](#)

- [Understanding CoS Tail Drop Profiles on page 17](#)
- [Understanding CoS Schedulers on page 17](#)
- [Understanding CoS Two-Color Marking on page 24](#)
- [Understanding CoS Rewrite Rules on page 25](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)

Understanding CoS Code-Point Aliases

A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers, drop-profile maps, and rewrite rules.

Behavior aggregate classifiers use class-of-service (CoS) values such as Differentiated Services code points (DSCPs), IP precedence, and IEEE 802.1p bits to associate incoming packets with a particular CoS servicing level. On a switch, you can assign a meaningful name or alias to the CoS values and use this alias instead of bits when configuring CoS components. These aliases are not part of the specifications but are well known through usage. For example, the alias for DSCP 101110 is widely accepted as ef (expedited forwarding).

When you configure classes and define classifiers, you can refer to the markers by alias names. You can configure user-defined classifiers in terms of alias names. If the value of an alias changes, it alters the behavior of any classifier that references it.

This topic covers:

- [Default Code-Point Aliases on page 8](#)

Default Code-Point Aliases

[Table 3 on page 8](#) shows the default mappings between the bit values and standard aliases.

Table 3: Default Code-Point Aliases

CoS Value Types	Mapping
DSCP CoS Values	
ef	101110
af11	001010
af12	001100
af13	001110
af21	010010

Table 3: Default Code-Point Aliases (*continued*)

CoS Value Types	Mapping
af22	010100
af23	010110
af31	011010
af32	011100
af33	011110
af41	100010
af42	100100
af43	100110
be	000000
cs1	001000
cs2	010000
cs3	011000
cs4	100000
cs5	101000
nc1/cs6	110000
nc2/cs7	111000
IEEE 802.1p CoS Values	
be	000
be1	001
ef	100
ef1	101
af11	010
af12	011
nc1/cs6	110

Table 3: Default Code-Point Aliases (*continued*)

CoS Value Types	Mapping
nc2/cs7	111
Legacy IP Precedence CoS Values	
be	000
be1	001
ef	010
ef1	011
af11	100
af12	101
nc1/cs6	110
nc2/cs7	111

**Related
Documentation**

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Defining CoS Code-Point Aliases \(CLI Procedure\) on page 85](#)
- [Defining CoS Code-Point Aliases \(J-Web Procedure\) on page 85](#)

Understanding CoS Classifiers

Packet classification associates incoming packets with a particular class-of-service (CoS) servicing level. Classifiers associate packets with a forwarding class and loss priority, and packets are associated to an output queue based on the forwarding class. You can define classifiers for IPv4 and IPv6 traffic to network interfaces, aggregated Ethernet interfaces (also known as link aggregation groups (LAGs)), routed VLAN interfaces (RVIs), Layer 3 interfaces, and Layer 3 VLAN-tagged sub-interfaces.

There are two general types of classifiers:

- Behavior aggregate (BA) classifiers
- Multifield (MF) classifiers

You can configure both a BA classifier and an MF classifier on an interface. If you do this, the BA classification is performed first and then the MF classification. If the two classification results conflict, the MF classification result overrides the BA classification result.

On Juniper Networks EX8200 Ethernet Switches, you can specify BA classifiers for bridged multdestination traffic and for IP multdestination traffic. A BA classifier for multicast packets is applied to all interfaces on the EX8200 switch.



NOTE: EX8200 switches implement the on-demand allocation of memory space for ternary content addressable memory (TCAM) so that when additional TCAM space is required for CoS classifiers, it is allocated from the free TCAM space or from the unused TCAM space. An error log message is generated when you configure CoS classifiers to use memory space that exceeds the available TCAM space that includes both the free and unused space.

This topic describes:

- [Behavior Aggregate Classifiers on page 11](#)
- [Multifield Classifiers on page 13](#)

Behavior Aggregate Classifiers

The behavior aggregate classifier maps packets to a forwarding class and a loss priority. The forwarding class determines the output queue for a packet. The loss priority is used by a scheduler to control packet discard during periods of congestion.

There are three types of BA classifiers:

- Differentiated Services Code Point (DSCP) for IP DiffServ
- IP precedence bits
- IEEE 802.1p CoS bits

BA classifiers are based on fixed-length fields, which makes them computationally more efficient than MF classifiers. Therefore core devices, which handle high traffic volumes, are normally configured to perform BA classification.

Default Behavior Aggregate Classification

Juniper Networks Junos operating system (Junos OS) automatically assigns implicit default BA classifiers to logical interfaces based on the type of interface.

[Table 4 on page 12](#) lists different types of interfaces and the corresponding implicit default BA classification.

Table 4: Default BA Classification

Type of Interface	Default BA Classification
Trunk and Circuit Cross-Connect (CCC) interfaces	ieee8021p-default NOTE: This BA classification for a CCC interface is applicable only for EX8200 switches.
Layer 3 interface (IPv4)	dscp-default
Layer 3 interface (IPv6)	dscp-ipv6-default
Access interface	Untrusted
Routed VLAN interface (RVI)	No default classification
MPLS	EXP NOTE: This BA classification is applicable only for EX8200 switches.

When you explicitly associate a BA classifier with a logical interface, you are overriding the implicit (default) BA classifier with an explicit BA classifier.

[Table 5 on page 12](#) describes the BA classifier types you can configure on Layer 2 and Layer 3 interfaces.

Table 5: Allowed BA Classification

Type of Interface	Allowed BA Classification
Layer 2 interface	IEEE 802.1p, IP precedence, DSCP, DSCP IPv6
Layer 3 interface (IPv4)	IEEE 802.1p, IP precedence, DSCP
Layer 3 interface (IPv6)	IEEE 802.1p, IP precedence, DSCP IPv6

You can configure all the allowed classifier types on the same logical interface or on different logical interfaces. If you need to apply all classifier rules on the same logical interface, configure the classifier rules allowed for both IPv4 and IPv6 on the logical interface.

If you have not explicitly configured a classifier on a logical interface, the default classifiers are assigned and classification works as follows:

- To a logical interface configured with an IPv4 address, a DSCP classifier is assigned by default, and IPv4 and IPv6 packets are classified using the DSCP classifier.
- To logical interface configured with an IPv6 address, a DSCP IPv6 classifier is assigned by default, and IPv4 and IPv6 packets are classified using the DSCP IPv6 classifier.



NOTE: On EX8200 switches, you can configure either one classifier of type DSCP or IEEE802.1p, or you can configure one classifier each of type DSCP and IEEE802.1p.

You can configure routed VLAN interfaces (RVIs) to classify packets. After you do this, the User Priority (UP) bits in the incoming packets are rewritten according to the default IEEE 802.1p rewrite rule, except on EX8200 switches. On EX8200 switches, you must explicitly assign the default IEEE 802.1p rewrite rule to RVIs.



NOTE: By default, all BA classifiers classify traffic into either the best-effort forwarding class or the network-control forwarding class.

Multifield Classifiers

Multifield classifiers examine multiple fields in a packet such as source and destination addresses and source and destination port numbers of the packet. With MF classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

MF classification is normally performed at the network edge because of the general lack of support for DSCP or IP precedence classifiers in end-user applications. On an edge switch, an MF classifier provides the filtering functionality that scans through a variety of packet fields to determine the forwarding class for a packet. Typically, any classifier performs matching operations on the selected fields against a configured value.

Related Documentation

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#)
- [Defining CoS Classifiers \(J-Web Procedure\) on page 89](#)

Understanding CoS Forwarding Classes

Class-of-Service (CoS) forwarding classes can be thought of as output queues. In effect, the result of classifying packets is the identification of an output queue for a particular packet. For a classifier to assign an output queue to a packet, it must associate the packet with one of the following forwarding classes:

- best-effort (be)—Provides no service profile. Loss priority is typically not carried in a CoS value.
- expedited-forwarding (ef)—Provides a low loss, low latency, low jitter, assured bandwidth, end-to-end service.
- assured-forwarding (af)—Provides a group of values you can define and includes four subclasses: AF1, AF2, AF3, and AF4, each with two drop probabilities: low and high.
- network-control (nc)—Supports protocol control and thus is typically high priority.
- multicast best-effort (mcast-be)—Provides no service profile for multicast packets.
- multicast expedited forwarding (mcast-ef)—Supports high-priority multicast packets.
- multicast assured-forwarding (mcast-af)—Provides two drop profiles; high, and low, for multicast packets.



NOTE: The forwarding classes multicast expedited-forwarding, multicast assured-forwarding, and multicast best-effort are applicable only to Juniper Networks EX8200 Ethernet Switches.

Juniper Networks EX Series Ethernet Switches support up to 16 forwarding classes, thus allowing granular packet classification. For example, you can configure multiple classes of expedited forwarding (EF) traffic such as EF, EF1, and EF2.

EX Series switches support up to eight output queues. Therefore, if you configure more than eight forwarding classes, you must map multiple forwarding classes to single output queues. On EX8200 Virtual Chassis, you can configure only eight forwarding classes and you can assign only one forwarding class to each output queue.



NOTE: On EX8200 Virtual Chassis, the queue number seven carries Virtual Chassis port (VCP) traffic and can also carry high-priority user traffic.

This topic describes:

- [Default Forwarding Classes on page 14](#)

Default Forwarding Classes

[Table 6 on page 15](#) shows the four default forwarding classes defined for unicast traffic, and [Table 7 on page 15](#) shows the three default forwarding classes defined for multicast traffic.



NOTE: The default forwarding classes for multicast traffic are applicable only to EX8200 switches.

You can rename the forwarding classes associated with the queues supported on your switch. Assigning a new class name to an output queue does not alter the default classification or scheduling that is applicable to that queue. However, because CoS configurations can be quite complicated, we recommend that you avoid altering the default class names or queue number associations.

Table 6: Default Forwarding Classes for Unicast Traffic

Forwarding Class Name	Comments
best-effort (be)	The software does not apply any special CoS handling to packets with 000000 in the DiffServ field. This is a backward compatibility feature. These packets are usually dropped under congested network conditions.
expedited-forwarding (ef)	The software delivers assured bandwidth, low loss, low delay, and low delay variation (jitter) end-to-end for packets in this service class. The software accepts excess traffic in this class, but in contrast to the assured forwarding class, the out-of-profile expedited-forwarding class packets can be forwarded out of sequence or dropped.
assured-forwarding (af)	<p>The software offers a high level of assurance that the packets are delivered as long as the packet flow from the customer stays within a certain service profile that you define.</p> <p>The software accepts excess traffic, but it applies a tail drop profile to determine that excess packets are dropped, and not forwarded.</p> <p>Two drop probabilities (low and high) are defined for this service class.</p>
network-control (nc)	<p>The software delivers packets in this service class with a high priority. (These packets are not delay-sensitive.)</p> <p>Typically, these packets represent routing protocol hello or keep alive messages. Because loss of these packets jeopardizes proper network operation, packet delay is preferable to packet discard for these packets.</p>

Table 7: Default Forwarding Classes for Multicast Traffic

Forwarding Class Name	Comments
multicast best-effort (mcast-be)	The software does not apply any special CoS handling to multicast packets. These packets are usually dropped under congested network conditions.
multicast expedited-forwarding (mcast-ef)	The software delivers assured bandwidth, low loss, low delay, and low delay variation (jitter) end-to-end for multicast packets in this service class. The software accepts excess traffic in this class, but in contrast to the multicast assured forwarding class, out-of-profile multicast expedited-forwarding class packets can be forwarded out of sequence or dropped.

Table 7: Default Forwarding Classes for Multicast Traffic (*continued*)

Forwarding Class Name	Comments
multicast assured-forwarding (mcast-af)	<p>The software offers a high level of assurance that the multicast packets are delivered as long as the packet flow from the customer stays within a certain service profile that you define.</p> <p>The software accepts excess traffic, but it applies a tail drop profile to determine if the excess packets are dropped and not forwarded.</p> <p>Two drop probabilities (low and high) are defined for this service class.</p>

The following rules govern queue assignment:

- CoS configurations that specify more queues than the switch can support are not accepted. If you commit such a configuration, the commit fails and a message displays that states the number of queues available.
- All default CoS configurations are based on queue number. The name of the forwarding class that is displayed in the default configuration for a queue number is that of the forwarding class currently associated with that queue.

**Related
Documentation**

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Example: Using CoS Forwarding Classes to Prioritize Snooped Packets in Heavy Network Traffic](#)
- [Defining CoS Forwarding Classes \(CLI Procedure\) on page 91](#)
- [Defining CoS Forwarding Classes \(J-Web Procedure\) on page 91](#)

Understanding CoS Tail Drop Profiles

Tail drop profile is a congestion management mechanism that allows switch to drop arriving packets when queue buffers become full or begin to overflow.

Tail drop profiles define the meanings of the loss priorities. When you configure tail drop profiles you are essentially setting the value for queue fullness. The queue fullness represents a percentage of the memory used to store packets in relation to the total amount that has been allocated for that specific queue.

The queue fullness defines the delay-buffer bandwidth, which provides packet buffer space to absorb burst traffic up to the specified duration of delay. Once the specified delay buffer becomes full, packets with 100 percent drop probability are dropped from the tail of the buffer.

You specify drop probabilities in the drop profile section of the CoS configuration hierarchy and reference them in each scheduler configuration.

By default, if you do not configure any drop profile, tail drop profile is in effect and functions as the primary mechanism for managing congestion. In the default tail drop profile, when the fill level is 0 percent, the drop probability is 0 percent. When the fill level is 100 percent, the drop probability is 100 percent.



NOTE: The default drop profile associated with the packets whose loss priority is low cannot be modified. You can configure custom drop profile only for those packets whose loss priority is high.

Related Documentation

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Configuring CoS Tail Drop Profiles \(CLI Procedure\) on page 100](#)

Understanding CoS Schedulers

You use class-of-service (CoS) schedulers to define the properties of output queues on Juniper Networks EX Series Ethernet Switches. These properties include the amount of interface bandwidth assigned to the queue, the size of the memory buffer allocated for storing packets, the priority of the queue, and the drop profiles associated with the queue.

You associate the schedulers with forwarding classes by means of scheduler maps. You can then associate each scheduler map with an interface, thereby configuring the queues, packet schedulers, and tail drop processes that operate according to this mapping.

This topic describes:

- [Default Schedulers on page 18](#)
- [Excess Rate on page 18](#)

- [Transmission Rate on page 19](#)
- [Scheduler Buffer Size on page 19](#)
- [Priority Scheduling on page 20](#)
- [Scheduler Drop-Profile Maps on page 20](#)
- [Scheduler Maps on page 21](#)

Default Schedulers

Each forwarding class has an associated scheduler priority. On EX Series switches other than Juniper Networks EX8200 and Juniper Networks EX4300 Ethernet Switches, only two forwarding classes—best-effort (queue 0) and network-control (queue 7)—are used in the default configuration. On EX8200 switches three forwarding classes—best-effort (queue 0), multicast best-effort (queue 2), and network-control (queue 7)—are used in the default configuration.

On EX Series switches other than EX8200 and EX4300 switches, by default, the best-effort forwarding class (queue 0) receives 95 percent of the bandwidth and the buffer space for the output link, and the network-control forwarding class (queue 7) receives 5 percent. The default drop profile causes the buffer to fill completely and then to discard all incoming packets until it has free space. On EX8200 switches, by default, the best-effort forwarding class (queue 0) receives 75 percent of the bandwidth, the multicast best-effort forwarding class (queue 2) receives 20 percent, and the network-control forwarding class (queue 7) receives 5 percent of the bandwidth and buffer space for the output link.

On EX4300 switches, four forwarding classes—best-effort (queue 0), multicast best-effort (queue 8), network-control (queue 3), and multicast network-control (queue 11)—are used in the default configuration. By default, all the multicast traffic flows through the multicast best-effort queue. EX4300 switches support 12 queues (0–11), and the default scheduler transmission rates for queues 0 through 11 are 75, 0, 0, 5, 0, 0, 0, 0, 15, 0, 0 and 5 percent, respectively, of the total available bandwidth.

On EX Series switches other than EX4300 switches, the expedited-forwarding (queue 5) and assured-forwarding (queue 1) classes have no scheduler because no resources are assigned to queue 5 or queue 1, by default. However, you can manually configure resources to be assigned to the expedited-forwarding and assured-forwarding classes. On EX4300 switches, the expedited-forwarding (queue 1) and assured-forwarding (queue 2) classes have no scheduler because no resources are assigned to queue 1 or queue 2, by default. However, you can manually configure resources to be assigned to the expedited-forwarding and assured-forwarding classes.

Also by default, any queue can exceed the assigned bandwidth if additional bandwidth is available from other queues. When a forwarding class does not fully use the allocated transmission bandwidth, the remaining bandwidth can be used by other forwarding classes if they have a traffic load that exceeds their allocated bandwidth.

Excess Rate

Excess rate traffic determines the percentage of the excess bandwidth to share when a queue receives traffic in excess of its bandwidth allocation. By default, the excess

bandwidth is shared in the ratio of the transmit rates. You can control this distribution by configuring the **excess-rate** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy. You can specify the excess rate sharing in percentage.

Transmission Rate

Transmission-rate control determines the actual traffic bandwidth for each forwarding class you configure. The transmission rate is specified in bits per second. Each queue is allocated some portion of the bandwidth of the interface. This bandwidth can be a fixed value, such as 1 megabit per second (Mbps), a percentage of the total available bandwidth, or the rest of the available bandwidth. In case of congestion, the configured transmission rate is guaranteed for the queue. Transmission-rate control allows you to ensure that each queue receives the bandwidth appropriate for its level of service.

Scheduler Buffer Size

To control congestion at the output stage, you can configure the delay-buffer bandwidth by using the **buffer-size** configuration statement. The delay-buffer bandwidth provides packet buffer space to absorb burst traffic up to the specified duration of delay. When the specified delay buffer becomes full, packets with 100 percent drop probability are dropped from the tail of the buffer.

On EX Series switches other than EX8200 and EX4300 switches, the default scheduler transmission rates for queues 0 through 7 are 95, 0, 0, 0, 0, 0, 0, and 5 percent, respectively, of the total available bandwidth. The default buffer-size percentages for queues 0 through 7 are 95, 0, 0, 0, 0, 0, 0, and 5 percent, respectively, of the total available buffer. On EX8200 switches, the default scheduler transmission rates for queues 0 through 7 are 75, 0, 20, 0, 0, 0, 0, and 5 percent, respectively, of the total available bandwidth, and the default buffer-size percentages for queues 0 through 7 are 75, 0, 20, 0, 0, 0, 0, and 5 percent, respectively, of the total available buffer. On EX4300 switches, the default scheduler transmission rates for queues 0 through 11 are 75, 0, 0, 5, 0, 0, 0, 0, 15, 0, 0 and 5 percent, respectively, of the total available buffer. On EX4300 switches, the default buffer-size percentages for queues 0 through 11 are 75, 0, 0, 5, 0, 0, 0, 0, 15, 0, 0 and 5 percent, respectively, of the total available buffer.

For each scheduler on EX Series switches other than EX8200 switches, you can configure the buffer size as one of the following:

- The exact buffer size.
- A percentage of the total buffer.
- The remaining buffer available. The remainder is the buffer percentage that is not assigned to other queues. For example, if you assign 40 percent of the delay buffer to queue 0, allow queue 2 to keep the default allotment of 20 percent, allow queue 7 to keep the default allotment of 5 percent, and assign the remainder to queue 3, then queue 3 uses 35 percent of the delay buffer.

On EX8200 switches, you can configure the buffer size as a temporal value (in microseconds), percentage of the total buffer, or the remaining buffer available. You can configure the buffer size as a temporal value on Juniper Networks EX4200 and EX4300 Ethernet Switches also.

When you configure buffer size as a temporal value on EX4200 switches, if sufficient buffer size is not available in the shared pool, an error message is logged in the system log (syslog) file and the default profile is applied to the interface. After the temporal buffer space is allocated successfully, if the shared buffer size is less than the current value (which was set using the **set class-of-service shared-buffer percent value** command), the new reduced value must be greater than a sum of the existing reserved temporal buffer size and the required minimum buffer size. Otherwise, the modification to the shared-buffer configuration fails and an error message is logged in the system log.

Priority Scheduling

Priority scheduling determines the order in which an interface transmits traffic from queues, thus ensuring that queues containing important traffic are provided faster access.

Priority scheduling is accomplished through a procedure in which the scheduler examines the priority of the queue. Juniper Networks Junos operating system (Junos OS) supports two levels of transmission priority:

- **Low**—The scheduler determines whether the individual queue is within its defined bandwidth profile or not. This binary decision, which is re-evaluated on a regular time cycle, involves comparing the amount of data transmitted by the queue against the bandwidth allocated to it by the scheduler. If the transmitted amount is less than the allocated amount, the queue is considered to be in profile. A queue is out of profile when the amount of traffic that it transmits is larger than the queue's allocated limit. An out-of-profile queue is transmitted only if bandwidth is available. Otherwise, it is buffered.

On EX Series switches other than EX4300 switches, a queue from a set of queues is selected based on the shaped deficit weighted round robin (SDWRR) algorithm, which operates within the set. On EX4300 switches, the weighted deficit round-robin (WDRR) algorithm is used to select a queue from a set of queues.

- **Strict-high**—A strict-high priority queue receives preferential treatment over a low-priority queue. Unlimited bandwidth is assigned to a strict-high priority queue. On EX Series switches other than EX4300 switches, queues are scheduled according to the queue number, starting with the highest queue, 7, with decreasing priority down through queue 0. Traffic in higher-numbered queues is always scheduled prior to traffic in lower-numbered queues. In other words, if there are two high-priority queues, the queue with the higher queue number is processed first. On EX4300 switches, you can configure multiple strict-high priority queues on an interface and an EX4300 switch processes these queues in a round-robin method.

Packets in low-priority queues are transmitted only when strict-high priority queues are empty.

Scheduler Drop-Profile Maps

Drop-profile maps associate drop profiles with a scheduler. A drop-profile map sets the drop profile for a specific packet loss priority (PLP) and protocol type. The inputs for a drop-profile map are the PLP and the protocol type. The output is the drop profile.

Scheduler Maps

A scheduler map associates a specified forwarding class with a scheduler configuration. After configuring a scheduler, you must include it in a scheduler map and then associate the scheduler map with an output interface.

On EX Series switches, if you configure more than the supported number of scheduler maps on a switch or for a port group in a line card, an error is logged in the system log. On any interface in a port group on a line card or on a switch, if you configure a scheduler map that causes the number of scheduler maps for that port group to exceed the maximum number supported, the default scheduler map is bound to that interface. We recommend that you check the system log for errors after the commit operation to verify that you have not configured more than the maximum permitted number of scheduler maps.



NOTE: On EX Series switches, you cannot configure a scheduler map on an individual interface that is a member of a link aggregation group (LAG). Instead, you must configure the scheduler map on the LAG itself (that is, on the aggregated Ethernet (ae) interface).

Table 8 on page 21 shows the number of scheduler maps supported for each port group in a switch or line card.

Table 8: Support for Scheduler Maps on Switches and Line Cards

Switch/Line Card	Number of Port Groups	Port Grouping Details	Number of Scheduler Maps Supported for Each Port Group
EX2200-C-12T and EX2200-C-12P switches	1	Port 0–11 and 2 uplink ports form a port group.	6
EX2200-24T and EX2200-24P switches	1	Ports 0–23 and 4 SFP uplink ports form a port group.	5
EX2200-48T and EX2200-48P switches	2	<ul style="list-style-type: none"> Ports 0–23 and SFP uplink ports 0 and 1 form a port group. Ports 24–47 and SFP uplink ports 2 and 3 form a port group. 	5
EX3200-24T and EX3200-24P switches	1	<ul style="list-style-type: none"> Ports 0–23 and the uplink ports form a port group. <p>NOTE: Uplink ports include 2 SFP+ or XFP uplink ports, or 4 SFP uplink ports.</p>	4

Table 8: Support for Scheduler Maps on Switches and Line Cards (*continued*)

Switch/Line Card	Number of Port Groups	Port Grouping Details	Number of Scheduler Maps Supported for Each Port Group
EX3200-24T and EX3200-24P switches	1	<ul style="list-style-type: none"> Ports 0–23 and the uplink ports form a port group. <p>NOTE: Uplink ports include 2 SFP+ or XFP uplink ports or 4 SFP uplink ports.</p>	4
EX3200-48T and EX3200-48P switches	2	<ul style="list-style-type: none"> Ports 0–23 and 1 SFP+ or XFP uplink port or 4 SFP uplink ports form a port group. Ports 24–47 and 1 SFP+ or XFP uplink port form a port group. 	4
EX4200-48T and EX4200-48P switches	3	<ul style="list-style-type: none"> Ports 0–23 form a port group. Ports 24–47 form a port group. 2 SFP+ or XFP uplink ports or 4 SFP uplink ports form a port group. 	4
EX4200-24T and EX4200-24P switches	2	<ul style="list-style-type: none"> Ports 0–23 form a port group. 2 SFP+ or XFP uplink ports or 4 SFP uplink ports form a port group. 	4
EX4300-24T and EX4300-24P switches	1	<ul style="list-style-type: none"> Ports 0–23 ports, 4 uplink ports, and 4 ports on the rear panel form a port group. <p>NOTE: Uplink ports in the front panel contains SFP or SFP+ ports 0–3, and uplink ports in the rear panel contains QSFP+ ports 0–3.</p>	64
EX4300-48T and EX4300-48P switches	1	<ul style="list-style-type: none"> Ports 0–47, 4 uplink ports, and 4 ports on the rear panel form a port group. <p>NOTE: Uplink ports in the front panel contains SFP or SFP+ ports 0–3, and uplink ports in the rear panel contains QSFP+ ports 0–3.</p>	64
EX4500-40F switch	2	<ul style="list-style-type: none"> SFP or SFP+ ports 0–19 and the first SFP or SFP+ port 0–4 form a port group. SFP or SFP+ ports 20–39 and the second SFP or SFP+ uplink port 0–4 form a port group. 	4

Table 8: Support for Scheduler Maps on Switches and Line Cards (*continued*)

Switch/Line Card	Number of Port Groups	Port Grouping Details	Number of Scheduler Maps Supported for Each Port Group
EX4550-32F switch	1	<ul style="list-style-type: none"> SFP or SFP+ ports 0–31 and the uplink ports in the front and rear panels form a port group. <p>NOTE: Uplink ports in the front panel contains SFP, SFP+, or RJ-45 ports 0–7, and uplink ports in the rear panel contains SFP, SFP+, or RJ-45 ports 0–7.</p>	5
EX6200-48T (48-port RJ-45) and EX6200-48P (48-port PoE+) line cards	2	<ul style="list-style-type: none"> Ports 0–23 form a port group. Ports 24–47 form a port group. 	5
EX6200-SRE64-4XS	1	SFP+ ports 0–3 form a port group.	4
EX8200-8XS (8-port SFP+) line card	4	<ul style="list-style-type: none"> SFP+ ports 0 and 1 form a port group. SFP+ ports 2 and 3 form a port group. SFP+ ports 4 and 5 form a port group. SFP+ ports 6 and 7 form a port group. 	6
EX8200-40XS (40-port SFP+) line card	8	<ul style="list-style-type: none"> SFP+ ports 0–4 form a port group. SFP+ ports 5–9 form a port group. SFP+ ports 10–14 form a port group. SFP+ ports 15–19 form a port group. SFP+ ports 20–24 form a port group. SFP+ ports 25–29 form a port group. SFP+ ports 30–34 form a port group. SFP+ ports 35–39 form a port group. 	6
EX8200-48-F (48-port SFP) and EX8200-48T (48-port RJ-45) line cards	2	<ul style="list-style-type: none"> SFP or RJ-45 ports 0–23 form a port group. SFP or RJ-45 ports 24–47 form a port group. 	6

Table 8: Support for Scheduler Maps on Switches and Line Cards (*continued*)

Switch/Line Card	Number of Port Groups	Port Grouping Details	Number of Scheduler Maps Supported for Each Port Group
EX8200-2XS-40P (40-port PoE+ with 4-port SFP and 2-port SFP+) line card	3	<ul style="list-style-type: none"> Ports 0–19 and SFP ports 0 and 1 form a port group. Ports 20–39 and SFP ports 2 and 3 form a port group. 	5
		<ul style="list-style-type: none"> 2 SFP+ ports form a port group. 	6
EX8200-2XS-40T (40-port RJ-45 with 4-port SFP and 2-port SFP+) line card	3	<ul style="list-style-type: none"> Ports 0–19, and SFP ports 0 and 1 form a port group. Ports 20–39 and SFP ports 2 and 3 form a port group. 	5
		<ul style="list-style-type: none"> 2 SFP+ ports form a port group. 	6
EX8200-48PL (48-port PoE+ 20 Gbps) and EX8200-48TL (48-port RJ-45 20 Gbps) line cards	2	<ul style="list-style-type: none"> PoE+ or RJ-45 ports 0–23 form a port group. PoE+ or RJ-45 ports 24–47 form a port group. 	5

- Related Documentation**
- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
 - [Example: Configuring CoS on EX Series Switches on page 47](#)
 - [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)
 - [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)

Understanding CoS Two-Color Marking

Networks police traffic by limiting the input or output transmission rate of a class of traffic on the basis of user-defined criteria. Policing traffic allows you to control the maximum rate of traffic sent or received on an interface and to partition a network into multiple priority levels or classes of service.

Policers require you to apply limits to the traffic flow and set a consequence for packets that exceed these limits—usually a higher loss priority, so that packets exceeding the policer limits are discarded first.

Juniper Networks EX Series Ethernet Switches support a single-rate two-color marking type of policer, which is a simplified version of Single-Rate-Three-Color marking, defined in RFC 2697, *A Single Rate Three Color Marker*. This type of policer meters traffic based on the configured committed information rate (CIR) and committed burst size (CBS).

The single-rate two-color marker meters traffic and marks incoming packets depending on whether they are smaller than the committed burst size (CBS)—marked green—or exceed it—marked red.

The single-rate two-color marking policer operates in color-blind mode. In this mode, the policer's actions are not affected by any previous marking or metering of the examined packets. In other words, the policer is “blind” to any previous coloring a packet might have had.

**Related
Documentation**

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Understanding the Use of Policers in Firewall Filters](#)
- [Configuring Policers to Control Traffic Rates \(CLI Procedure\)](#)

Understanding CoS Rewrite Rules

As packets enter or exit a network, edge switches might be required to alter the class-of-service (CoS) settings of the packets. This topic describes how to use rewrite rules to alter the CoS settings. It covers:

This topic covers:

- [How Rewrite Rules Work on page 25](#)
- [Default Rewrite Rule on page 26](#)

How Rewrite Rules Work

Rewrite rules set the value of the CoS bits within a packet's header. Each rewrite rule reads the current forwarding class and loss priority associated with the packet, locates the chosen CoS value from a table, and writes this CoS value into the packet header. For rewrites to occur, rewrite rules must be explicitly assigned to an interface.

On EX Series switches, you can define rewrite rules for IPv4 and IPv6 traffic to network interfaces, aggregated Ethernet interfaces (also known as link aggregation groups (LAGs)), routed VLAN interfaces (RVIs), Layer 3 interfaces, and Layer 3 VLAN-tagged sub-interfaces. Multiple rewrite rules of different types can be assigned to a single interface.

On EX4300 switches, you cannot configure separate DSCPv4 and DSCPv6 rewrite rules on network interfaces, aggregated Ethernet interfaces, Layer 3 interfaces, and integrated routing and bridging (IRB) interfaces. If you configure a DSCPv4 rewrite rule on an interface to rewrite IPv4 traffic, then the same rewrite rule is applied to IPv6 traffic also on that interface, and vice versa. You can define only DSCPv4 rewrite rules on integrated routing and bridging (IRB) interfaces and Layer 3 VLAN-tagged logical interfaces.

In effect, the rewrite rule performs the reverse function of the behavior aggregate (BA) classifier, which is used when the packet enters the switch. As the packet leaves the switch, the final CoS action is generally the application of a rewrite rule.

You configure rewrite rules to alter CoS values in outgoing packets on the outbound interfaces of an edge switch to meet the policies of a targeted peer. This allows the

downstream switch in a neighboring network to classify each packet into the appropriate service group.



NOTE: When an IP precedence rewrite rule is active, bits 3, 4, and 5 of the type-of-service (ToS) byte are always reset to zero when code points are rewritten.

Default Rewrite Rule

To define a rewrite rule on an interface, you can either create your own rewrite rule and enable it on the interface or enable a default rewrite rule. See [“Defining CoS Rewrite Rules \(CLI Procedure\)” on page 102](#).

[Table 9 on page 26](#) shows the default rewrite-rule mappings. These are based on the default bit definitions of Differentiated Services code point (DSCP), IEEE 802.1p, and IP precedence values and the default forwarding classes. You can configure multiple CoS rewrite rules for DSCP, IP precedence and IEEE 802.1p.



NOTE: By default, rewrite rules are not assigned to an interface. You must explicitly assign a user-defined or system-defined rewrite rule to an interface for the rewrites to occur.

When the CoS values of a packet match the forwarding class and packet-loss-priority (PLP) values, the switch rewrites markings on the packet based on the rewrite table.

Table 9: Default Packet Header Rewrite Mappings

Map from Forwarding Class	PLP Value	Map to DSCP/IEEE 802.1p/IP Precedence Value
expedited-forwarding	low	ef
expedited-forwarding	high	ef
assured-forwarding	low	af11
assured-forwarding	high	af12 (DSCP)
best-effort	low	be
best-effort	high	be
network-control	low	nc1/cs6
network-control	high	nc2/cs7

- Related Documentation**
- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
 - [Example: Configuring CoS on EX Series Switches on page 47](#)
 - [Defining CoS Rewrite Rules \(CLI Procedure\) on page 102](#)
 - [Defining CoS Rewrite Rules \(J-Web Procedure\) on page 103](#)

Understanding Port Shaping and Queue Shaping for CoS on EX Series Switches

When the amount of traffic on a switch's network exceeds the maximum bandwidth, packets are lost because of congestion in the network. The excess traffic in the network must be handled carefully to ensure minimum or no data loss in the network. A class-of-service (CoS) configuration includes several parameters that classify traffic into different queues and also define packet loss priorities (PLPs) to ensure smooth transmission of data in the network. You can use these configuration parameters to control or shape traffic for a specific port on a switch or for a specific CoS queue. While port shaping defines the maximum bandwidth allocated to an interface, queue shaping defines a limit on excess-bandwidth usage for each queue.

This topic covers:

- [Port Shaping on page 27](#)
- [Queue Shaping on page 28](#)

Port Shaping

Port shaping enables you to shape the aggregate traffic through a port or channel to a rate that is less than the line rate. You can configure interfaces to shape traffic based on the rate-limited bandwidth of the total interface bandwidth. This allows you to shape the output of the interface so that the interface transmits less traffic than it is capable of transmitting. For port shaping, you can specify shaping rate as the peak rate at which traffic can pass through the interface. You can specify rate as a value in bits per second (bps) either as a decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000) and the value can range from 1000 through 160,000,000,000 bps.

By default, shaping is not configured on an interface. If you do not configure a shaping rate on an interface, the default shaping rate is 100 percent, which is the equivalent to no shaping configured for that interface.

On EX Series switches except EX4300 switches, when you configure a shaping rate on an aggregated Ethernet (ae) interface, all members of the ae interface are shaped at the configured shaping rate. For example, consider an interface ae0 that consists of three interfaces: ge-0/0/0, ge-0/0/1, and ge-0/0/2. If a shaping rate of X Mbps is configured on ae0, traffic at the rate of X Mbps flows through each of the three interfaces. Therefore, the total traffic flowing through ae0 would be at the rate of 3X Mbps. On EX4300 switches, when you configure a shaping rate on an ae interface, the traffic is equally divided among the members of the ae interface.

Queue Shaping

Queue shaping throttles the rate at which queues transmit packets. For example, using queue shaping, you can rate-limit a strict-priority queue so that the strict-priority queue does not lock out (or starve) low-priority queues. Similarly, for any queue, you can configure queue shaping.

You can specify queue shaping as the maximum rate at which traffic can pass through the queue or as a percentage of the available bandwidth. On EX Series switches except EX4300 switches, you can specify the rate as a value between 3200 and 160,000,000,000 bps and the percentage as a value from 0 to 100 percent. On EX4300 switches, you can specify the rate as a value between 8000 and 160,000,000,000 bps and the percentage as a value from 0 to 100 percent.

Related Documentation

- [Understanding CoS Schedulers on page 17](#)
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)

Understanding Junos OS EZQoS for CoS Configurations on EX Series Switches

Junos operating system (Junos OS) EZQoS on Juniper Networks EX Series Ethernet Switches eliminates the complexities involved in configuring class of service (CoS) across the network. EZQoS offers templates for key traffic classes.

Junos OS CoS allows you to divide traffic into classes and offer various levels of throughput and packet loss when congestion occurs. You can use CoS to ensure that different types of traffic (voice, video, and data) get the bandwidth and consideration they need to meet user expectations and business objectives.

Configuring CoS requires careful consideration of your service needs and thorough planning and design to ensure consistency across all switches in a CoS domain. To configure CoS manually, you must define and fine-tune all CoS components such as classifiers, rewrite rules, forwarding classes, schedulers, and scheduler-maps and then apply these components to the interfaces. Therefore, configuring CoS can be a fairly complex and time-consuming task.

EZQoS works by automatically assigning preconfigured values to all CoS parameters based on the typical application requirements. These preconfigured values are stored in a template with a unique name. You can change the preconfigured values of these parameters to suit your particular application needs.

For using EZQoS, you must identify which switch ports are being used for a specific application (such as VoIP, video, and data) and manually apply the corresponding application-specific EZQoS template to these switch ports.



NOTE: Currently, we provide an EZQoS template for configuring CoS for VoIP.



NOTE: We recommend that you do not use the term EZQoS for defining a classifier.

**Related
Documentation**

- [Junos OS CoS for EX Series Switches Overview on page 4](#)
- [Configuring Junos OS EZQoS for CoS \(CLI Procedure\) on page 108](#)

Understanding Using CoS with MPLS Networks on EX Series Switches

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. See *EX Series Switch Software Features Overview* for a complete list of the Junos OS MPLS features that are supported on specific EX Series switches.

Juniper Networks EX Series Ethernet Switches support Differentiated Service Code Point (DSCP) or IP precedence and IEEE 802.1p CoS classifiers on the customer-edge interfaces of the ingress provider edge (PE) switch. DSCP or IP precedence classifiers are used for Layer 3 packets. IEEE 802.1p is used for Layer 2 packets.

When a packet enters a customer-edge interface of the ingress PE switch, the switch associates the packet with a particular CoS servicing level before putting the packet onto the label-switched path (LSP). The switches within the LSP utilize the CoS value set at the ingress PE switch. The CoS value that was embedded in the classifier is translated and encoded in the MPLS header by means of the EXP or experimental bits. EX Series switches enable a default EXP classifier and a default EXP rewrite rule. For more information about EXP classifiers and EXP rewrite rules, see EXP Classifiers and EXP rewrite Rules.

This topic includes:

- [EXP Classifiers and EXP rewrite Rules on page 29](#)
- [Guidelines for Using CoS Classifiers on CCCs on page 30](#)
- [Using CoS Classifiers with IP over MPLS on page 31](#)
- [Setting CoS Bits in an MPLS Header on page 31](#)
- [EXP Rewrite Rules on page 32](#)
- [Policer on page 33](#)
- [Schedulers on page 33](#)

EXP Classifiers and EXP rewrite Rules

EX Series switches enable a default EXP classifier and a default EXP rewrite rule. You can configure a custom EXP classifier and a custom EXP rewrite rule if you prefer. However, the switch supports only one type of EXP classifier (default or custom) and only one EXP rewrite rule (default or custom).

You do not bind the EXP classifier or the EXP rewrite rule to individual interfaces. The switch automatically and implicitly applies the default or the custom EXP classifier and

the default or the custom EXP rewrite rule to the appropriate MPLS-enabled interfaces. Because rewrite rules affect only egress interfaces, the switch applies the EXP rewrite rule only to those MPLS interfaces that are transmitting MPLS packets (not to the MPLS interfaces that are receiving the packets).

After traversing the MPLS tunnel, the traffic flows out from the egress provider edge (PE) switch. Before the traffic leaves the egress interface, the egress PE switch copies the EXP bits from the MPLS header to the most significant bits in the original IP packet---that is, to the IP precedence bits. Note that this is the default behavior only on Juniper Networks EX8200 Ethernet Switches (standalone or Virtual Chassis) that are configured for MPLS.

Guidelines for Using CoS Classifiers on CCCs

When you are configuring CoS for MPLS over circuit cross-connect (CCC), there are some additional guidelines, as follows:

- You *must* explicitly bind a CoS classifier to the CCC interface on the ingress PE switch.
- You *must* use the same DSCP, IP precedence, or IEEE 802.1p classifier on CCC interfaces. However, if the CCC interfaces are on the same switch, you cannot configure both a DSCP and an IP precedence classifier on these interfaces. Thus, if you configure one CCC interface to use a DSCP classifier DSCP1, you cannot configure another CCC interface to use another DSCP classifier DSCP2. All the CCC interfaces on the switch must use the same DSCP (or IP precedence) classifier and the same IEEE 802.1p classifier.
- You *cannot* configure one CCC interface to use a DSCP classifier and another CCC interface to use an IP precedence classifier, because these classifier types overlap.
- You *can* configure one CCC interface to use a DSCP classifier and another CCC interface to use IEEE 802.1p classifier.
- You *can* configure one CCC interface to use both a DSCP and an IEEE 802.1p classifier. If you configure a CCC interface to use both these classifiers, the DSCP classifier is used for routing Layer 3 packets and the IEEE 802.1p classifier is used for routing Layer 2 packets.
- You *can* configure one CCC interface to use both an IP precedence and an IEEE 802.1p classifier. If you configure a CCC interface to use both these classifiers, the IP precedence classifier is used for routing Layer 3 packets and the IEEE 802.1p classifier is used for routing Layer 2 packets.



NOTE: These guidelines are not applicable to Juniper Networks EX8200 Ethernet Switches (standalone or Virtual Chassis).

You can define multiple DSCP, IP precedence, and IEEE 802.1p classifiers for the non-CCC interfaces on a switch.

Using CoS Classifiers with IP over MPLS

When you are configuring CoS for IP over MPLS, the customer-edge interface uses the CoS configuration for the switch as the default. You do not have to bind a classifier to the customer-edge interface in this case. There are no restrictions on using multiple DSCP, IP precedence, and IEEE 802.1p classifiers on the same switch.

- You can modify the CoS classifier for a particular interface, but it is not required.
- You can configure a DSCP classifier, DSCP1 on the first interface, another DSCP classifier, DSCP2 on the second interface, and an IP precedence classifier on a third interface, and so forth.

Setting CoS Bits in an MPLS Header

When traffic enters an LSP tunnel, the CoS bits in the MPLS header are set in one of two ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. The *Class of Service Feature Guide for Routing Devices* explains the IP CoS values, and summarizes how the CoS bits are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.

The CoS value can be a decimal number from 0 through 7. This number corresponds to a 3-bit binary number. The high-order 2 bits of the CoS value select which transmit queue to use on the outbound interface card.

The low-order bit of the CoS value is treated as the PLP bit and is used to select the RED drop profile to use on the output queue. If the low-order bit is 0, the non-PLP drop profile is used, and if the low-order bit is 1, the PLP drop profile is used. It is generally expected that random early detection (RED) will more aggressively drop packets that have the PLP bit set. For more information about RED and drop profiles, see the *Class of Service Feature Guide for Routing Devices*.



NOTE: Configuring the PLP drop profile to drop packets more aggressively (for example, setting the CoS value from 6 to 7) decreases the likelihood of traffic getting through.

Table 10 on page 32 summarizes how MPLS CoS values correspond to the transmit queue and PLP bit. Note that in MPLS, the mapping between the CoS bit value and the output queue is hard-coded. You cannot configure the mapping for MPLS; you can configure it only for IPv4 traffic flows, as described in the *Class of Service Feature Guide for Routing Devices*.

Table 10: MPLS CoS Values

MPLS CoS Value	Bits	Transmit Queue	PLP Bit
0	000	0	Not set
1	001	0	Set
2	010	1	Not set
3	011	1	Set
4	100	2	Not set
5	101	2	Set
6	110	3	Not set
7	111	3	Set

Because the CoS value is part of the MPLS header, the value is associated with the packets only while they travel through the LSP tunnel. The value is not copied back to the IP header when the packets exit from the LSP tunnel.



NOTE: On EX8200 switches that run MPLS-based Layer 2 virtual private networks (VPNs):

- If you configure an LSP CoS, the EXP bits of the MPLS packet continue to use the same CoS values that are configured at the interface level.
- For Virtual Chassis, if the input and output interfaces are on different line cards, then the loss priority value that you configured on the first line card is not carried to the subsequent line cards. The loss priority for the outgoing traffic from the subsequent line cards is always set to low.

EXP Rewrite Rules

When traffic passes from the customer-edge interface to an MPLS interface, the DSCP, IP precedence, or IEEE 802.1p CoS classifier is translated into the EXP bits within the MPLS header. You cannot disable the default EXP rewrite rule, but you can configure your own custom EXP classifier and a custom EXP rewrite rule. You cannot bind the EXP classifier to individual MPLS interfaces; the switch applies it globally to all the MPLS-enabled interfaces on the switch.

Only one EXP rewrite rule (either default or custom) is supported on a switch. The switch applies it to all the egress interfaces on which MPLS is enabled. This is, however, not the case with EX8200 switches. With EX8200 switches, you must explicitly apply the rewrite rule on each of the egress interfaces.

Policer

Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. During periods of congestion (when the total rate of queuing packets exceeds the rate of transmission), any new packets being sent to an interface can be dropped because there is no place to store them. You can configure a policer on the ingress PE switch to prevent this:

- If you are using MPLS over CCC, you bind the policer to the LSP. You cannot bind a policer to a CCC interface.
- If you are using IP over MPLS, you bind the policer to the **inet-family** customer-edge interface. You cannot bind a policer to the LSP when you are using IP over MPLS.



NOTE: You cannot configure LSP policers on EX8200 switches.

Schedulers

The schedulers for using CoS with MPLS are the same as for the other CoS configurations on EX Series switches. Default schedulers are provided for best-effort and network-control forwarding classes. If you are using assured-forwarding, expedited-forwarding, or any custom forwarding class, we recommend that you configure a scheduler to support that forwarding class. See “[Understanding CoS Schedulers](#)” on page 17.

Related Documentation

- [Understanding CoS Classifiers on page 11](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 111](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 109](#)
- [Configuring Rewrite Rules for EXP Classifiers on MPLS Networks \(CLI Procedure\)](#)
- [Configuring CoS on Provider Switches of an MPLS Network \(CLI Procedure\) on page 113](#)
- [Configuring CoS Bits for an MPLS Network \(CLI Procedure\)](#)

Understanding CoS Queues on EX8200 Line Cards That Include Oversubscribed Ports

Some line cards available for Juniper Networks EX8200 Ethernet Switches include oversubscribed ports that are combined in logical port groups that share bandwidth. These oversubscribed ports handle traffic differently than ports that provide continuous line-rate bandwidth. You might need to configure CoS queues differently for oversubscribed ports than for line-rate ports.

This topic describes:

- [Oversubscribed Ports on Line Cards on page 34](#)
- [EX8200 Line Cards That Include Oversubscribed Ports on page 34](#)
- [Ingress Queueing on page 35](#)
- [Egress Queues on page 36](#)

Oversubscribed Ports on Line Cards

Oversubscribed ports on a line card are grouped into logical port groups. A port group collectively supports a certain bandwidth.

An EX8200 switch supports different line cards that provide line-rate and oversubscribed ports. Based on your requirement, you can choose the appropriate line card for an EX8200 switch. Line cards are field-replaceable units (FRUs) that can be installed in the line card slots in an EX8200 switch. In a line-rate EX8200 line card, each port in the line card supports the same amount of bandwidth and a single port can utilize that complete bandwidth. In an oversubscribed line card, a group of ports collectively support a certain total bandwidth and each port in that group can use either a portion or all of the available bandwidth. However, the total utilization of bandwidth by the ports in the group cannot exceed the bandwidth available for that group.

Because the port groups share bandwidth, class-of-service (CoS) ingress and egress queues are handled differently for these shared-bandwidth ports in logical port groups than they are for ports that individually support line-rate bandwidth. Some EX8200 line cards combine both port types, those that share bandwidth across port groups and those that individually support line-rate bandwidth.

EX8200 Line Cards That Include Oversubscribed Ports

[Table 11 on page 34](#) lists EX8200 line cards that include oversubscribed ports in logical port groups.

Table 11: EX8200 Line Cards That Include Oversubscribed Ports

Line Card Model	Name	Number of Oversubscribed Ports/Port Connector
EX8200-40XS	40-port SFP+	40 oversubscribed 10-gigabit SFP+ ports

Table 11: EX8200 Line Cards That Include Oversubscribed Ports (*continued*)

Line Card Model	Name	Number of Oversubscribed Ports/Port Connector
EX8200-2XS-40P	40-port PoE+ with 4-port SFP and 2-port SFP+	40 oversubscribed 10/100/1000 Gigabit Ethernet ports with RJ-45 connectors, four small form-factor pluggable (SFP) ports (in which you can install 1-gigabit SFP transceivers) and two SFP+ ports
EX8200-2XS-40T	40-port RJ-45 with 4-port SFP and 2-port SFP+	40 oversubscribed 10/100/1000 Gigabit Ethernet ports with RJ-45 connectors, four SFP ports (in which you can install 1-gigabit small form-factor pluggable (SFP) transceivers) and two SFP+ ports
EX8200-48PL	48-port PoE+ 20 Gbps	48 oversubscribed 10/100/1000 Gigabit Ethernet ports with RJ-45 connectors
EX8200-48TL	48-port RJ-45 20 Gbps	48 oversubscribed 10/100/1000 Gigabit Ethernet ports with RJ-45 connectors

Ingress Queuing

Classification of packets occurs in two phases for the oversubscribed ports in the port groups.

- [Preclassification of Packets and Port Ingress Queuing on page 35](#)
- [Full Classification of Packets and Fabric Ingress Queuing on page 36](#)

Preclassification of Packets and Port Ingress Queuing

Packets entering ports are forwarded to one of the ingress queues. The ingress queues schedule traffic from ports into the Packet Forwarding Engine.

The ingress queues are:

- **Low-priority queue**—Each interface in the line card has one low-priority queue. Traffic on these queues is scheduled using the shaped deficit weighted round-robin (SDWRR) algorithm, with each interface's queue having equal weight. On EX4300 switches, traffic is queued using the weighted deficit round-robin (WDRR) algorithm.
- **High-priority queue**—A set of interfaces in the line card shares a single high-priority queue. Traffic on this queue is scheduled by strict-high priority. The switch always sends critical network control packets on the high-priority queue.
- **Line-rate priority queue**—The packets entering line-rate ports are forwarded to this queue. Traffic on this queue is scheduled by strict priority and is always given higher priority than the traffic on the high-priority queue. This queue is used only in the following oversubscribed line cards for an EX8200 switch:
 - EX8200-2XS-40P
 - EX8200-2XS-40T

For the purpose of port ingress queuing on oversubscribed ports, packets are classified only by behavior aggregate (BA) classification. To control the ingress queue (high priority or low priority) to which packets are sent, configure a BA classifier on the physical port and specify switch fabric priorities for the forwarding classes. On EX8200 switches, fabric priority determines the priority of packets ingressing the switch fabric. For the EX8200-40XS line card, fabric priority also determines the priority of packets ingressing the port group.

By default, the fabric priority for all forwarding classes is low. To direct packets belonging to a forwarding class to the high-priority ingress queue, set the fabric priority to high for that class.

Critical network-control packets and line-rate packets are handled differently from other packets. Instead of using the BA classifier to classify critical network-control packets, the switch always sends critical network packets to the high-priority queue. The line-rate packets are always sent to the line-rate priority queue. This difference in handling of network-control packets and line-rate packets ensures that these packets are not dropped because of congestion on the shared-bandwidth ports.

Full Classification of Packets and Fabric Ingress Queuing

When packets (apart from line-rate and critical network-control packets) from an oversubscribed port reach the Packet Forwarding Engine, it performs full packet classification, along with other actions, such as multifield (MF) classification, traffic policing, and storm control. It then schedules and queues the packets for ingressing the fabric. The fabric priority associated with the forwarding class determines whether packets are sent to the low priority or high-priority ingress queues.

Egress Queues

On EX Series switches except EX4300 switches, each interface supports eight egress CoS queues. You can map up to 16 forwarding classes to these queues. An EX4300 switch interface supports 12 egress CoS queues.

In the EX8200-40XS line card, all interfaces in a port group share a single set of eight egress queues at the Packet Forwarding Engine. Egress traffic is fanned out from the Packet Forwarding Engine queues to the corresponding queues for the individual ports. For this reason, the interfaces in a port group must share the same scheduler map configuration. If you configure different scheduler map configurations for the different interfaces in a port group, an error is logged in the system log and the default scheduler map is used for all ports in the port group.

Related Documentation

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Understanding CoS Schedulers on page 17](#)
- [Understanding CoS Forwarding Classes on page 14](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards \(CLI Procedure\) on page 115](#)

Understanding Priority-Based Flow Control

Priority-based flow control (PFC), IEEE standard 802.1Qbb, is a link-level flow control mechanism. The flow control mechanism is similar to that used by IEEE 802.3x Ethernet PAUSE, but it operates on individual priorities. Instead of pausing all traffic on a link, PFC allows you to selectively pause traffic according to its class.

This topic describes:

- [Reliability of Packet Delivery in Standard Ethernet Networks and in Layer 2 Networks on page 37](#)
- [Calculations for Buffer Requirements When Using PFC PAUSE on page 37](#)
- [How PFC and Congestion Notification Profiles Work With or Without DCBX on page 38](#)

Reliability of Packet Delivery in Standard Ethernet Networks and in Layer 2 Networks

Standard Ethernet does not guarantee that a packet injected into the network will arrive at its intended destination. Reliability is provided by upper-layer protocols. Generally, a network path consists of multiple hops between the source and destination. A problem arises when transmitters send packets faster than receivers can accept them. When receivers run out of available buffer space to hold incoming flows, they silently drop additional incoming packets. This problem is generally resolved by upper-layer protocols that detect the drops and request retransmission.

Applications that require reliability in Layer 2 must have flow control that includes feedback from a receiver to a sender regarding buffer availability. Using IEEE 802.3x Ethernet PAUSE control frames, a receiver can generate a MAC control frame and send a PAUSE request to a sender when a specified threshold of receiver buffer has been filled to prevent buffer overflow. Upon receiving a PAUSE request, the sender stops transmission of any new packets until the receiver notifies the sender that it has sufficient buffer space to accept them again. The disadvantage of using Ethernet PAUSE is that it operates on the entire link, which might be carrying multiple traffic flows. Some traffic flows do not need flow control in Layer 2, because they are carrying applications that rely on upper-layer protocols for reliability. PFC enables you to configure Layer 2 flow control selectively for the traffic that requires it, such as Fibre Channel over Ethernet (FCoE) traffic, without impacting other traffic on the link. You can also enable PFC for other traffic types, such as iSCSI.

Calculations for Buffer Requirements When Using PFC PAUSE

The receive buffer must be large enough to accommodate all data that is received while the system is responding to a PFC PAUSE frame.

When you calculate buffer requirements, consider the following factors:

- Processing and queuing delay of the PFC PAUSE—In general, the time to detect the lack of sufficient buffer space and to transmit the PFC PAUSE is negligible. However, delays can occur if the switch detects a reduction in buffer space just as the transmitter is beginning to transmit a maximum length frame.
- Propagation delay across the media—The delay amount depends on the length and speed of the physical link.
- Response time to the PFC PAUSE frame
- Propagation delay across the media on the return path



NOTE: We recommend that you configure at least 20 percent of the buffer size for the queue that is using PFC and that you do not specify the exact option.

Because it is mandatory to explicitly configure a certain percentage of buffer size for PFC, you must also explicitly configure some buffer size for any other forwarding classes that you are planning to use (including the default forwarding classes and the user-defined forwarding classes). The percentage that you allocate depends on the usage of the respective classes.

How PFC and Congestion Notification Profiles Work With or Without DCBX

PFC can be applied to an interface regardless of whether the Data Center Bridging Capability Exchange protocol (DCBX) is enabled (DCBX is enabled by default for 10-Gigabit Ethernet interfaces on EX4500 CEE-enabled switches).

However, automatic control and advertisement of PFC requires DCBX:

- When DCBX is enabled—DCBX detects the data center bridging (DCB) neighbor's PFC configuration, uses autonegotiation to advertise local and peer PFC configuration, and then enables or disables PFC depending on whether the configurations are compatible or not. When PFC is enabled, it uses the congestion notification profile, which you have configured and applied to the interface.
- When DCBX is not enabled—Class of service (CoS) triggers PFC when the incoming frame has a User Priority (UP) field that matches the three-bit pattern specified for the congestion notification profile.

To manually control the use of PFC on the interface regardless of the configuration of the peer data center devices, you can explicitly change the configuration of DCBX on the interface to disable PFC autonegotiation. See *Disabling DCBX to Disable PFC Autonegotiation on EX Series Switches (CLI Procedure)*. When PFC autonegotiation is disabled, PFC is triggered by the congestion notification profile for PFC regardless of the configuration of the DCB peer.



NOTE: PFC functions effectively only when the peer devices connected to the local interface are also using PFC and are configured compatibly with the local interface. PFC must be symmetrical—if PFC is not configured to use the same traffic class (code point) on both the local and the peer interface, it does not have any impact on the traffic.

Table 12 on page 39 shows the one-to-one mapping between the UP field of an IEEE 802.1Q tagged frame, the traffic class, and the egress queue. In addition to setting a PFC congestion notification profile on an ingress port, you must set a forwarding class to match the priority specified in the PFC congestion notification profile and to forward the frame to the appropriate queue.

Juniper Networks EX Series Ethernet Switches support up to six traffic classes and allow you to associate those classes with six different congestion notification profiles. (The switches support up to 16 forwarding classes.)

Table 12: Input for PFC Congestion Notification Profile and Mapping to Traffic Class and Egress Queue

UP Field of IEEE-802.1Q Tagged Frame	Traffic Class	Egress Queue
000	TC 0	queue 0
001	TC 1	queue 1
010	TC 2	queue 2
011	TC 3	queue 3
100	TC4	queue 4
101	TC 5	queue 5

- Related Documentation
- [Understanding Data Center Bridging Capability Exchange Protocol for EX Series Switches](#)
 - [Example: Configuring an FCoE Transit Switch](#)
 - [Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\) on page 116](#)
 - [schedulers on page 158](#)
 - [congestion-notification-profile on page 135](#)

Understanding CoS Congestion Management

A congestion in a network occurs because of various parameters and some packets must be dropped to avoid congestion and to facilitate easy flow of traffic in the network. On Juniper Networks EX Series Ethernet Switches, class of service (CoS) provides congestion management mechanisms for a switch to drop arriving packets based on certain parameters when a queue is full. Based on the EX Series switch that you are using, packets are dropped depending on the priority of a packet or on both priority and drop probability of a packet.

You can specify parameters at the **[edit class-of-service drop-profiles]** hierarchy level for dropping packets and reference the parameters in a scheduler configuration.

This topic describes:

- [Weighted Tail Drop Congestion Management on page 40](#)
- [Weighted Random Early Detection Congestion Management on page 41](#)

Weighted Tail Drop Congestion Management

A weighted tail drop (WTD) is a congestion management mechanism for packets to be dropped from the tail of the queue when the queue reaches a certain buffer capacity (that is, the fill level), and hence the name weighted tail drop. The packets that are dropped are based on priority and are those marked with a packet loss priority (PLP) of *high*. You can configure a WTD profile (a WTD mechanism) usually on edge devices in a network.



NOTE: A WTD profile is supported only on the Juniper Networks EX2200, EX3200, EX3300, EX4200, EX4500, EX4550, and EX6200 Ethernet Switches.

When you configure a WTD profile, you are essentially setting the value for queue fullness. The queue fullness represents a percentage of the memory, known as delay-buffer bandwidth, that is used to store packets in relation to the total amount of memory that has been allocated for that specific queue. The delay-buffer bandwidth provides packet buffer space to absorb burst traffic up to the specified duration of delay. When the specified delay buffer becomes full, packets are dropped from the tail of the buffer.

By default, if you do not configure any drop profile, WTD profile is in effect and functions as the primary mechanism for managing congestion.



NOTE: The default WTD profile associated with the packets whose PLP is *low* cannot be modified. You can configure custom drop profile only for those packets whose PLP is *high*.

Weighted Random Early Detection Congestion Management

In a weighted random early detection (WRED) congestion management mechanism, random packets with a PLP of low or high are gradually dropped (based on drop probability) when the queue reaches a certain buffer capacity (that is, fill level).



NOTE: The WRED mechanism is supported only on Juniper Networks EX4300 standalone switches, EX4300 Virtual Chassis, Juniper Networks EX8200 standalone switches, and EX8200 Virtual Chassis.

Following are the different implementations of WRED:

- Segmented Drop Profile
- Interpolated Drop Profile

From a high level, segmented drop profile is a stair-step-like drop profile, whereas interpolated drop profile is a smoother (curve) drop profile. [Figure 2 on page 42](#) and [Figure 3 on page 43](#) show a graphical representation of segmented and interpolated drop profiles. Regardless of the implementation, a drop profile represents a graph where the x-axis represents the percentage of fill level (l) and the y-axis represents the percentage of drop probability (p). The origin (0,0) represents the drop profile in which the drop probability is 0 percent when the queue fullness is 0 percent, and the point (100,100) represents that the drop probability is 100 percent when the queue fullness is 100 percent. Although the formation of graph lines in [Figure 2 on page 42](#) and [Figure 3 on page 43](#) is different, the application of the profile is the same. When a packet reaches the head of the queue, a random number between 0 and 100 is calculated. This random number is plotted against the drop profile graph using the current queue fullness of that particular queue. When the random number falls above the graph line, the packet is transmitted. When the number falls below the graph line, the packet is dropped from the network.


The following sections discuss the WRED drop profile implementations and parameters:

- [Segmented Drop Profile on page 41](#)
- [Interpolated Drop Profile on page 42](#)
- [Drop Profile Parameters on page 44](#)

Segmented Drop Profile

In a segmented drop profile configuration, you can define multiple data points for fill level and drop probability. [Figure 2 on page 42](#) shows a graphical representation of a segmented drop profile.

Figure 2: Graphical Representation of a Segmented Drop Profile

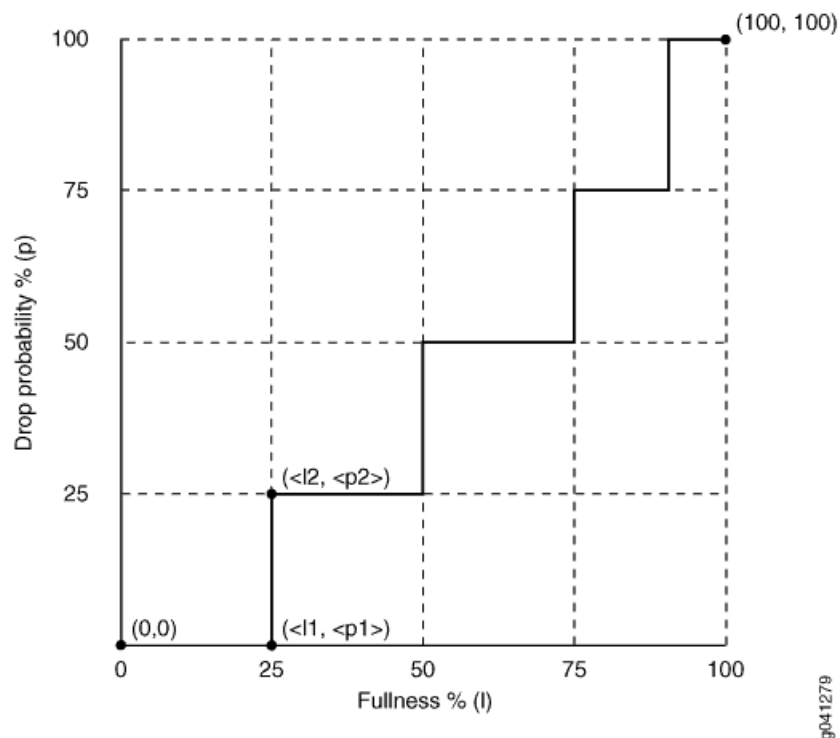

To create the profile's graph line, the software begins at the bottom-left corner of the graph, representing a 0 percent fill level and a 0 percent drop probability (that is the point (0,0)). The configuration draws a line directly to the right until it reaches the first defined fill level (that is, 25 percent represented in the graph on the x-axis). The software then continues the line vertically until the first drop probability is reached (that is, 25 percent represented in the graph in the y-axis). This process is repeated for all of the defined fill levels and drop probabilities until the top-right corner of the graph is reached (that is point (100,100) in the graph).

Interpolated Drop Profile

An interpolated drop profile configuration forms a smoother graph line compared to the graph in a segmented drop profile configuration. In this method of congestion management also, a switch uses multiple drop profile values to drop incoming packets to reduce congestion in the output queue.

Following are interpolated drop profile configurations on EX Series switches:

- [Interpolated Drop Profile Configuration on EX Series Switches Except EX4300 Switches on page 42](#)
- [Interpolated Drop Profile Configuration on EX4300 Switches on page 43](#)


Interpolated Drop Profile Configuration on EX Series Switches Except EX4300 Switches

An interpolated drop profile on all EX Series switches except EX4300 switches automatically generates 64 pairs of data points on the graph beginning at (0, 0) and

ending at (100,100). Along the way, the graph line intersects specific data points that you define for fullness and drop probability.

Figure 3 on page 43 shows a graphical representation of an interpolated drop profile.

Figure 3: Graphical Representation of an Interpolated Drop Profile on EX Series Switches Except EX4300 Switches

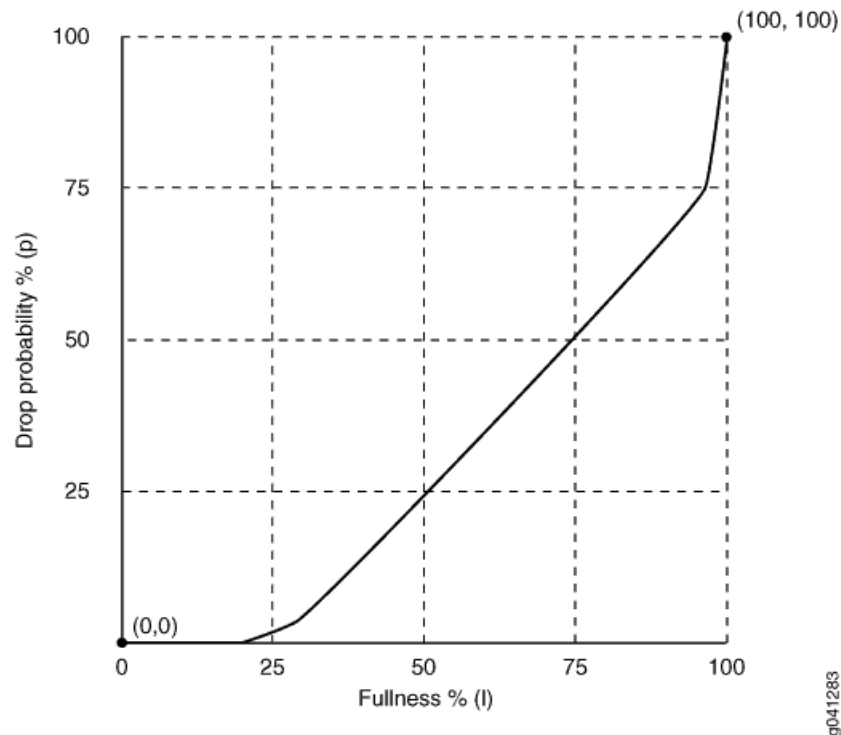

Interpolated Drop Profile Configuration on EX4300 Switches

On EX4300 switches, you can set two queue fill levels and two drop probabilities in each drop profile. The two fill levels and the two drop probabilities create two pairs of values. The first fill level and the first drop probability create one value pair and the second fill level and the second drop probability create the second value pair.




NOTE: You can configure a maximum of 64 drop profiles on EX4300 switches.

The first fill level value specifies the percentage of queue fullness at which packets begin to drop, known as the drop start point. Until the queue reaches this level of fullness, no packets are dropped. The second fill level value specifies the percentage of queue fullness at which all packets are dropped, known as the drop end point.

The first drop probability value is always 0 (zero). This pairs with the drop start point and specifies that until the queue fullness level reaches the first fill level, no packets drop. When the queue fullness exceeds the drop start point, packets begin to drop until the queue exceeds the second fill level, when all packets drop. The second drop probability value, known as the maximum drop rate, specifies the likelihood of dropping packets

when the queue fullness reaches the drop end point. As the queue fills from the drop start point to the drop end point, packets drop in a smooth, linear pattern (called an interpolated graph) as shown in [Figure 4 on page 44](#). After the drop end point, all packets drop.

Figure 4: Tail-Drop Profile Packet Drop on EX4300 Switches

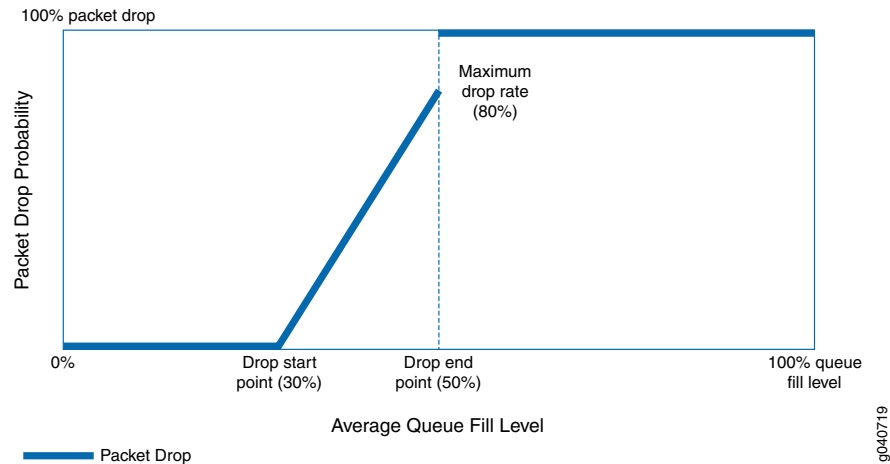

The thick line in [Figure 4 on page 44](#) shows the packet drop characteristics for a sample tail drop profile. At the drop start point, the queue reaches a fill level of 30 percent. At the drop end point, the queue fill level reaches 50 percent, and the maximum drop rate is 80 percent.

No packets drop until the queue fill level reaches the drop start point of 30 percent. When the queue reaches the 30 percent fill level, packets begin to drop. As the queue fills, the percentage of packets dropped increases in a linear fashion. When the queue fills to the drop end point of 50 percent, the rate of packet drop has increased to the maximum drop rate of 80 percent. When the queue fill level exceeds the drop end point of 50 percent, all of the packets drop until the queue fill level drops below 50 percent.

Drop Profile Parameters

You can specify the following two values in drop profile configuration:

- **Fill level**—The queue fullness value, which represents a percentage of the memory used to store packets in relation to the total amount of memory allocated to the queue.
- **Drop probability**—The percentage value that corresponds to the likelihood that an individual packet is dropped.

Related Documentation

- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Configuring CoS Congestion Management \(CLI Procedure\) on page 120](#)

PART 2

Configuration

- [Configuration Examples on page 47](#)
- [Configuration Tasks on page 83](#)
- [Configuration Statements on page 123](#)

CHAPTER 2

Configuration Examples

- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Example: Combining CoS with MPLS on EX Series Switches on page 71](#)

Example: Configuring CoS on EX Series Switches

Configure class of service (CoS) on your switch to manage traffic so that when the network experiences congestion and delay, critical applications are protected. Using CoS, you can divide traffic on your switch into classes and provide various levels of throughput and packet loss. This is especially important for traffic that is sensitive to jitter and delay, such as voice traffic.

This example shows how to configure CoS on a single EX Series switch in the network.

- [Requirements on page 47](#)
- [Overview and Topology on page 47](#)
- [Configuration on page 50](#)
- [Verification on page 60](#)

Requirements


This example uses the following hardware and software components:

- EX3200 and EX4200 switches
- Junos OS Release 9.0 or later for EX Series switches

Overview and Topology

This example uses the topology shown in [Figure 5 on page 48](#).

Figure 5: Topology for Configuring CoS

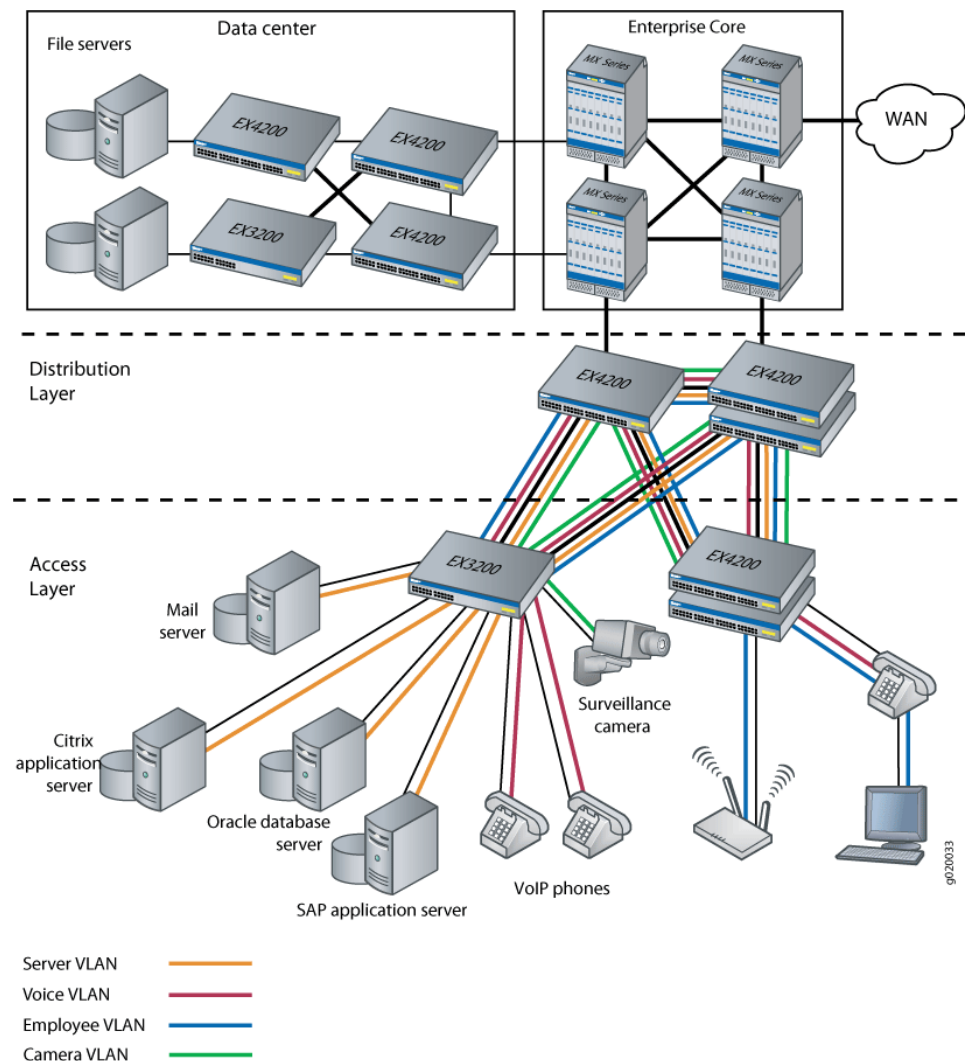

The topology for this configuration example consists of EX3200 and EX4200 switches at the access layer.

The EX Series access switch is configured to support VLAN membership. Interfaces **ge-0/0/0** and **ge-0/0/1** are assigned to the voice VLAN (**voice-vlan**) for two VoIP phones. Switch port **ge-0/0/2** is assigned to the camera VLAN (**camera-vlan**) for the surveillance camera. Switch ports **ge-0/0/3**, **ge-0/0/4**, **ge-0/0/5**, and **ge-0/0/6** are assigned to the server VLAN (**server-vlan**) for the servers hosting various applications such as those provided by Citrix, Microsoft, Oracle, and SAP.

Table 13 on page 49 shows the VLAN configuration components.

Table 13: Configuration Components: VLANs

VLAN Name	VLAN ID	VLAN Subnet and Available IP Addresses	VLAN Description
voice-vlan	10	192.168.1.0/28 192.168.1.1 through 192.168.1.14 192.168.1.15 is the subnet's broadcast address.	Voice VLAN used for employee VoIP communication.
camera-vlan	20	192.168.1.16/28 192.168.1.17 through 192.168.1.30 192.168.1.31 is the subnet's broadcast address.	VLAN for the surveillance cameras.
server-vlan	30	192.168.1.32/28 192.168.1.33 through 192.168.1.46 192.168.1.47 is the subnet's broadcast address.	VLAN for the servers hosting enterprise applications.

PoE-capable ports on EX Series switches support Power over Ethernet (PoE) to provide both network connectivity and power for VoIP telephones connecting to the ports. [Table 14 on page 49](#) shows the switch interfaces that are assigned to the VLANs and the IP addresses for devices connected to the switch ports on a 48-port switch, all ports of which are PoE-capable.

Table 14: Configuration Components: Switch Ports on a 48-Port All-PoE Switch

Interfaces	VLAN Membership	IP Addresses	Port Devices
ge-0/0/0, ge-0/0/1	voice-vlan	192.168.1.1/28 through 192.168.1.2/28	Two VoIP telephones.
ge-0/0/2	camera-vlan	192.168.1.17/28	Surveillance camera.
ge-0/0/3, ge-0/0/4, ge-0/0/5, ge-0/0/6	server-vlan	192.168.1.33/28 through 192.168.1.36/28	Four servers hosting applications such as those provided by Citrix, Microsoft, Oracle, and SAP.



NOTE: This example shows how to configure CoS on a standalone EX Series switch. This example does not consider across-the-network applications of CoS in which you might implement different configurations on ingress and egress switches to provide differentiated treatment to different classes across a set of nodes in a network.

Configuration

CLI Quick Configuration To quickly configure CoS, copy the following commands and paste them into the switch terminal window:

```
[edit]
set class-of-service forwarding-classes class app queue-num 5
set class-of-service forwarding-classes class mail queue-num 1
set class-of-service forwarding-classes class db queue-num 2
set class-of-service forwarding-classes class erp queue-num 3
set class-of-service forwarding-classes class video queue-num 4
set class-of-service forwarding-classes class best-effort queue-num 0
set class-of-service forwarding-classes class voice queue-num 6
set class-of-service forwarding-classes class network-control queue-num 7
set firewall family ethernet-switching filter voip_class term voip from source-address 192.168.1.1/28
set firewall family ethernet-switching filter voip_class term voip from source-address 192.168.1.2/28
set firewall family ethernet-switching filter voip_class term voip from protocol udp
set firewall family ethernet-switching filter voip_class term voip from source-port 2698
set firewall family ethernet-switching filter voip_class term voip then forwarding-class voice
loss-priority low
set firewall family ethernet-switching filter voip_class term network_control from precedence
[net-control internet-control]
set firewall family ethernet-switching filter voip_class term network_control then forwarding-class
network-control loss-priority low
set firewall family ethernet-switching filter voip_class term best_effort_traffic then
forwarding-class best-effort loss-priority low
set interfaces ge-0/0/0 description phone1-voip-ingress-port
set interfaces ge-0/0/0 unit 0 family ethernet-switching filter input voip_class
set class-of-service interfaces ge-0/0/0 shaping-rate 100m
set interfaces ge-0/0/1 description phone2-voip-ingress-port
set interfaces ge-0/0/1 unit 0 family ethernet-switching filter input voip_class
set firewall family ethernet-switching filter video_class term video from source-address
192.168.1.17/28
set firewall family ethernet-switching filter video_class term video from protocol udp
set firewall family ethernet-switching filter video_class term video from source-port 2979
set firewall family ethernet-switching filter video_class term video then forwarding-class video
loss-priority low
set firewall family ethernet-switching filter video_class term network_control from precedence
[net-control internet-control]
set firewall family ethernet-switching filter video_class term network_control then forwarding-class
network-control loss-priority low
set firewall family ethernet-switching filter video_class term best_effort_traffic then
forwarding-class best-effort loss-priority low
set interfaces ge-0/0/2 description video-ingress-port
set interfaces ge-0/0/2 unit 0 family ethernet-switching filter input video_class
set firewall family ethernet-switching filter app_class term app from source-address
192.168.1.33/28
set firewall family ethernet-switching filter app_class term app from protocol tcp
set firewall family ethernet-switching filter app_class term app from source-port [1494 2512 2513
2598 2897]
set firewall family ethernet-switching filter app_class term app then forwarding-class app
loss-priority low
set firewall family ethernet-switching filter app_class term mail from source-address
192.168.1.34/28
set firewall family ethernet-switching filter app_class term mail from protocol tcp
set firewall family ethernet-switching filter app_class term mail from source-port [25 143 389
691 993 3268 3269]
set firewall family ethernet-switching filter app_class term mail then forwarding-class mail
loss-priority low
```

```

set firewall family ethernet-switching filter app_class term db from source-address 192.168.1.35/28
set firewall family ethernet-switching filter app_class term db from protocol tcp
set firewall family ethernet-switching filter app_class term db from source-port [1521 1525 1527
1571 1810 2481]
set firewall family ethernet-switching filter app_class term db then forwarding-class db loss-priority
low
set firewall family ethernet-switching filter app_class term erp from source-address 192.168.1.36/28
set firewall family ethernet-switching filter app_class term erp from protocol tcp
set firewall family ethernet-switching filter app_class term erp from source-port [3200 3300
3301 3600]
set firewall family ethernet-switching filter app_class term erp then forwarding-class erp
loss-priority low
set firewall family ethernet-switching filter app_class term network_control from precedence
[net-control internet-control]
set firewall family ethernet-switching filter app_class term network_control then forwarding-class
network-control loss-priority low
set firewall family ethernet-switching filter app_class term best_effort_traffic then forwarding-class
best-effort loss-priority low
set interfaces ge-0/0/3 unit 0 family ethernet-switching filter input app_class
set interfaces ge-0/0/4 unit 0 family ethernet-switching filter input app_class
set interfaces ge-0/0/5 unit 0 family ethernet-switching filter input app_class
set interfaces ge-0/0/6 unit 0 family ethernet-switching filter input app_class
set class-of-service schedulers voice-sched buffer-size percent 10
set class-of-service schedulers voice-sched priority strict-high
set class-of-service schedulers voice-sched transmit-rate percent 10
set class-of-service schedulers video-sched buffer-size percent 15
set class-of-service schedulers video-sched priority low
set class-of-service schedulers video-sched transmit-rate percent 15
set class-of-service schedulers app-sched buffer-size percent 10
set class-of-service schedulers app-sched priority low
set class-of-service schedulers app-sched transmit-rate percent 10
set class-of-service schedulers mail-sched buffer-size percent 5
set class-of-service schedulers mail-sched priority low
set class-of-service schedulers mail-sched transmit-rate percent 5
set class-of-service schedulers db-sched buffer-size percent 10
set class-of-service schedulers db-sched priority low
set class-of-service schedulers db-sched transmit-rate percent 10
set class-of-service schedulers erp-sched buffer-size percent 10
set class-of-service schedulers erp-sched priority low
set class-of-service schedulers erp-sched transmit-rate percent 10
set class-of-service schedulers nc-sched buffer-size percent 5
set class-of-service schedulers nc-sched priority strict-high
set class-of-service schedulers nc-sched transmit-rate percent 5
set class-of-service schedulers be-sched buffer-size percent 35
set class-of-service schedulers be-sched priority low
set class-of-service schedulers be-sched transmit-rate percent 35
set class-of-service scheduler-maps ethernet-cos-map forwarding-class voice scheduler
voice-sched
set class-of-service scheduler-maps ethernet-cos-map forwarding-class video scheduler
video-sched
set class-of-service scheduler-maps ethernet-cos-map forwarding-class app scheduler app-sched
set class-of-service scheduler-maps ethernet-cos-map forwarding-class mail scheduler mail-sched
set class-of-service scheduler-maps ethernet-cos-map forwarding-class db scheduler db-sched
set class-of-service scheduler-maps ethernet-cos-map forwarding-class erp scheduler erp-sched
set class-of-service scheduler-maps ethernet-cos-map forwarding-class network-control
scheduler nc-sched
set class-of-service scheduler-maps ethernet-cos-map forwarding-class best-effort scheduler
be-sched
set class-of-service interfaces ge-0/0/20 scheduler-map ethernet-cos-map
set class-of-service schedulers voice-sched-queue-shap shaping-rate 30m

```

```

set class-of-service scheduler-maps sched-map-be forwarding-class best-effort scheduler
voice-sched-queue-shap
set class-of-service interfaces ge-0/0/2 scheduler-map sched-map-be

```

Step-by-Step Procedure

To configure and apply CoS:

1. Configure one-to-one mappings between eight forwarding classes and eight queues:

```

[edit class-of-service]
user@switch# set forwarding-classes class app queue-num 5
user@switch# set forwarding-classes class mail queue-num 1
user@switch# set forwarding-classes class db queue-num 2
user@switch# set forwarding-classes class erp queue-num 3
user@switch# set forwarding-classes class video queue-num 4
user@switch# set forwarding-classes class best-effort queue-num 0
user@switch# set forwarding-classes class voice queue-num 6
user@switch# set forwarding-classes class network-control queue-num 7

```

2. Define the firewall filter **voip_class** to classify the VoIP traffic:

```

[edit firewall]
user@switch# set family ethernet-switching filter voip_class

```

3. Define the term **voip**:

```

[edit firewall]
user@switch# set family ethernet-switching filter voip_class term voip from source-address
192.168.1.1/28
user@switch# set family ethernet-switching filter voip_class term voip from source-address
192.168.1.2/28
user@switch# set family ethernet-switching filter voip_class term voip protocol udp
user@switch# set family ethernet-switching filter voip_class term voip source-port 2698
user@switch# set family ethernet-switching filter voip_class term voip then forwarding-class
voice loss-priority low

```

4. Define the term **network_control** (for the **voip_class** filter):

```

[edit firewall]
user@switch# set family ethernet-switching filter voip_class term network_control from
precedence [net-control internet-control]
user@switch# set family ethernet-switching filter voip_class term network_control then
forwarding-class network-control loss-priority low

```

5. Define the term **best_effort_traffic** with no match conditions (for the **voip_class** filter):

```

[edit firewall]
user@switch# set family ethernet-switching filter voip_class term best_effort_traffic then
forwarding-class best-effort loss-priority low

```

6. Apply the firewall filter **voip_class** as an input filter to the interfaces for the VoIP phones:

```

[edit interfaces]
user@switch# set ge-0/0/0 description phone1-voip-ingress-port
user@switch# set ge-0/0/0 unit 0 family ethernet-switching filter input voip_class
user@switch# set ge-0/0/1 description phone2-voip-ingress-port
user@switch# set ge-0/0/1 unit 0 family ethernet-switching filter input voip_class

```

7. Apply port shaping on the interface **ge-0/0/0**:

```

[edit]
user@switch# set class-of-service interfaces ge-0/0/0 shaping-rate 100m

```

8. Define the firewall filter **video_class** to classify the video traffic:

```

[edit firewall]
user@switch# set family ethernet-switching filter video_class

```

9. Define the term **video**:

```
[edit firewall]
user@switch# set family ethernet-switching filter video_class term video from
source-address 192.168.1.17/28
user@switch# set family ethernet-switching filter video_class term video protocol udp
user@switch# set family ethernet-switching filter video_class term video source-port 2979
user@switch# set family ethernet-switching filter video_class term video then
forwarding-class video loss-priority low
```

10. Define the term **network_control** (for the **video_class** filter):

```
[edit firewall]
user@switch# set family ethernet-switching filter video_class term network_control from
precedence [net-control internet-control]
user@switch# set family ethernet-switching filter video_class term network_control then
forwarding-class network-control loss-priority low
```

11. Define the term **best_effort_traffic** with no match conditions (for the **video_class** filter):

```
[edit firewall]
user@switch# set family ethernet-switching filter video_class term best_effort_traffic then
forwarding-class best-effort loss-priority low
```

12. Apply the firewall filter **video_class** as an input filter to the interface for the surveillance camera:

```
[edit interfaces]
user@switch# set ge-0/0/2 description video-ingress-port
user@switch# set ge-0/0/2 unit 0 family ethernet-switching filter input video_class
```

13. Define the firewall filter **app_class** to classify the application server traffic:

```
[edit firewall]
user@switch# set family ethernet-switching filter app_class
```

14. Define the term **app** (for the **app_class** filter):

```
[edit firewall]
user@switch# set family ethernet-switching filter app_class term app from source-address
192.168.1.33/28
user@switch# set family ethernet-switching filter app_class term app protocol tcp
user@switch# set family ethernet-switching filter app_class term app source-port [1494
2512 2513 2598 2897]
user@switch# set family ethernet-switching filter app_class term app then forwarding-class
app loss-priority low
```

15. Define the term **mail** (for the **app_class** filter):

```
[edit firewall]
user@switch# set family ethernet-switching filter app_class term mail from source-address
192.168.1.34/28
user@switch# set family ethernet-switching filter app_class term mail protocol tcp
user@switch# set family ethernet-switching filter app_class term mail source-port [25 143
389 691 993 3268 3269]
user@switch# set family ethernet-switching filter app_class term mail then forwarding-class
mail loss-priority low
```

16. Define the term **db** (for the **app_class** filter):

```
[edit firewall]
user@switch# set family ethernet-switching filter app_class term db from source-address
192.168.1.35/28
user@switch# set family ethernet-switching filter app_class term db protocol tcp
user@switch# set family ethernet-switching filter app_class term db source-port [1521
1525 1527 1571 1810 2481]
```

- ```

user@switch# set family ethernet-switching filter app_class term db then forwarding-class
db loss-priority low

```
17. Define the term **erp** (for the **app\_class** filter):
 

```

[edit firewall]
user@switch# set family ethernet-switching filter app_class term erp from source-address
192.168.1.36/28
user@switch# set family ethernet-switching filter app_class term erp protocol tcp
user@switch# set family ethernet-switching filter app_class term erp source-port [3200
3300 3301 3600]
user@switch# set family ethernet-switching filter app_class term erp then forwarding-class
erp loss-priority low

```
  18. Define the term **network\_control** (for the **app\_class** filter):
 

```

[edit firewall]
user@switch# set family ethernet-switching filter app_class term network_control from
precedence [net-control internet-control]
user@switch# set family ethernet-switching filter app_class term network_control then
forwarding-class network-control loss-priority low

```
  19. Define the term **best\_effort\_traffic** (for the **app\_class** filter):
 

```

[edit firewall]
user@switch# set family ethernet-switching filter app_class term best_effort_traffic then
forwarding-class best-effort loss-priority low

```
  20. Apply the firewall filter **app\_class** as an input filter to the interfaces for the servers hosting applications:
 

```

[edit interfaces]
user@switch# set ge-0/0/3 unit 0 family ethernet-switching filter input app_class
user@switch# set ge-0/0/4 unit 0 family ethernet-switching filter input app_class
user@switch# set ge-0/0/5 unit 0 family ethernet-switching filter input app_class
user@switch# set ge-0/0/6 unit 0 family ethernet-switching filter input app_class

```
  21. Configure schedulers:
 

```

[edit class-of-service]
user@switch# set schedulers voice-sched buffer-size percent 10
user@switch# set schedulers voice-sched priority strict-high
user@switch# set schedulers voice-sched transmit-rate percent 10
user@switch# set schedulers video-sched buffer-size percent 15
user@switch# set schedulers video-sched priority low
user@switch# set schedulers video-sched transmit-rate percent 15
user@switch# set schedulers app-sched buffer-size percent 10
user@switch# set schedulers app-sched priority low
user@switch# set schedulers app-sched transmit-rate percent 10
user@switch# set schedulers mail-sched buffer-size percent 5
user@switch# set schedulers mail-sched priority low
user@switch# set schedulers mail-sched transmit-rate percent 5
user@switch# set schedulers db-sched buffer-size percent 10
user@switch# set schedulers db-sched priority low
user@switch# set schedulers db-sched transmit-rate percent 10
user@switch# set schedulers erp-sched buffer-size percent 10
user@switch# set schedulers erp-sched priority low
user@switch# set schedulers erp-sched transmit-rate percent 10
user@switch# set schedulers nc-sched buffer-size percent 5
user@switch# set schedulers nc-sched priority strict-high
user@switch# set schedulers nc-sched transmit-rate percent 5
user@switch# set schedulers be-sched buffer-size percent 35
user@switch# set schedulers be-sched priority low
user@switch# set schedulers be-sched transmit-rate percent 35

```



22. Assign the forwarding classes to schedulers with the scheduler map **ethernet-cos-map**:
 

```
[edit class-of-service]
user@switch# set scheduler-maps ethernet-cos-map forwarding-class voice scheduler
voice-sched
user@switch# set scheduler-maps ethernet-cos-map forwarding-class video scheduler
video-sched
user@switch# set scheduler-maps ethernet-cos-map forwarding-class app scheduler
app-sched
user@switch# set scheduler-maps ethernet-cos-map forwarding-class mail scheduler
mail-sched
user@switch# set scheduler-maps ethernet-cos-map forwarding-class db scheduler
db-sched
user@switch# set scheduler-maps ethernet-cos-map forwarding-class erp scheduler
erp-sched
user@switch# set scheduler-maps ethernet-cos-map forwarding-class network-control
scheduler nc-sched
user@switch# set scheduler-maps ethernet-cos-map forwarding-class best-effort scheduler
be-sched
```
23. Associate the scheduler map with the outgoing interface:
 

```
[edit class-of-service interfaces]
user@switch# set ge-0/0/20 scheduler-map ethernet-cos-map
```
24. Apply queue shaping for the best-effort queue:
 

```
[edit]
user@switch# set class-of-service schedulers voice-sched-queue-shap shaping-rate 30m
user@switch# set class-of-service scheduler-maps sched-map-be forwarding-class
best-effort scheduler voice-sched-queue-shap
user@switch# set class-of-service interfaces ge-0/0/2 scheduler-map sched-map-be
```

**Results** Display the results of the configuration:

```
user@switch> show firewall

firewall family ethernet-switching {
 filter voip_class {
 term voip {
 from {
 source-address {
 192.168.1.1/28;
 192.168.1.2/28;
 }
 protocol udp;
 source-port 2698;
 }
 then {
 forwarding-class voice;
 loss-priority low;
 }
 }
 }
 term network control {
 from {
 precedence [net-control internet-control];
 }
 then {
 forwarding-class network-control;
 loss-priority low;
 }
 }
}
```

```
 }
 }
 term best_effort_traffic {
 then {
 forwarding-class best-effort;
 loss-priority low;
 }
 }
}
filter video_class {
 term video {
 from {
 source-address {
 192.168.1.17/28;
 }
 protocol udp;
 source-port 2979;
 }
 then {
 forwarding-class video;
 loss-priority low;
 }
 }
 term network_control {
 from {
 precedence [net-control internet-control];
 }
 then {
 forwarding-class network-control;
 loss-priority low;
 }
 }
 term best_effort_traffic {
 then {
 forwarding-class best-effort;
 loss-priority low;
 }
 }
}
filter app_class {
 term app {
 from {
 source-address {
 192.168.1.33/28;
 }
 protocol tcp;
 source-port [1491 2512 2513 2598 2897];
 }
 then {
 forwarding-class app;
 loss-priority low;
 }
 }
 term mail {
 from {
 source-address {
```

```

 192.168.1.34/28;
 }
 protocol tcp;
 source-port [25 143 389 691 993 3268 3269];
}
then {
 forwarding-class mail;
 loss-priority low;
}
}
term db {
 from {
 source-address {
 192.168.1.35/28;
 }
 protocol tcp;
 source-port [1521 1525 1527 1571 1810 2481];
 }
 then {
 forwarding-class db;
 loss-priority low;
 }
}
term erp {
 from {
 source-address {
 192.168.1.36/28;
 }
 protocol tcp;
 source-port [3200 3300 3301 3600];
 }
 then {
 forwarding-class erp;
 loss-priority low;
 }
}
term network control {
 from {
 precedence [net-control internet-control];
 }
 then {
 forwarding-class network-control;
 loss-priority low;
 }
}
term best_effort_traffic {
 then {
 forwarding-class best-effort;
 loss-priority low;
 }
}
}
}
}

user@switch# show class-of-service
forwarding-classes {

```

```
class app queue-num 5;
class mail queue-num 1;
class db queue-num 2;
class erp queue-num 3;
class video queue-num 4;
class best-effort queue-num 0;
class voice queue-num 6;
class network-control queue-num 7;
}
interfaces {
 ge-0/0/0 {
 shaping-rate 100m;
 }
}
interfaces {
 ge-0/0/2 {
 scheduler-map sched-map-be;
 }
}
schedulers {
 voice-sched-queue-shap {
 shaping-rate 30m;
 }
 voice-sched {
 buffer-size percent 10;
 priority strict-high;
 transmit-rate percent 10;
 }
 video-sched {
 buffer-size percent 15;
 priority low;
 transmit-rate percent 15;
 }
 app-sched {
 buffer-size percent 10;
 priority low;
 transmit-rate percent 10;
 }
 mail-sched {
 buffer-size percent 5;
 priority low;
 transmit-rate percent 5;
 }
 db-sched {
 buffer-size percent 10;
 priority low;
 transmit-rate percent 10;
 }
 erp-sched {
 buffer-size percent 10;
 priority low;
 transmit-rate percent 10;
 }
 nc-sched {
 buffer-size percent 5;
 priority strict-high;
 }
}
```

```

 transmit-rate percent 5;
 }
 be-sched {
 buffer-size percent 35;
 priority low;
 transmit-rate percent 35;
 }
}
scheduler-maps {
 ethernet-cos-map {
 forwarding-class voice scheduler voice-sched;
 forwarding-class video scheduler video-sched;
 forwarding-class app scheduler app-sched;
 forwarding-class mail scheduler mail-sched;
 forwarding-class db scheduler db-sched;
 forwarding-class erp scheduler erp-sched;
 forwarding-class network-control scheduler nc-sched;
 forwarding-class best-effort scheduler be-sched;
 }
 sched-map-be {
 forwarding-class best-effort scheduler voice-sched-queue-shap;
 }
}

user@switch# show interfaces

ge-0/0/0 {
 unit 0 {
 family ethernet {
 filter {
 input voip_class;
 }
 }
 }
}
ge-0/0/1 {
 unit 0 {
 family ethernet {
 filter {
 input voip_class;
 }
 }
 }
}
ge-0/0/2 {
 unit 0 {
 family ethernet {
 filter {
 input video_class;
 }
 }
 }
}
ge-0/0/3 {
 unit 0 {
 family ethernet {
 filter {

```

```
 input app_class;
 }
}
}
ge-0/0/4 {
 unit 0 {
 family ethernet {
 filter {
 input app_class;
 }
 }
 }
}
ge-0/0/5 {
 unit 0 {
 family ethernet {
 filter {
 input app_class;
 }
 }
 }
}
ge-0/0/6 {
 unit 0 {
 family ethernet {
 filter {
 input app_class;
 }
 }
 }
}
```

## Verification

To confirm that the configuration is working properly, perform these tasks:

- [Verifying That the Defined Forwarding Classes Exist and Are Mapped to Queues on page 60](#)
- [Verifying That the Forwarding Classes Have Been Assigned to Schedulers on page 61](#)
- [Verifying That the Scheduler Map Has Been Applied to the Interface on page 63](#)
- [Verifying That Port Shaping Has Been Applied on page 63](#)
- [Verifying That Queue Shaping Has Been Applied on page 67](#)

### Verifying That the Defined Forwarding Classes Exist and Are Mapped to Queues

**Purpose** Verify that the forwarding classes **app**, **best-effort**, **db**, **erp**, **mail**, **network-control**, **video**, and **voice** have been defined and mapped to queues.

**Action** user@switch> show class-of-service forwarding-class

| Forwarding class | ID | Queue |
|------------------|----|-------|
| app              | 0  | 5     |
| db               | 1  | 2     |
| erp              | 2  | 3     |
| best-effort      | 3  | 0     |
| mail             | 4  | 1     |
| voice            | 5  | 6     |
| video            | 6  | 4     |
| network-control  | 7  | 7     |

**Meaning** This output shows that the forwarding classes have been defined and mapped to appropriate queues.

---

### Verifying That the Forwarding Classes Have Been Assigned to Schedulers

---

**Purpose** Verify that the forwarding classes have been assigned to schedulers.

**Action** user@switch> show class-of-service scheduler-map

Scheduler map: ethernet-cos-map, Index: 2

Scheduler: voice-sched, Forwarding class: voice, Index: 22

Transmit rate: 5 percent, Rate Limit: none, Buffer size: 15 percent,  
Priority: Strict-high

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Scheduler: video-sched, Forwarding class: video, Index: 22

Transmit rate: 10 percent, Rate Limit: none, Buffer size: 10 percent,  
Priority: low

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Scheduler: app-sched, Forwarding class: app, Index: 22

Transmit rate: 10 percent, Rate Limit: none, Buffer size: 10 percent,  
Priority: low

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Scheduler: mail-sched, Forwarding class: mail, Index: 22

Transmit rate: 5 percent, Rate Limit: none, Buffer size: 5 percent,  
Priority: low

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Scheduler: db-sched, Forwarding class: db, Index: 22

Transmit rate: 10 percent, Rate Limit: none, Buffer size: 10 percent,  
Priority: low

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Scheduler: erp-sched, Forwarding class: erp, Index: 22

Transmit rate: 10 percent, Rate Limit: none, Buffer size: 10 percent,  
Priority: low

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Scheduler: be-sched, Forwarding class: best-effort, Index: 20

Transmit rate: 35 percent, Rate Limit: none, Buffer size: 35 percent,  
Priority: low

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Scheduler: nc-sched, Forwarding class: network-control, Index: 22

Transmit rate: 5 percent, Rate Limit: none, Buffer size: 5 percent,



```

Priority: Strict-high
Drop profiles:
 Loss priority Protocol Index Name
 High non-TCP 1 <default-drop-profile>
 High TCP 1 <default-drop-profile>

```

**Meaning** This output shows that the forwarding classes have been assigned to schedulers.

### Verifying That the Scheduler Map Has Been Applied to the Interface

**Purpose** Verify that the scheduler map has been applied to the interface.

**Action** user@switch> show class-of-service interface

```

...
Physical interface: ge-0/0/20, Index: 149
Queues supported: 8, Queues in use: 8
 Scheduler map: ethernet-cos-map, Index: 43366
 Input scheduler map: <default>, Index: 3
...

```

**Meaning** This output shows that the scheduler map (**ethernet-cos-map**) has been applied to the interface (**ge-0/0/20**).

### Verifying That Port Shaping Has Been Applied

**Purpose** Verify that the port shaping has been applied to an interface.

**Action** Following is the output before port shaping is applied to the interface **ge-0/0/0**, when there is egress traffic of 400 Mbps exiting on that interface:

```

user@switch> show interfaces ge-0/0/0 extensive
Physical interface: ge-0/0/0, Enabled, Physical link is Up
 Interface index: 239, SNMP ifIndex: 548, Generation: 242
 Link-level type: Ethernet, MTU: 1514, Speed: Auto, Duplex: Auto, BPDU Error:
None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online,
Media type: Copper
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:23:9c:0b:ae:8d, Hardware address: 00:23:9c:0b:ae:8d
Last flapped : 2012-07-07 03:21:52 UTC (1d 18:02 ago)
Statistics last cleared: 2012-07-07 23:54:34 UTC (21:29:59 ago)
Traffic statistics:
 Input bytes : 0 0 bps
 Output bytes : 2299853696 345934816 bps
 Input packets: 0 0 pps
 Output packets: 17967609 337827 pps
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0

```

```

Output packets: 0
Input errors:
 Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
 Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 18302337 0
1 assured-forw 0 0 0
5 expedited-fo 0 0 0
7 network-cont 0 0 0

Queue number: Mapped forwarding classes
0 best-effort
1 assured-forwarding
5 expedited-forwarding
7 network-control

Active alarms : None
Active defects : None
MAC statistics:
Total octets Receive Transmit
Total packets 0 2299853696
Unicast packets 0 17967609
Broadcast packets 0 0
Multicast packets 0 0
CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
Code violations 0

Autonegotiation information:
Negotiation status: Complete
Link partner:
 Link mode: Full-duplex, Flow control: Symmetric, Remote fault: OK, Link
partner Speed: 1000 Mbps
Local resolution:
 Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
 Destination slot: 1
CoS information:
 Direction : Output
CoS transmit queue Bandwidth Buffer Priority Limit

 % bps % usec
0 best-effort 95 950000000 95 NA low none
7 network-control 5 50000000 5 NA low none

Interface transmit statistics: Disabled

Logical interface ge-1/0/10.0 (Index 69) (SNMP ifIndex 638) (Generation 138)

```

```

Flags: SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Local statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Transit statistics:
 Input bytes : 0 0 bps
 Output bytes : 0 0 bps
 Input packets: 0 0 pps
 Output packets: 0 0 pps
Protocol eth-switch, Generation: 163, Route table: 0
Flags: Trunk-Mode

```

The Traffic statistics: field in this output shows that egress traffic is ~400 Mbps (345,934,816 bps). When a port shaping of 100 Mbps is applied to the ge-0/0/0 interface, you see the following outputs for the **show interfaces ge-0/0/0 statistics** and the **show class-of-service interface ge-0/0/0** commands:

```

user@switch> show interfaces ge-0/0/0 statistics
Physical interface: ge-0/0/0, Enabled, Physical link is Up
 Interface index: 239, SNMP ifIndex: 548, Generation: 242
 Link-level type: Ethernet, MTU: 1514, Speed: Auto, Duplex: Auto, BPDU Error:
None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online,
 Media type: Copper
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x0
 Link flags : None
 CoS queues : 8 supported, 8 maximum usable queues
 Hold-times : Up 0 ms, Down 0 ms
 Current address: 00:23:9c:0b:ae:8d, Hardware address: 00:23:9c:0b:ae:8d
 Last flapped : 2012-07-07 03:21:52 UTC (1d 18:10 ago)
 Statistics last cleared: 2012-07-07 23:54:34 UTC (21:37:58 ago)
Traffic statistics:
 Input bytes : 0 0 bps
 Output bytes : 15779512832 100223104 bps
 Input packets: 0 0 pps
 Output packets: 123277444 97874 pps
IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
Input errors:
 Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
 Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 123350092 57012484

```

```

1 assured-forw 0 0 0
5 expedited-fo 0 0 0
7 network-cont 0 0 0

Queue number: Mapped forwarding classes
0 best-effort
1 assured-forwarding
5 expedited-forwarding
7 network-control

Active alarms : None
Active defects : None
MAC statistics:
Total octets Receive Transmit
Total packets 0 15779512832
Unicast packets 0 123277444
Broadcast packets 0 0
Multicast packets 0 0
CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
Code violations 0

Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: Symmetric, Remote fault: OK, Link
partner Speed: 1000 Mbps
Local resolution:
Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 1
CoS information:
Direction : Output
CoS transmit queue Bandwidth Buffer Priority
Limit
0 best-effort % bps % usec low
none 95 95000000 95 NA
7 network-control 5 5000000 5 NA low
none

Interface transmit statistics: Disabled

Logical interface ge-1/0/10.0 (Index 69) (SNMP ifIndex 638) (Generation 138)
Flags: SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol eth-switch, Generation: 163, Route table: 0
Flags: Trunk-Mode

```

```

user@switch> show class-of-service interface ge-0/0/0
Physical interface: ge-0/0/0, Index: 165
Queues supported: 8, Queues in use: 4
Shaping rate: 100000000 bps
...

```

**Meaning** In the output for the **show interfaces ge-0/0/0 statistics** command, the Traffic statistics: field shows that egress traffic is ~100 Mbps (100,223,104 bps). The output for the **show class-of-service interface ge-0/0/0** command shows that the shaping rate is 100,000,000 bps, which indicates that a port shaping of 100 Mbps is applied to the ge-0/0/0 interface.

### Verifying That Queue Shaping Has Been Applied

**Purpose** Verify that the queue shaping has been applied to the best-effort queue.

**Action** Following is the output before queue shaping is applied to the best-effort queue when there is egress traffic of 400 Mbps exiting on that interface:

```

user@switch> show interfaces ge-0/0/2 extensive
Physical interface: ge-0/0/2, Enabled, Physical link is Up
Interface index: 239, SNMP ifIndex: 548, Generation: 242
Link-level type: Ethernet, MTU: 1514, Speed: Auto, Duplex: Auto, BPDU Error:
None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online,
Media type: Copper
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x0
Link flags : None
CoS queues : 8 supported, 8 maximum usable queues
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:23:9c:0b:ae:8d, Hardware address: 00:23:9c:0b:ae:8d
Last flapped : 2012-07-07 03:21:52 UTC (1d 18:02 ago)
Statistics last cleared: 2012-07-07 23:54:34 UTC (21:29:59 ago)
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 2299853696 345934816 bps
Input packets: 0 0 pps
Output packets: 17967609 337827 pps
IPv6 transit statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Egress queues: 8 supported, 4 in use

```

```

Queue counters: Queued packets Transmitted packets Dropped packets

0 best-effort 0 18302337 0

1 assured-forw 0 0 0

5 expedited-fo 0 0 0

7 network-cont 0 0 0

Queue number: Mapped forwarding classes
0 best-effort
1 assured-forwarding
5 expedited-forwarding
7 network-control

Active alarms : None
Active defects : None
MAC statistics:
Total octets Receive Transmit
Total packets 0 2299853696
Unicast packets 0 17967609
Broadcast packets 0 0
Multicast packets 0 0
CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
Code violations 0

Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: Symmetric, Remote fault: OK, Link
partner Speed: 1000 Mbps
Local resolution:
Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 1
CoS information:
Direction : Output
CoS transmit queue Bandwidth Buffer Priority
Limit
% bps % usec low
0 best-effort 95 950000000 95 NA
none
7 network-control 5 50000000 5 NA
none
Interface transmit statistics: Disabled

Logical interface ge-1/0/10.0 (Index 69) (SNMP ifIndex 638) (Generation 138)
Flags: SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0

```

```

Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol eth-switch, Generation: 163, Route table: 0
Flags: Trunk-Mode

```

The Traffic statistics: field in this output shows that the egress traffic is ~400 Mbps (345,934,816 bps). When a queue shaping of 30 Mbps is applied to the best-effort queue, you see the following output for the **show interfaces ge-0/0/2 statistics** and **show class-of-service scheduler-map sched-map-be** commands:

```

user@switch> show interfaces ge-0/0/2 statistics
Physical interface: ge-0/0/2, Enabled, Physical link is Up
 Interface index: 239, SNMP ifIndex: 548, Generation: 242
 Link-level type: Ethernet, MTU: 1514, Speed: Auto, Duplex: Auto, BPDU Error:
None, MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled,
Flow control: Enabled, Auto-negotiation: Enabled, Remote fault: Online,
 Media type: Copper
 Device flags : Present Running
 Interface flags: SNMP-Traps Internal: 0x0
 Link flags : None
 CoS queues : 8 supported, 8 maximum usable queues
 Hold-times : Up 0 ms, Down 0 ms
 Current address: 00:23:9c:0b:ae:8d, Hardware address: 00:23:9c:0b:ae:8d
 Last flapped : 2012-07-07 03:21:52 UTC (1d 18:29 ago)
 Statistics last cleared: 2012-07-08 21:46:22 UTC (00:04:56 ago)
 Traffic statistics:
 Input bytes : 0 0 bps
 Output bytes : 5376128896 30097712 bps
 Input packets: 0 0 pps
 Output packets: 42001003 29392 pps
 IPv6 transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
 Input errors:
 Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
 Output errors:
 Carrier transitions: 0, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
 Egress queues: 8 supported, 4 in use
 Queue counters:
 Queued packets Transmitted packets Dropped packets

 0 best-effort 0 41986978 57813642

 1 assured-forw 0 0 0

 5 expedited-fo 0 0 0

 7 network-cont 0 0 0

 Queue number: Mapped forwarding classes
 0 best-effort
 1 assured-forwarding

```

```

5 expedited-forwarding
7 network-control
Active alarms : None
Active defects : None
MAC statistics:
Total octets Receive Transmit
Total packets 0 5376128896
Unicast packets 0 42001003
Broadcast packets 0 0
Multicast packets 0 0
CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
Code violations 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: Symmetric, Remote fault: OK, Link
partner Speed: 1000 Mbps
Local resolution:
Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 1
CoS information:
Direction : Output
CoS transmit queue Bandwidth Buffer Priority
Limit
0 best-effort % bps % usec
 r r r NA low
none
Interface transmit statistics: Disabled

Logical interface ge-1/0/10.0 (Index 69) (SNMP ifIndex 638) (Generation 138)
Flags: SNMP-Traps 0x0 Encapsulation: ENET2
Traffic statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Local statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol eth-switch, Generation: 163, Route table: 0
Flags: Trunk-Mode

```

```

user@switch> show class-of-service scheduler-map sched-map-be

```

```

Scheduler map: sched-map-be, Index: 31271

```



Scheduler: voice-sched-queue-shap, Forwarding class: best-effort, Index: 64106

Transmit rate: remainder, Rate Limit: none, Buffer size: remainder,  
 Buffer Limit: none, Priority: low  
 Excess Priority: unspecified  
 Shaping rate: 30000000 bps  
 Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

**Meaning** In the output for the **show interfaces ge-0/0/2 statistics** command, the Traffic statistics: field shows that the egress traffic is ~30 Mbps (30,097,712 bps). The output for the **show class-of-service scheduler-map sched-map-be** command, shows that a shaping rate of 30,000,000 bps (that is 30 Mbps) is applied to the best-effort queue.

**Related Documentation**

- [Defining CoS Code-Point Aliases \(CLI Procedure\) on page 85](#)
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#)
- [Defining CoS Forwarding Classes \(CLI Procedure\) on page 91](#)
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)
- [Configuring CoS Tail Drop Profiles \(CLI Procedure\) on page 100](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
- [Configuring Firewall Filters \(CLI Procedure\)](#)

## Example: Combining CoS with MPLS on EX Series Switches

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. The CoS value is included within the MPLS label, which is passed through the network, enabling end-to-end CoS across the network.

MPLS services are often used to ensure better performance for low-latency applications such as VoIP and other business-critical functions. These applications place specific demands on a network for successful transmission. CoS gives you the ability to control the mix of bandwidth, delay, jitter, and packet loss while taking advantage of the MPLS labeling mechanism.

This example shows how to configure CoS on an MPLS network that is using a unidirectional circuit cross-connect (CCC) from the ingress provider edge (PE) switch to the egress PE switch. for the customer-edge interface of the ingress provider edge (PE) switch. It describes adding the configuration of CoS components to the ingress PE switch, the egress PE switch, and the core provider switches of the existing MPLS network. Because of the unidirectional configuration, the DSCP classifier needs to be configured only on the ingress PE switch.

- [Requirements on page 72](#)
- [Overview and Topology on page 72](#)
- [Configuring the Local PE Switch on page 74](#)

- [Configuring the Remote PE Switch on page 76](#)
- [Configuring the Provider Switch on page 77](#)
- [Verification on page 78](#)

## Requirements

This example uses the following hardware and software components:

- Junos OS Release 10.1 or later for EX Series switches
- Three EX Series switches

Before you configure CoS with MPLS, be sure you have:

Configured an MPLS network with two PE switches and one provider switch. See *Example: Configuring MPLS on EX Series Switches*. This example assumes that an MPLS network has been configured using a cross circuit-connect (CCC).

## Overview and Topology

This example describes adding custom classifiers and custom rewrite rules to switches in an MPLS network that is using MPLS over CCC.

It is a unidirectional configuration. Therefore, you need to configure custom classifiers and custom rewrite rules as follows:

- On the ingress PE switch: custom DSCP classifier and custom EXP rewrite rule
- On the egress PE switch: custom EXP classifier
- On the provider switch: customer EXP classifier and custom EXP rewrite rule



**NOTE:** You can also configure schedulers and shapers as needed. If you are using assured-forwarding, expedited-forwarding, or other custom forwarding classes, we recommend that you configure a scheduler to support that forwarding class. See [“Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\)” on page 93](#).

The example creates a custom DSCP classifier (**dscp1**) on the ingress PE switch and binds this classifier to the CCC interface. It includes configuration of a policer on the ingress PE switch. The policer is applied as a filter on the label-switched path (LSP) **lsp\_to\_pe2\_ge1** (created in *Example: Configuring MPLS on EX Series Switches*) to ensure that the amount of traffic forwarded through the LSP never exceeds the requested bandwidth allocation.

This example creates a custom EXP rewrite rule (**exp1**) on the ingress PE switch, specifying a loss-priority and code point to be used for the expedited-forwarding class as the packet travels through the LSP. The switch applies this custom rewrite rule on the core interfaces **ge-0/0/5.0** and **ge-0/0/6.0**, which are the egress interfaces for this switch.

Table 15 on page 73 shows the CoS configuration components added to the ingress PE switch.

**Table 15: CoS Configuration Components on the Ingress PE Switch**

| Property                                           | Settings                         | Description                                                                                                                                             |
|----------------------------------------------------|----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local PE switch hardware                           | EX Series switch                 | PE-1                                                                                                                                                    |
| Policing filter configured and applied to the LSP. | <b>policing filter mypolicer</b> | Name of the rate-limiting policer.                                                                                                                      |
|                                                    | <b>filter myfilter</b>           | Name of the filter, which refers to the policer                                                                                                         |
| Custom DSCP classifier                             | <b>dscp1</b>                     | Specifies the name of the custom DSCP classifier                                                                                                        |
| Custom EXP rewrite rule                            | <b>e1</b>                        | Name of the custom EXP rewrite rule.                                                                                                                    |
| Customer-edge interface                            | <b>ge-0/0/1.0</b>                | Interface that receives packets from devices outside the network.<br><br>The custom DSCP classifier must be specified on this CCC interface.            |
| Core interfaces                                    | <b>ge-0/0/5.0 and ge-0/0/6.0</b> | Interfaces that transmit MPLS packets to other switches within the MPLS network.<br><br>The EXP rewrite rule is applied implicitly to these interfaces. |

Table 16 on page 73 shows the CoS configuration components added to the egress PE switch in this example.

**Table 16: CoS Configuration Components of the Egress PE Switch**

| Property                             | Settings                         | Description                                                                                                                                                                    |
|--------------------------------------|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote provider edge switch hardware | EX Series switch                 | PE-2                                                                                                                                                                           |
| Custom EXP classifier                | <b>exp1</b>                      | Name of custom EXP classifier                                                                                                                                                  |
| Customer-edge interface              | <b>ge-0/0/1.0</b>                | Interface that transmits packets from this network to devices outside the network. No CoS classifier is specified for this interface. A scheduler can be specified.            |
| Core interfaces                      | <b>ge-0/0/7.0 and ge-0/0/8.0</b> | Core interfaces on PE-2 that receive MPLS packets from the provider switch. The EXP classifier is enabled by default on the switch and applied implicitly to these interfaces. |

Table 17 on page 74 shows the MPLS configuration components used for the provider switch in this example.

**Table 17: CoS Configuration Components of the Provider Switch**

| Property                                                                        | Settings                                | Description                                                                                                                                                                                         |
|---------------------------------------------------------------------------------|-----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Provider switch hardware                                                        | EX Series switch                        | Transit switch within the MPLS network configuration.                                                                                                                                               |
| Custom EXP classifier                                                           | <b>exp1</b>                             | Name of the custom EXP classifier.                                                                                                                                                                  |
| Custom EXP rewrite rule                                                         | <b>e1</b>                               | Name of the custom EXP rewrite rule.                                                                                                                                                                |
| Core interfaces receiving packets from other MPLS switches.                     | <b>ge-0/0/5.0</b> and <b>ge-0/0/6.0</b> | Interfaces that connect the provider switch to the ingress PE switch (PE-1). The EXP classifier is enabled by default on the switch and applied implicitly to these interfaces.                     |
| Core interfaces transmitting packets to other switches within the MPLS network. | <b>ge-0/0/7.0</b> and <b>ge-0/0/8.0</b> | Interfaces that transmit packets to the egress PE (PE-2). The EXP rewrite rule is applied implicitly on these interfaces. Schedulers can also be specified and will be applied to these interfaces. |

## Configuring the Local PE Switch

**CLI Quick Configuration** To quickly configure a custom DSCP classifier, custom EXP rewrite rule, and a policer on the local PE switch, copy the following commands and paste them into the switch terminal window of PE-1:

```
[edit]
set class-of-service classifiers dscp dscp1 import default
set class-of-service classifiers dscp dscp1 forwarding-class expedited-forwarding loss-priority
low code-points 000111
set class-of-service rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111
set class-of-service interfaces ge-0/0/1 unit 0 classifier dscp1
set firewall policer mypolicer if-exceeding bandwidth-limit 500m
set firewall policer mypolicer if-exceeding burst-size-limit 33553920
set firewall policer mypolicer then discard
set firewall family any filter myfilter term t1 then policer mypolicer
set protocols mpls label-switched-path lsp_to_pe2_ge1 to 127.1.1.3 policing filter myfilter
```

**Step-by-Step Procedure** To configure a custom DSCP classifier, custom EXP rewrite rule, and a policer on the ingress PE switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:  

```
[edit class-of-service]
user@switch# set classifiers dscp dscp1 import default
```
2. Add the expedited-forwarding class to this custom DSCP classifier, specifying a loss priority and code point:  

```
[edit class-of-service]
```

- ```

user@switch# set classifiers dscp dscp1 forwarding-class expedited-forwarding loss-priority
low code-points 000111

```
3. Specify the values for the custom EXP rewrite rule, **e1**:


```

[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority
low code-point 111

```
 4. Bind the DSCP classifier to the CCC interface:


```

[edit ]
user@switch# set class-of-service interfaces ge-0/0/1 unit 0 classifier dscp1

```
 5. Specify the number of bits per second permitted, on average, for the firewall policer, which will later be applied to the LSP:


```

[edit firewall]
set policer mypolicer if-exceeding bandwidth-limit 500m

```
 6. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:


```

[edit firewall policer]
set mypolicer if-exceeding burst-size-limit 33553920

```
 7. Discard traffic that exceeds the rate limits for this policer:


```

[edit firewall policer]
set mypolicer then discard

```
 8. To reference the policer, configure a filter term that includes the policer action:


```

[edit firewall]
user@switch# set family any filter myfilter term t1 then policer mypolicer

```
 9. Apply the filter to the LSP:


```

[edit protocols mpls]
set label-switched-path lsp_to_pe2_ge1 policing filter myfilter

```

Results Display the results of the configuration:

```

[edit]
user@switch# show
class-of-service {
  classifiers {
    dscp dscp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 000111;
      }
    }
  }
  interfaces {
    ge-0/0/1 {
      unit 0 {
        classifiers {
          dscp dscp1;
        }
      }
    }
  }
  rewrite-rules {
    exp e1 {
      forwarding-class expedited-forwarding {

```

```
        loss-priority low code-point 111;
    }
}
}
firewall {
    family any {
        filter myfilter {
            term t1 {
                then policer mypolicer;
            }
        }
    }
    policer mypolicer {
        if-exceeding {
            bandwidth-limit 500m;
            burst-size-limit 33553920;
        }
        then discard;
    }
}
```

Configuring the Remote PE Switch

CLI Quick Configuration To quickly configure a custom EXP classifier on the remote PE switch, copy the following commands and paste them into the switch terminal window of PE-2:

```
[edit]
set class-of-service classifiers exp exp1 import default
set class-of-service classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010
```

Step-by-Step Procedure To configure a custom EXP classifier on the egress PE switch:

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 import default
```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority
low code-points 010
```

Results Display the results of the configuration:

```
[edit]
user@switch# show
class-of-service {
    classifiers {
        exp exp1 {
            import default;
            forwarding-class expedited-forwarding {
                loss-priority low code-points 010;
            }
        }
    }
}
```

```
}
```

Configuring the Provider Switch

CLI Quick Configuration To quickly configure a custom EXP classifier and a custom EXP rewrite rule on the provider switch, copy the following commands and paste them into the switch terminal window of the provider switch:

```
[edit]
set class-of-service classifiers exp exp1 import default
set class-of-service classifiers exp exp1 forwarding-class expedited-forwarding loss-priority low
code-points 010
set class-of-service rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority low
code-point 111
```

Step-by-Step Procedure To configure a custom EXP classifier and a custom EXP rewrite rule on the provider switch:

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:


```
[edit class-of-service]
user@switch# set classifiers exp exp1 import default
```
2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:


```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority
low code-points 010
```
3. Specify the values for the custom EXP rewrite rule, **e1**:


```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority
low code-point 111
```

Results Display the results of the configuration:

```
[edit]
user@switch# show
class-of-service {
  classifiers {
    exp exp1 {
      import default;
      forwarding-class expedited-forwarding {
        loss-priority low code-points 010;
      }
    }
  }
  rewrite-rules {
    exp e1 {
      forwarding-class expedited-forwarding {
        loss-priority low code-point 111;
      }
    }
  }
}
```

Verification

To confirm that the configuration is working properly, perform these tasks:

- [Verifying That the Policer Firewall Filter Is Operational on page 78](#)
- [Verifying That the CoS Classifiers Are Going to the Right Queue on page 78](#)
- [Verifying the CoS Forwarding Table Mapping on page 81](#)
- [Verifying the Rewrite Rules on page 82](#)

Verifying That the Policer Firewall Filter Is Operational

Purpose Verify the operational state of the policer that is configured on the ingress PE switch.

Action user@switch> show firewall
Filter: myfilter
Policers:
Name Packets
mypolicer-t1 0

Meaning This output shows that the firewall filter **mypolicer** has been created.

Verifying That the CoS Classifiers Are Going to the Right Queue

Purpose Verify that the CoS classifiers are going to the right queue.

Action user@switch> show class-of-service forwarding-table classifier

Classifier table index: 7, # entries: 64, Table type: DSCP

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	0	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0
17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0
38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
47	101111	0	0
48	110000	3	0
49	110001	3	0
50	110010	3	0
51	110011	3	0
52	110100	3	0
53	110101	3	0
54	110110	3	0
55	110111	3	0

56	111000	3	0
57	111001	3	0
58	111010	3	0
59	111011	3	0
60	111100	3	0
61	111101	3	0
62	111110	3	0
63	111111	3	0

Classifier table index: 11, # entries: 8, Table type: IEEE 802.1

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	3	0
7	111	3	0

Classifier table index: 12, # entries: 8, Table type: IPv4 precedence

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	3	0
7	111	3	0

Classifier table index: 16, # entries: 8, Table type: Untrust

Entry #	Code point	Forwarding-class #	PLP
0	000	0	0
1	001	0	0
2	010	0	0
3	011	0	0
4	100	0	0
5	101	0	0
6	110	0	0
7	111	0	0

Classifier table index: 9346, # entries: 64, Table type: DSCP

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	1	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0

17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0
38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
47	101111	0	0
48	110000	3	0
49	110001	3	0
50	110010	3	0
51	110011	3	0
52	110100	3	0
53	110101	3	0
54	110110	3	0
55	110111	3	0
56	111000	3	0
57	111001	3	0
58	111010	3	0
59	111011	3	0
60	111100	3	0
61	111101	3	0
62	111110	3	0
63	111111	3	0

Meaning This output shows that a new DSCP classifier has been created, index **9346**, on the ingress PE switch (PE-1).

Verifying the CoS Forwarding Table Mapping

Purpose For each logical interface, display either the table index of the classifier for a given code point type or the queue number (if it is a fixed classification) in the forwarding table.

Action user@switch>show class-of-service forwarding-table classifier mapping

Interface	Index	Table Index/	Table type
		Q num	
ge-0/0/1.0	92	9346	DSCP

Meaning The results show that the new DSCP classifier, index number **9346**, is bound to interface **ge-0/0/1.0**.

Verifying the Rewrite Rules

Purpose Display mapping of the queue number and loss priority to code point value for each rewrite rule as it exists in the forwarding table.

Action user@switch>show class-of-service forwarding-table rewrite-rule

Rewrite table index: 31, # entries: 4, Table type: DSCP

FC#	Low bits	State	High bits	State
0	000000	Enabled	000000	Enabled
1	101110	Enabled	101110	Enabled
2	001010	Enabled	001100	Enabled
3	110000	Enabled	111000	Enabled

Rewrite table index: 34, # entries: 4, Table type: IEEE 802.1

FC#	Low bits	State	High bits	State
0	000	Enabled	001	Enabled
1	010	Enabled	011	Enabled
2	100	Enabled	101	Enabled
3	110	Enabled	111	Enabled

Rewrite table index: 35, # entries: 4, Table type: IPv4 precedence

FC#	Low bits	State	High bits	State
0	000	Enabled	000	Enabled
1	101	Enabled	101	Enabled
2	001	Enabled	001	Enabled
3	110	Enabled	111	Enabled

Rewrite table index: 9281, # entries: 1, Table type: EXP

FC#	Low bits	State	High bits	State
1	111	Enabled	000	Disabled

Meaning This output shows that a new EXP classifier with the index number **9281** has been created.

Related Documentation

- [Configuring MPLS on Provider Edge Switches Using Circuit Cross-Connect \(CLI Procedure\)](#)
- [Configuring MPLS on Provider Edge Switches Using IP Over MPLS \(CLI Procedure\)](#)
- [Understanding Using CoS with MPLS Networks on EX Series Switches on page 29](#)
- [Monitoring CoS Forwarding Classes on page 168](#)

CHAPTER 3

Configuration Tasks

- [Configuring CoS \(J-Web Procedure\) on page 84](#)
- [Defining CoS Code-Point Aliases \(CLI Procedure\) on page 85](#)
- [Defining CoS Code-Point Aliases \(J-Web Procedure\) on page 85](#)
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#)
- [Defining CoS Classifiers \(J-Web Procedure\) on page 89](#)
- [Defining CoS Forwarding Classes \(CLI Procedure\) on page 91](#)
- [Defining CoS Forwarding Classes \(J-Web Procedure\) on page 91](#)
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)
- [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)
- [Defining CoS Scheduler Maps \(J-Web Procedure\) on page 98](#)
- [Configuring CoS Tail Drop Profiles \(CLI Procedure\) on page 100](#)
- [Defining CoS Drop Profiles \(J-Web Procedure\) on page 100](#)
- [Defining CoS Rewrite Rules \(CLI Procedure\) on page 102](#)
- [Defining CoS Rewrite Rules \(J-Web Procedure\) on page 103](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
- [Assigning CoS Components to Interfaces \(J-Web Procedure\) on page 106](#)
- [Configuring Junos OS EZQoS for CoS \(CLI Procedure\) on page 108](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS \(CLI Procedure\) on page 109](#)
- [Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect \(CLI Procedure\) on page 111](#)
- [Configuring CoS on Provider Switches of an MPLS Network \(CLI Procedure\) on page 113](#)
- [Configuring MPLS on Provider Switches \(CLI Procedure\) on page 114](#)
- [Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards \(CLI Procedure\) on page 115](#)
- [Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\) on page 116](#)
- [Configuring Shaping for CoS \(CLI Procedure\) on page 119](#)
- [Configuring CoS Congestion Management \(CLI Procedure\) on page 120](#)

Configuring CoS (J-Web Procedure)

The Class of Service Configuration pages allow you to configure the Junos CoS components. You can configure forwarding classes for transmitting packets, define which packets are placed into each output queue, and schedule the transmission service level for each queue. After defining the CoS components you must assign classifiers to the required physical and logical interfaces.

Using the Class of Service Configuration pages, you can configure various CoS components individually or in combination to define particular CoS services.

To configure CoS components :

1. In the J-Web interface, select **Configure>Class of Service**.
2. On the Class of Service Configuration page, select one of the following options depending on the CoS component that you want to define. Enter information into the pages as described in the respective table:
 - To define or edit CoS value aliases, select **CoS Value Aliases** .
 - To define or edit forwarding classes and assign queues, select **Forwarding Classes**.
 - To define or edit classifiers, select **Classifiers** .
 - To define or edit rewrite rules, select **Rewrite Rules**.
 - To define or edit schedulers, select **Schedulers**.
 - To define or edit virtual channel groups, select **Interface Associations**.
3. Click **Apply** after completing configuration on any Configuration page.

Related Documentation

- [Defining CoS Classifiers \(J-Web Procedure\) on page 89](#)
- [Defining CoS Code-Point Aliases \(J-Web Procedure\) on page 85](#)
- [Defining CoS Forwarding Classes \(J-Web Procedure\) on page 91](#)
- [Defining CoS Rewrite Rules \(J-Web Procedure\) on page 103](#)
- [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)
- [Assigning CoS Components to Interfaces \(J-Web Procedure\) on page 106](#)

Defining CoS Code-Point Aliases (CLI Procedure)

You can use code-point aliases to streamline the process of configuring CoS features on your EX Series switch. A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers, drop-profile maps, and rewrite rules.

You can configure code-point aliases for the following CoS marker types:

- **dscp** and **dscp-ipv6**—Handles incoming IPv4 and IPv6 packets, respectively.
- **ieee-802.1**—Handles Layer 2 CoS.
- **inet-precedence**—Handles incoming IPv4 packets. IP precedence mapping requires only the higher order three bits of the DSCP field.

To configure a code-point alias for a specified CoS marker type (**dscp**), assign an alias (**my1**) to the code-point (**110001**):

```
[edit class-of-service code-point-aliases]
user@switch# set dscp my1 110001
```

The **my1** alias will be applicable for incoming IPv4 packets.

Related Documentation

- [Defining CoS Code-Point Aliases \(J-Web Procedure\) on page 85](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Monitoring CoS Value Aliases on page 174](#)
- [Understanding CoS Code-Point Aliases on page 8](#)

Defining CoS Code-Point Aliases (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

You can use the J-Web interface to define CoS code-point aliases on an EX Series switch. By defining aliases you can assign meaningful names to a particular set of bit values and refer to them when configuring CoS components.

To define CoS code-point aliases:

1. Select **Configure > Class of Service > CoS Value Aliases**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

2. Click one of the following options:

- **Add**—Adds a code-point alias. Enter information into the code point alias page as described in [Table 18 on page 86](#).
- **Edit**—Modifies an existing code-point alias. Enter information into the code point alias page as described in [Table 18 on page 86](#).
- **Delete**—Deletes an existing code-point alias.

[Table 18 on page 86](#) describes the related fields.

Table 18: CoS Value Aliases Configuration Fields

Field	Function	Your Action
Code point name	Specifies the name for a code-point—for example, af11 or be .	Enter a name.
Code point type	Specifies a code-point type. The code-point type can be DSCP or IP precedence.	Select a value.
Code point value bits	<p>Specifies the CoS value for which an alias is defined.</p> <p>Changing this value alters the behavior of all classifiers that refer to this alias.</p>	<p>To specify a CoS value, type it in the appropriate format:</p> <ul style="list-style-type: none"> • For DSCP CoS values, use the format xxxxxx, where x is 1 or 0—for example, 101110. • For IP precedence CoS values, use the format xxx, where x is 1 or 0—for example, 111.

- Related Documentation**
- [Defining CoS Code-Point Aliases \(CLI Procedure\) on page 85](#)
 - [Monitoring CoS Value Aliases on page 174](#)
 - [Example: Configuring CoS on EX Series Switches on page 47](#)

Defining CoS Classifiers (CLI Procedure)

Packet classification associates incoming packets with a particular CoS servicing level. Classifiers associate packets with a forwarding class and loss priority and assign packets to output queues based on the associated forwarding class. Junos OS supports two general types of classifiers:

- Behavior aggregate (BA) classifier—Examine the CoS value in the packet header. The value in this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP) value, IP precedence value, or IEEE 802.1p value. EX Series switches except EX4300 switches support two types of loss priorities: **high** and **low**. EX4300 switches support four types of loss priorities: **high**, **medium-high**, **low**, and **medium-low**.

You can configure BA classifiers for the following CoS marker types:

- **dscp** and **dscp-ipv6**—Handles incoming IPv4 and IPv6 packets, respectively.
- **ieee-802.1**—Handles Layer 2 CoS.
- **inet-precedence**—Handles incoming IPv4 packets. IP precedence mapping requires only the higher order three bits of the DSCP field.
- Multifield (MF) classifier—Examine multiple fields in the packet such as source and destination addresses and source and destination port numbers of the packet. With MF classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.



NOTE: Juniper Networks EX8200 Ethernet Switches implement the on-demand ternary content addressable memory (TCAM) allocation of memory so that when additional TCAM space is required for CoS, the space is allocated from the free TCAM space or from the unused TCAM space. An error log message is generated when you configure CoS classifiers beyond the available TCAM space that includes both the free and unused space.

The following example describes how to configure a BA classifier (**ba-classifier**) as the default DSCP map for handling IPv4 traffic and to apply the BA classifier to either a specific Gigabit Ethernet interface or to all the Gigabit Ethernet interfaces on the switch. The BA classifier assigns loss priorities, as shown in [Table 19 on page 87](#), to incoming packets in the four forwarding classes.

You can use the same procedure to set MF classifiers (except that you would use firewall filter rules).

Table 19: BA-classifier Loss Priority Assignments

Forwarding Class	For CoS Traffic Type	ba-classifier Assignment
be	Best-effort traffic	High-priority code point: 000001

Table 19: BA-classifier Loss Priority Assignments (*continued*)

ef	Expedited-forwarding traffic	High-priority code point: 101110
af	Assured-forwarding traffic	High-priority code point: 001100
nc	Network-control traffic	High-priority code point: 110001

To configure a DSCP BA classifier named **ba-classifier** as the default DSCP map:

- Associate code point 000001 with forwarding class **be** and loss priority **high**:

```
[edit class-of-service classifiers]
user@switch# set dscp ba-classifier import default forwarding-class be loss-priority high
code-points 000001
```

- Associate code point 101110 with forwarding class **ef** and loss priority **high**:

```
[edit class-of-service classifiers]
user@switch# set dscp ba-classifier forwarding-class ef loss-priority high code-points 101110
```

- Associate code point 001100 with forwarding class **af** and loss priority **high**:

```
[edit class-of-service classifiers]
user@switch# set dscp ba-classifier forwarding-class af loss-priority high code-points 001100
```

- Associate code point 110001 with forwarding class **nc** and loss priority **high**:

```
[edit class-of-service classifiers]
user@switch# set dscp ba-classifier forwarding-class nc loss-priority high code-points 110001
```

- Apply the classifier to a specific interface or to all Gigabit Ethernet interfaces on the switch.

- To apply the classifier to a specific interface:

```
[edit class-of-service interfaces]
user@switch# set ge-0/0/0 unit 0 classifiers dscp ba-classifier
```

- To apply the classifier to all Gigabit Ethernet interfaces on the switch, use wildcards for the interface name and the logical-interface (unit) number:

```
[edit class-of-service interfaces]
user@switch# set ge-* unit * classifiers dscp ba-classifier
```



NOTE: On EX8200 switches, it can take a long time to install code-point classifiers on multiple interfaces (for example, approximately 25 minutes to install 64 code-point classifiers on multiple interfaces in the order of 280 or more).

Related Documentation

- [Defining CoS Classifiers \(J-Web Procedure\) on page 89](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
- [Monitoring CoS Classifiers on page 167](#)
- [Understanding CoS Classifiers on page 11](#)

- [Troubleshooting a CoS Classifier Configuration for a TCAM Space Error on page 234](#)

Defining CoS Classifiers (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

You can use the J-Web interface to define CoS classifiers on an EX Series switch. Classifiers examine the CoS value or alias of an incoming packet and assign the packet a level of service by setting its forwarding class and loss priority.

To define CoS classifiers:

1. Select **Configure > Class of Service > Classifiers**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

2. Click one of the following options:

- **Add**—Adds a classifier. Enter information into the classifier page as described in [Table 20 on page 89](#).
- **Edit**—Modifies an existing classifier. Enter information into the classifier page as described in [Table 20 on page 89](#).
- **Delete**—Deletes an existing classifier.

Table 20: Classifiers Configuration Fields

Field	Function	Your Action
Classifier Name	Specifies the name for a classifier.	To name a classifier, type the name—for example, ba-classifier .
Classifier Type	Specifies the type of classifier: dscp , ieee-802.1 , or inet-precedence .	Select a value from the list.

Table 20: Classifiers Configuration Fields (*continued*)

Field	Function	Your Action
Code Point Mapping	Sets the forwarding classes and the packet loss priorities (PLPs) for specific CoS values and aliases.	<p>To add a code point mapping:</p> <ol style="list-style-type: none"> 1. Click Add. 2. Select the code point. 3. Select a forwarding class from the following list: <ul style="list-style-type: none"> • expedited-forwarding—Provides low loss, low delay, low jitter, assured bandwidth, and end-to-end service. Packets can be forwarded out of sequence or dropped. • best-effort—Provides no special CoS handling of packets. Typically, RED drop profile is aggressive and no loss priority is defined. • assured-forwarding—Provides high assurance for packets within the specified service profile. Excess packets are dropped. • network-control—Packets can be delayed but not dropped. 4. Select the loss priority. <p>To assign a loss priority, select one:</p> <ul style="list-style-type: none"> • high—Packet has a high loss priority. • low—Packet has a low loss priority.

- Related Documentation**
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#)
 - [Example: Configuring CoS on EX Series Switches on page 47](#)
 - [Monitoring CoS Classifiers on page 167](#)
 - [Understanding CoS Classifiers on page 11](#)

Defining CoS Forwarding Classes (CLI Procedure)

Forwarding classes allow you to group packets for transmission. Based on forwarding classes, you assign packets to output queues.

By default, four categories of forwarding classes are defined: best effort, assured forwarding, expedited forwarding, and network control. EX Series switches support up to 16 forwarding classes.

You can configure forwarding classes in one of the following ways:

- Using **class** statement—You can configure up to 16 forwarding classes and you can map multiple forwarding classes to single queue.
- Using **queue** statement—You can configure up to 8 forwarding classes and you can map one forwarding class to one queue.

This example uses the **class** statement to configure forwarding classes.

To configure CoS forwarding classes, map the forwarding classes to queues:

```
[edit class-of-service forwarding-classes]
user@switch# set class be queue-num 0
user@switch# set class ef queue-num 1
user@switch# set class af queue-num 2
user@switch# set class nc queue-num 3
user@switch# set class ef1 queue-num 4
user@switch# set class ef2 queue-num 5
user@switch# set class af1 queue-num 6
user@switch# set class nc1 queue-num 7
```

Related Documentation

- [Defining CoS Forwarding Classes \(J-Web Procedure\) on page 91](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Example: Using CoS Forwarding Classes to Prioritize Snooped Packets in Heavy Network Traffic](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
- [Monitoring CoS Forwarding Classes on page 168](#)
- [Understanding CoS Forwarding Classes on page 14](#)

Defining CoS Forwarding Classes (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

You can define CoS forwarding classes on an EX Series switch using the J-Web interface. Assigning a forwarding class to a queue number affects the scheduling and marking of a packet as it transits a switch.

To define forwarding classes:

1. Select **Configure > Class of Service > Forwarding Classes**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See *Using the Commit Options to Commit Configuration Changes* for details about all commit options.

2. Click one of the following options:
 - **Add**—Adds a forwarding class. Enter information into the forwarding class page as described in [Table 21 on page 92](#).
 - **Edit**—Modifies an existing forwarding class. Enter information into the forwarding class page as described in [Table 21 on page 92](#).
 - **Delete**—Deletes an existing forwarding class.

Table 21: Forwarding Classes Configuration Fields

Field	Function	Your Action
Forwarding Class Summary		
Queue #	<p>Specifies the internal queue numbers to which forwarding classes are assigned.</p> <p>By default, if a packet is not classified, it is assigned to the class associated with queue 0. You can have more than one forwarding class to a queue number.</p>	<p>To specify an internal queue number, select an integer from 0 through 7, appropriate for your platform.</p> <p>NOTE: For EX4300 switches, to specify an internal queue number, select an integer from 0 through 11.</p>
Forwarding Class Name	<p>Specifies the forwarding class names assigned to specific internal queue numbers.</p> <p>By default, four forwarding classes are assigned to queue numbers 0 (best-effort), 1 (assured-forwarding), 5 (expedited-forwarding), and 7 (network-connect).</p> <p>NOTE: For EX4300 switches, by default the forwarding classes are assigned to queue numbers 0 (best-effort), 1 (expedited-forwarding), 2 (assured-forwarding), 3 (network-connect), 8 (mcast-be), 9 (mcast-ef), 10 (mcast-af), and 11 (mcast-nc).</p>	Type the name—for example, be-class .

Related Documentation

- [Defining CoS Forwarding Classes \(CLI Procedure\) on page 91](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Example: Using CoS Forwarding Classes to Prioritize Snooped Packets in Heavy Network Traffic](#)
- [Monitoring CoS Forwarding Classes on page 168](#)

- [Assigning CoS Components to Interfaces \(J-Web Procedure\) on page 106](#)
- [Understanding CoS Forwarding Classes on page 14](#)

Defining CoS Schedulers and Scheduler Maps (CLI Procedure)

You use schedulers to define the class-of-service (CoS) properties of output queues. These properties include the amount of interface bandwidth assigned to the queue, the size of the memory buffer allocated for storing packets, the priority of the queue, and the drop profiles associated with the queue.

You associate the schedulers with forwarding classes by means of scheduler maps. You can then associate each scheduler map with an interface, thereby configuring the queues and packet schedulers that operate according to this mapping.



NOTE: On EX Series switches, you cannot configure a scheduler map on an individual interface that is a member of a link aggregation group (LAG). Instead, you must configure the scheduler map on the LAG itself (that is, on the aggregated Ethernet (ae) interface).

You can associate up to four user-defined scheduler maps with an interface.

This topic describes:

- [Configuring a Scheduler and a Scheduler Map on page 93](#)
- [Assigning a Scheduler Map to Interfaces on page 94](#)
- [Assigning Scheduler Maps to Interfaces on EX8200 Line Cards That Include Oversubscribed Ports on page 94](#)

Configuring a Scheduler and a Scheduler Map

You can define the properties for an output queue by configuring a scheduler. You can then define a scheduler map to associate a forwarding class with a scheduler.

To configure a scheduler and a scheduler map:

1. Create a scheduler, and assign one or more output queue properties to it:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name output-queue-properties
```

For various properties that you can define for an output queue, see the [schedulers](#) hierarchy.

2. Configure a scheduler map that associates the scheduler with the forwarding class:

```
[edit class-of-service]
user@switch# set scheduler-maps map-name forwarding-class class-name scheduler
scheduler-name
```

Assigning a Scheduler Map to Interfaces

After defining a scheduler map, you can assign the scheduler map to one or more interfaces. You can also assign the scheduler map to multiple interfaces by using a wildcard representation of the interface or Virtual Chassis Ports (VCPs).

Following are sample syntaxes and examples for assigning a scheduler map to a single or to multiple interfaces:

- To assign the scheduler map to one interface:

```
[edit class-of-service interfaces]
user@switch# set interface-name scheduler-map map-name
```

- To assign the scheduler map to more than one interface, you can use a wildcard representation of the interface:

```
[edit class-of-service interfaces]
user@switch# set wild-card-representation-of-interface-name scheduler-map map-name
```

For example, following is the configuration to assign the **be-map** scheduler map to all Gigabit Ethernet interfaces (**ge-***):

```
[edit class-of-service interfaces]
user@switch# set ge-* scheduler-map be-map
```

- To assign the scheduler map to all VCPs:

```
[edit class-of-service interfaces]
user@switch# set wild-card-representation-of-vcp scheduler-map map-name
```



NOTE: You can assign a scheduler map to a VCP only on EX4200, EX4300 or EX4500 switches that are members of Virtual Chassis composed exclusively either of EX4200 switches, EX4300 switches or of EX4500 switches, or that are members of a mixed Virtual Chassis composed of EX4200, EX4300, and EX4500 switches.

For example, following is the configuration to assign the **be-map** scheduler map to all VCPs:

```
[edit class-of-service interfaces]
user@switch# set vcp-* scheduler-map be-map
```

Assigning Scheduler Maps to Interfaces on EX8200 Line Cards That Include Oversubscribed Ports

Some line cards available for Juniper Networks EX8200 Ethernet Switches include oversubscribed ports that are combined in logical port groups that share bandwidth. These oversubscribed ports handle traffic differently than ports that provide continuous line-rate bandwidth. You might need to configure CoS queues differently for oversubscribed ports than for line-rate ports. For more information about EX8200 line cards that include oversubscribed ports, see [“Understanding CoS Queues on EX8200 Line Cards That Include Oversubscribed Ports” on page 34](#).

For interfaces on oversubscribed EX8200 line cards, you use the same procedure to configure CoS schedulers as you do for other interfaces. However, you must assign the same scheduler map to all the interfaces in a port group. When you assign a scheduler map to one interface in a port group, you do not need to assign the scheduler map to the remaining interfaces in the port group. The switch automatically uses that scheduler map for all the interfaces in the port group when you bring the interfaces up. Therefore, you do not need to assign the scheduler map to the remaining interfaces in that port group.

If you assign different scheduler maps to different interfaces in a port group, you do not receive an error when you commit the configuration. Instead, an error is logged in the system log. When you bring an interface in the port group up, the default scheduler map is assigned to all interfaces in the port group. If you assign a scheduler map to an interface that is down and if that scheduler map is different from the scheduler map being used by the currently operating interfaces in the port group, then the default scheduler map is used by all interfaces in the port group, even the currently operating ones, when you bring the interface up.

To assign a scheduler map to a port group, assign a scheduler map to at least one interface in the port group:

```
[edit class-of-service interfaces]
user@switch# set interface-name scheduler-map map-name
```

Considering that the xe-0/0/2 interface is part of a port group, following is the configuration to assign a scheduler map named **ef-map** to a port group that contains xe-0/0/2:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/2 scheduler-map ef-map
```

Related Documentation

- [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
- [Monitoring CoS Scheduler Maps on page 172](#)
- [Understanding CoS Schedulers on page 17](#)

Defining CoS Schedulers (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

You can use the J-Web interface to define CoS schedulers on an EX Series switch. Using schedulers, you can assign attributes to queues and thereby provide congestion control for a particular class of traffic. These attributes include the amount of interface bandwidth, memory buffer size, transmit rate, and schedule priority.

To configure schedulers:

1. Select **Configure > Class of Service > Schedulers**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See *Using the Commit Options to Commit Configuration Changes* for details about all commit options.

2. Click one of the following options:
 - **Add**—Adds a scheduler. Enter information into the Schedulers page as described in [Table 22 on page 96](#).
 - **Edit**—Modifies an existing scheduler. Enter information into the Schedulers page as described in [Table 22 on page 96](#).
 - **Delete**—Deletes an existing scheduler.

Table 22: Schedulers Configuration Page

Field	Function	Your Action
Scheduler name	Specifies the name for a scheduler.	To name a scheduler, type the name—for example, be-scheduler .
Scheduling priority	<p>Sets the transmission priority of the scheduler, which determines the order in which an output interface transmits traffic from the queues.</p> <p>You can set the scheduling priority at different levels in the order of increasing priority from low to high.</p> <p>A high-priority queue with a high transmission rate might lock out lower-priority traffic.</p>	<p>To set a priority, select one:</p> <ul style="list-style-type: none"> • low—Packets in this queue are transmitted last. • strict-high—Packets in this queue are transmitted first. • To specify no scheduling priority, select the blank check box.

Table 22: Schedulers Configuration Page (*continued*)

Field	Function	Your Action
Buffer size	<p>Defines the size of the delay buffer.</p> <p>By default, queues 0 through 11 are allotted the following percentages of the total available buffer space:</p> <ul style="list-style-type: none"> • Queue 0—75 percent • Queue 1—0 percent • Queue 2—0 percent • Queue 3—5 percent • Queue 4—0 percent • Queue 5—0 percent • Queue 6—0 percent • Queue 7—0 percent • Queue 8—15 percent • Queue 9—0 percent • Queue 10—0 percent • Queue 11—5 percent <p>NOTE: A large buffer size value correlates with a greater possibility of packet delays. Such a value might not be practical for sensitive traffic such as voice or video.</p>	<p>To define a delay buffer size for a scheduler, select the appropriate option:</p> <ul style="list-style-type: none"> • To specify no buffer size, select the blank check box. • To specify buffer size as a percentage of the total buffer, select Percent and type an integer from 1 through 100. • To specify buffer size as the remaining available buffer, select Remainder. <p>NOTE: On EX8200 and EX4300 switches, you can specify the buffer size as a temporal value. The queuing algorithm will then drop packets after it has queued a computed number of bytes. This number is the product of the logical interface speed and the configured temporal value.</p>
Shaping rate	<p>Specifies the rate at which queues transmit packets.</p>	<ul style="list-style-type: none"> • To specify shaping rate as a percentage, select Percent and type an integer from 1 through 100. • To specify shaping rate as a number, select Rate and enter a value. • To specify no shaping rate, select the blank check box.

Table 22: Schedulers Configuration Page (*continued*)

Field	Function	Your Action
Transmit rate	<p>Defines the transmission rate of a scheduler.</p> <p>The transmit rate determines the traffic bandwidth from each forwarding class you configure.</p> <p>By default, queues 0 through 11 are allotted the following percentages of the transmission capacity:</p> <ul style="list-style-type: none"> • Queue 0—75 percent • Queue 1—0 percent • Queue 2—0 percent • Queue 3—5 percent • Queue 4—0 percent • Queue 5—0 percent • Queue 6—0 percent • Queue 7—0 percent • Queue 8—15 percent • Queue 9—0 percent • Queue 10—0 percent • Queue 11—5 percent 	<p>To define a transmit rate, select the appropriate option:</p> <ul style="list-style-type: none"> • To enforce the exact transmission rate, select Rate and enter a value. • To specify the remaining transmission capacity, select Remainder Available. • To specify a percentage of transmission capacity, select Percent and type an integer from 1 through 100. • To specify no transmit rate, select the blank check box.
Excess rate NOTE: This option is supported only on EX4300 switches.	<p>Defines the excess rate of a scheduler.</p>	<p>To define the excess rate, select the appropriate option:</p> <ul style="list-style-type: none"> • To specify a percentage of the excess rate, select Percent and type an integer from 1 through 100. • To specify no excess rate, select the blank check box.

Related Documentation

- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Monitoring CoS Scheduler Maps on page 172](#)

Defining CoS Scheduler Maps (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

You can use the J-Web interface to configure CoS scheduler maps on an EX Series switch.



NOTE: On EX Series switches, you cannot configure a scheduler map on an individual interface that is a member of a link aggregation group (LAG). Instead, you must configure the scheduler map on the LAG itself (that is, on the aggregated Ethernet (ae) interface).

To configure scheduler maps:

1. Select **Configure > Class of Service > Scheduler Maps**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See *Using the Commit Options to Commit Configuration Changes* for details about all commit options.

2. Click one of the following options:
 - **Add**—Adds a scheduler map. Enter information into the scheduler map page as described in [Table 23 on page 99](#).
 - **Edit**—Modifies an existing scheduler map. Enter information into the scheduler map page as described in [Table 23 on page 99](#).
 - **Delete**—Deletes an existing scheduler map.

Table 23: Scheduler Maps Configuration Fields

Field	Function	Your Action
Scheduler Map Name	Specifies the name for a scheduler map.	To name a map, type the name—for example, be-scheduler-map .
Scheduler Mapping	<p>Allows you to associate a preconfigured scheduler with a forwarding class.</p> <p>After scheduler maps have been applied to an interface, they affect the hardware queues and packet schedulers.</p>	<p>To associate a scheduler with a forwarding class, locate the forwarding class and select the scheduler in the box next to it.</p> <p>For example, for the best-effort forwarding class, select the configured scheduler from the list.</p>

Related Documentation

- [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Monitoring CoS Scheduler Maps on page 172](#)

Configuring CoS Tail Drop Profiles (CLI Procedure)

Tail drop is a simple and effective traffic congestion avoidance mechanism. When you apply this mechanism to manage congestion, packets are dropped when the output queue is full.

To configure CoS tail-drop profiles, create a drop profile name (**be-dp**) and assign a fill level (**25**):

```
[edit class-of-service drop-profiles]
user@switch# set be-dp fill-level 25
```

Related Documentation

- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Understanding CoS Tail Drop Profiles on page 17](#)

Defining CoS Drop Profiles (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

You can use the J-Web interface to define CoS drop profiles on EX4500 and EX8200 switches.

To configure CoS drop profiles:

1. Select **Configure > Class of Service > Drop Profile**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

2. Click one of the following options:

- **Add**—Adds a drop profile. Enter information into the drop profiles page as described in [Table 24 on page 100](#).
- **Edit**—Modifies an existing drop file. Enter information into the drop profiles page as described in [Table 24 on page 100](#).
- **Delete**—Deletes an existing drop profile.

Table 24: Drop Profiles Configuration parameters

Field	Function	Your Action
Drop Profile Name	Specifies the name for a drop profile.	Type the name.

Table 24: Drop Profiles Configuration parameters (*continued*)

Field	Function	Your Action
Drop profile graph	Specifies the drop profile graph type	Select one: Segmented or Interpolated .
Drop profile values	<p>Specifies values for the following two parameters of the drop profile: the queue fill level and the drop probability.</p> <p>The queue fill level represents a percentage of the memory used to store packets in relation to the total amount that has been allocated for that specific queue.</p> <p>The drop probability is a percentage value that correlates to the likelihood that an individual packet is dropped from the network.</p>	<p>To add new values:</p> <ol style="list-style-type: none"> 1. Click Add. 2. Enter the fill level. 3. Enter the drop probability. 4. Click OK. <p>To edit an existing value, click Edit and modify the fill level and drop probability.</p> <p>To delete a value, select it and click Delete.</p>

- Related Documentation**
- [Monitoring CoS Drop Profiles on page 174](#)
 - [Example: Configuring CoS on EX Series Switches on page 47](#)

Defining CoS Rewrite Rules (CLI Procedure)

You configure rewrite rules to alter CoS values in outgoing packets on the outbound interfaces of an EX Series switch to match the policies of a targeted peer. Policy matching allows the downstream routing platform or switch in a neighboring network to classify each packet into the appropriate service group.

To configure a CoS rewrite rule, create the rule by giving it a name and associating it with a forwarding class, loss priority, and a code point, thus creating a rewrite table, and you can enable the rewrite rule on an interface. On EX Series switches except EX4300 switches, you can also enable a rewrite rule on routed VLAN interfaces (RVIs). On EX4300 switches, you can also enable rewrite rules on integrated routing and bridging (IRB) interfaces. If you need to customize a rewrite rule, you can create a customized rewrite rule using a firewall filter configuration. You can configure CoS rewrite rules for DSCP, IP precedence and IEEE 802.1p.

You can configure rewrite rules for the following CoS marker types:

- **dscp** and **dscp-ipv6**—Handles incoming IPv4 and IPv6 packets, respectively. On EX4300 switches, you cannot configure DSCP IPv4 and DSCP IPv6 rewrite rules on the same interface. If you configure a DSCP IPv4 rewrite rule on an interface to rewrite IPv4 traffic, then the same rewrite rule is applied to IPv6 traffic also on that interface, and vice versa.
- **ieee-802.1**—Handles Layer 2 CoS.
- **inet-precedence**—Handles incoming IPv4 packets. IP precedence mapping requires only the higher order three bits of the DSCP field.



NOTE: To replace an existing rewrite rule on the interface with a new rewrite rule of the same type, first explicitly remove the rewrite rule and then apply the new rule.

To create IEEE 802.1p rewrite rules and enable them on Layer 2 interfaces:

- To create an IEEE 802.1p rewrite rule named customup-rw in the rewrite table for all Layer 2 interfaces:

```
[edit class-of-service rewrite-rules]
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority low code-point
000
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority high code-point
001
user@switch# set ieee-802.1 customup-rw forwarding-class af loss-priority low code-point
010
user@switch# set ieee-802.1 customup-rw forwarding-class af loss-priority high code-point
011
user@switch# set ieee-802.1 customup-rw forwarding-class ef loss-priority low code-point
100
user@switch# set ieee-802.1 customup-rw forwarding-class ef loss-priority high code-point
101
```



```

user@switch# set ieee-802.1p customup-rw forwarding-class nc loss-priority low code-point
110
user@switch# set ieee-802.1p customup-rw forwarding-class nc loss-priority high code-point
111

```

- To enable an IEEE 802.1p rewrite rule named customup-rw on a Layer 2 interface:

```

[edit]
user@switch# set class-of-service interfaces ge-0/0/0 unit 0 rewrite-rules ieee-802.1
customup-rw

```

(On EX4300 switches) To enable an IEEE 802.1p rewrite rule named customup-rw on a Layer 2 interface:

```

[edit]
user@switch# set class-of-service interfaces ge-0/0/0 rewrite-rules ieee-802.1 customup-rw

```

- To enable an IEEE 802.1p rewrite rule named customup-rw on all Gigabit Ethernet interfaces on the switch, use wildcards for the interface name and logical-interface (unit) number:

```

[edit]
user@switch# set class-of-service interfaces ge-* unit * rewrite-rules customup-rw

```

(On EX4300 switches) To enable an IEEE 802.1p rewrite rule named customup-rw on all Gigabit Ethernet interfaces on the switch, use wildcards for the interface name:

```

[edit]
user@switch# set class-of-service interfaces ge-* rewrite-rules customup-rw

```

Related Documentation

- [Defining CoS Rewrite Rules \(J-Web Procedure\) on page 103](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Monitoring CoS Rewrite Rules on page 171](#)
- [Understanding CoS Rewrite Rules on page 25](#)

Defining CoS Rewrite Rules (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

You can use the J-Web interface to define CoS rewrite rules. Use the rewrite rules to alter the CoS values in outgoing packets to meet the requirements of the targeted peer. A rewrite rule examines the forwarding class and loss priority of a packet and sets its bits to a corresponding value specified in the rule.

To define rewrite rules:

1. Select **Configure > Class of Service > Rewrite Rules**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See [Using the Commit Options to Commit Configuration Changes](#) for details about all commit options.

2. Click one of the following options:

- **Add**—Adds a rewrite rule. Enter information into the rewrite rule page as described in [Table 25 on page 104](#).
- **Edit**—Modifies an existing rewrite rule. Enter information into the rewrite rule page as described in [Table 25 on page 104](#).
- **Delete**—Deletes an existing rewrite rule.

Table 25: Rewrite Rules Configuration Page Summary

Field	Function	Your Action
Rewrite Rule Name	Specifies the name for the rewrite rule.	To name a rule, type the name—for example, rewrite-dscps .
Rewrite rule type	Specifies the type of rewrite rule: dscp , ieee-802.1 , or inet-precedence .	Select a value from the list.

Table 25: Rewrite Rules Configuration Page Summary (*continued*)

Field	Function	Your Action
Code Point Mapping	<p>Rewrites outgoing CoS values of a packet based on the forwarding class and loss priority.</p> <p>Allows you to remove a code point mapping entry.</p>	<p>To configure a CoS value assignment, follow these steps:</p> <p>To add a code point mapping:</p> <ol style="list-style-type: none"> 1. Click Add. 2. Select the code point. 3. Select a forwarding class from the following list: <ul style="list-style-type: none"> • expedited-forwarding—Provides low loss, low delay, low jitter, assured bandwidth, and end-to-end service. Packets can be forwarded out of sequence or dropped. • best-effort—Provides no special CoS handling of packets. Typically, RED drop profile is aggressive and no loss priority is defined. • assured-forwarding—Provides high assurance for packets within the specified service profile. Excess packets are dropped. • network-control—Packets can be delayed but not dropped. 4. Select the loss priority. <p>To assign a loss priority, select one:</p> <ul style="list-style-type: none"> • high—Packet has a high loss priority. • low—Packet has a low loss priority. <p>To edit an existing code point mapping, select it and click Edit.</p> <p>To remove a code point mapping entry, select it and click Remove.</p>

- Related Documentation**
- [Defining CoS Rewrite Rules \(CLI Procedure\) on page 102](#)
 - [Understanding CoS Rewrite Rules on page 25](#)
 - [Monitoring CoS Rewrite Rules on page 171](#)
 - [Example: Configuring CoS on EX Series Switches on page 47](#)

Assigning CoS Components to Interfaces (CLI Procedure)

After you have defined the following CoS components, you must assign them to logical or physical interfaces.

- Forwarding classes—Assign only to logical interfaces.
- Classifiers—Assign only to logical interfaces.
- Scheduler maps—Assign to either physical or logical interfaces.
- Rewrite rules—Assign to either physical or logical interfaces.

You can assign a CoS component to a single interface or to multiple interfaces using wild cards.

To assign CoS components to interfaces:

- To assign CoS components to a single interface, associate a CoS component (for example a scheduler map named **ethernet-cos-map**) with an interface:

```
[edit class-of-service interfaces]
user@switch# set ge-0/0/20 scheduler-map ethernet-cos-map
```

- To assign a CoS component to multiple interfaces, associate a CoS component (for example, a rewrite rule named **customup-rw**) to all Gigabit Ethernet interfaces on the switch, use wild characters for the interface name and logical-interface (unit) number:

```
[edit class-of-service interfaces]
user@switch# set ge-* unit * rewrite-rules ieee-802.1 customup-rw
```

Related Documentation

- [Assigning CoS Components to Interfaces \(J-Web Procedure\) on page 106](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Monitoring Interfaces That Have CoS Components on page 170](#)
- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)

Assigning CoS Components to Interfaces (J-Web Procedure)



NOTE: This topic applies only to the J-Web Application package.

After you have defined CoS components on an EX Series switch, you must assign them to logical or physical interfaces. You can use the J-Web interface to assign scheduler maps to physical or logical interfaces and to assign forwarding classes or classifiers to logical interfaces.

To assign CoS components to interfaces:

1. Select **Configure > Class of Service > Assign to Interface**.



NOTE: After you make changes to the configuration on this page, you must commit the changes immediately for them to take effect. To commit all changes to the active configuration, select **Commit Options > Commit**. See *Using the Commit Options to Commit Configuration Changes* for details about all commit options.

2. To configure interface association, select an interface from the list and click **Edit**. For an EX8200 Virtual Chassis configuration, select the member, the FPC, and the interface from the list, and click **Edit**.
3. Select one of the following:
 - **Associate system default scheduler map**—Associates the interface with the default scheduler map.
 - **Select the scheduler map**—Associates the interface with a configured scheduler map. Select the scheduler map from the list.



NOTE: On the 40-port SFP+ line card for EX8200 switches, you cannot commit your changes using the J-Web interface unless you assign the same scheduler map or the default scheduler map to all interfaces in a port group.

4. Click **OK**.
5. To manage a CoS service assignment on a logical interface, Click one of the following options:
 - **Add**—Adds a CoS service to a logical interface on a specified physical interface. Enter information as described in [Table 26 on page 107](#).
 - **Edit**—Modifies a CoS service assignment to a logical interface. Enter information as described in [Table 26 on page 107](#).
 - **Delete**—Deletes the CoS service assignment to a logical interface.

Table 26: Assigning CoS Components to Logical Interfaces

Field	Function	Your Action
Unit	Specifies the name of a logical interface. Allows you to assign CoS components while configuring a logical interface on a physical interface at the same time.	Type the interface name. To assign CoS services to all logical interfaces configured on this physical interface, type the wildcard character (*).
Forwarding Class	Assigns a predefined forwarding class to incoming packets on a logical interface.	To assign a forwarding class to an interface, select the forwarding class.

Table 26: Assigning CoS Components to Logical Interfaces (*continued*)

Field	Function	Your Action
Classifiers	Allows you to apply classification maps to a logical interface. Classifiers assign a forwarding class and loss priority to an incoming packet based on its CoS value.	To assign a classification map to an interface, select an appropriate classifier for each CoS value type used on the interface.
Rewrite Rules	<p>Allows you to alter the CoS values in outgoing packets to meet the requirements of the targeted peer. A rewrite rule examines the forwarding class and loss priority of a packet and sets its bits to a corresponding value specified in the rule.</p> <p>NOTE: In EX4300 switches, this option is available only when you click Edit button in the Configure Interface Association table.</p>	To assign rewrite rules to the interface, select the appropriate rewrite rule for each CoS value type used on the interface.

- Related Documentation**
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
 - [Example: Configuring CoS on EX Series Switches on page 47](#)
 - [Monitoring Interfaces That Have CoS Components on page 170](#)

Configuring Junos OS EZQoS for CoS (CLI Procedure)

You use Junos OS EZQoS on EX Series switches to eliminate the complexities involved in configuring class of service (CoS) across the network. EZQoS offers templates for key traffic classes.

When you configure EZQoS on EX Series switches, preconfigured values are assigned to all CoS parameters based on the typical application requirements. These preconfigured values are stored in a template with a unique name.



NOTE: Currently, we provide an EZQoS template for configuring CoS for VoIP applications. The EZQoS VoIP template is stored in `/etc/config/ezqos-voip.conf`.

To configure EZQoS using the CLI:

1. Load the EZQoS configuration file (`/etc/config/ezqos-voip.conf`):


```
[edit]
user@switch# load merge /etc/config/ezqos-voip.conf
```
2. Apply the EZQoS group (`ezqos-voip`):


```
[edit]
user@switch# set apply-groups ezqos-voip
```
3. Apply the DSCP classifier (`ezqos-dscp-classifier`) to a Gigabit Ethernet interface (`ge-0/0/0`):


```
[edit class-of-service interfaces]
```

- ```
user@switch# set ge-0/0/0 unit 0 classifiers dscp ezqos-dscp-classifier
```
4. Apply the scheduler map (`ezqos-voip-sched-maps`) to a Gigabit Ethernet interface (`ge-0/0/1`):

```
[edit class-of-service interfaces]
```

```
user@switch# set ge-0/0/1 scheduler-map ezqos-voip-sched-maps
```

#### Related Documentation

- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Understanding Junos OS EZQoS for CoS Configurations on EX Series Switches on page 28](#)

## Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure)

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. This topic describes configuring CoS components on a provider edge (PE) switch that is using IP Over MPLS.

This task describes how to create a custom DSCP classifier and a custom EXP rewrite rule on the ingress PE switch. It includes configuring a policer firewall filter and applying it to the customer-edge interface of the ingress PE switch. The policer firewall filter ensures that the amount of traffic forwarded through the MPLS tunnel never exceeds the requested bandwidth allocation.

Before you begin, configure the basic components for an MPLS network:

- Configure two PE switches. See *Configuring MPLS on Provider Edge Switches Using Circuit Cross-Connect (CLI Procedure)*.
- Configure one or more provider switches. See *“Configuring MPLS on Provider Switches (CLI Procedure)” on page 114*.

This topic includes:

1. [Configuring CoS on page 109](#)
2. [Configuring an LSP Policer on page 110](#)

### Configuring CoS

To configure CoS on a provider edge switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:

```
[edit class-of-service]
```

```
user@switch# set classifiers dscp classifier-name import default
```

2. Add a forwarding class to this custom DSCP classifier and specify a loss priority and code point:

```
[edit class-of-service]
```

```
user@switch# set classifiers dscp classifier-name forwarding-class forwarding-class loss-priority loss-priority code-points code-point
```

3. Specify the values for the custom EXP rewrite rule, `e1`:

```
[edit class-of-service]
```

```
user@switch# set rewrite-rules exp e1 forwarding-class forwarding-class loss-priority
loss-priority code-points code-point
```

4. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces interface unit unit rewrite-rules exp e1
```

## Configuring an LSP Policer

To configure an LSP policer:



**NOTE:** You cannot configure LSP policers on EX8200 switches. EX8200 switches do not support LSP policers.

1. Specify the number of bits per second permitted, on average, for the firewall policer, which will later be applied to the customer-edge-interface:

```
[edit firewall]
user@switch# set policer mypolicer if-exceeding bandwidth-limit 500m
```

2. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:

```
[edit firewall policer]
user@switch# set mypolicer if-exceeding burst-size-limit 33553920
```

3. Discard traffic that exceeds the rate limits for this policer:

```
[edit firewall policer]
user@switch# set mypolicer then discard
```

4. To reference the policer, configure a filter term that includes the policer action:

```
[edit firewall]
user@switch# set family inet filter myfilter term t1 then policer mypolicer
```

5. Apply the filter to the customer-edge interface:

```
[edit interfaces]
user@switch# set ge-2/0/3 unit 0 family inet address 121.121.121.1/16 policing filter myfilter
```



**NOTE:** You can also configure schedulers and shapers as needed. See [“Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\)” on page 93](#).

### Related Documentation

- [Configuring MPLS on Provider Edge Switches Using Circuit Cross-Connect \(CLI Procedure\)](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
- [Configuring Policers to Control Traffic Rates \(CLI Procedure\)](#)
- [Understanding the Use of Policers in Firewall Filters](#)



## Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure)

You can use class of service (CoS) within MPLS networks to prioritize certain types of traffic during periods of congestion. This topic describes configuring CoS components on a provider edge (PE) switch that is using MPLS over circuit-cross connect (CCC).



**NOTE:** On EX Series switches other than EX8200 switches, if you are using MPLS over CCC, you can use only one DSCP or IP precedence classifier and only one IEEE 802.1p classifier on the CCC interfaces.

This procedure is for creating a custom DSCP classifier and a custom EXP rewrite rule on the ingress PE. It also includes enabling a policer on the label-switched path (LSP) of the ingress PE to ensure that the amount of traffic forwarded through the LSP never exceeds the requested bandwidth allocation.

This topic includes:

1. [Configuring CoS on page 111](#)
2. [Configuring an LSP Policer on page 112](#)

### Configuring CoS

To configure CoS on a provider edge switch:

1. Import the default DSCP classifier classes to the custom DSCP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name import default
```

2. Add the expedited-forwarding class to this custom DSCP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers dscp classifier-name forwarding-class forwarding-class
loss-priority loss-priority code-points code-point
```

3. Specify the values for the custom EXP rewrite rule, e1:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class forwarding-class loss-priority
loss-priority code-point code-point
```

4. Bind the DSCP classifier to the CCC interface:

```
[edit]
user@switch# set class-of-service interfaces interface unit unit classifier classifier-name
```

5. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces interface unit unit rewrite-rules exp e1
```

## Configuring an LSP Policer

To configure an LSP policer:



**NOTE:** You cannot configure LSP policers on EX8200 switches. EX8200 switches do not support LSP policers.

1. Specify the number of bits per second permitted, on average, for the policer, which will later be applied to the LSP:

```
[edit firewall]
set policer mypolicer if-exceeding bandwidth-limit 500m
```

2. Specify the maximum size permitted for bursts of data that exceed the given bandwidth limit for this policer:

```
[edit firewall policer]
set mypolicer if-exceeding burst-size-limit 33553920
```

3. Discard traffic that exceeds the rate limits for this policer:

```
[edit firewall policer]
set mypolicer then discard
```

4. To reference the policer, configure a filter term that includes the policer action:

```
[edit firewall]
user@switch# set family any filter myfilter term t1 then policer mypolicer
```

5. Apply the filter to the LSP:

```
[edit protocols mpls]
set label-switched-path lsp_to_pe2_ge1 policing filter myfilter
```



**NOTE:** You can also configure schedulers and shapers as needed. See [“Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\)” on page 93](#).

### Related Documentation

- [Configuring MPLS on Provider Edge Switches Using Circuit Cross-Connect \(CLI Procedure\)](#)
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
- [Configuring Policers to Control Traffic Rates \(CLI Procedure\)](#)
- [Understanding the Use of Policers in Firewall Filters](#)

## Configuring CoS on Provider Switches of an MPLS Network (CLI Procedure)

You can add class-of-service (CoS) components to your MPLS networks on EX Series switches to achieve end-to-end Differentiated Services to match your specific business requirements. The configuration of CoS components on the provider switches is the same regardless of whether the provider edge (PE) switches are using MPLS over CCC or IP over MPLS.

This task shows how to configure a custom EXP classifier and custom EXP rewrite rule on the provider switch.

1. Import the default EXP classifier classes to the custom EXP classifier that you are creating:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 import default
```

2. Add the expedited-forwarding class to this custom EXP classifier, specifying a loss priority and code point:

```
[edit class-of-service]
user@switch# set classifiers exp exp1 forwarding-class expedited-forwarding loss-priority
low code-points 010
```

3. Specify the values for the custom EXP rewrite rule, **e1**:

```
[edit class-of-service]
user@switch# set rewrite-rules exp e1 forwarding-class expedited-forwarding loss-priority
low code-point 111
```

4. On EX8200 switches only, bind the custom EXP rewrite rule to the interface:

```
[edit class-of-service]
user@switch# set class-of-service interfaces ge-0/0/2 unit 0 rewrite-rules exp e1
```



**NOTE:** You can also configure schedulers and shapers as needed. See [“Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\)”](#) on page 93.

### Related Documentation

- [Example: Configuring CoS on EX Series Switches on page 47](#)

## Configuring MPLS on Provider Switches (CLI Procedure)

---

You can configure MPLS on EX Series switches to increase transport efficiency in your network. MPLS services can be used to connect various sites to a backbone network and to ensure better performance for low-latency applications such as VoIP and other business-critical functions.

To implement MPLS on EX Series switches, you must configure at least one provider switch as a transit switch for the MPLS packets. The configuration of all the provider switches remains the same regardless of whether the provider edge (PE) switches are using circuit cross-connect (CCC) or using MPLS over IP for the customer edge interfaces. Likewise, you do not need to change the configuration of the provider switches if you implement an MPLS-based Layer 2 VPN, Layer 3 VPN, or a Layer 2 circuit configuration.

MPLS requires the configuration of a routing protocol (OSPF or IS-IS) on the core interfaces and the loopback interface of all the switches. This procedure includes the configuration of OSPF on the provider switch. For information on configuring IS-IS as the routing protocol, see [Junos OS Routing Protocols Configuration Guide](#).

To configure the provider switch, complete the following tasks:

1. Enable the routing protocol (OSPF or IS-IS) on the loopback interface and on the core interfaces:



**NOTE:** You can use the switch address as an alternative to the loopback interface.

```
[edit protocols]
user@switch# set ospf area 0.0.0.0 interface lo0.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@switch# set ospf area 0.0.0.0 interface ge-0/0/6.0
user@switch# set ospf area 0.0.0.0 interface ae0
```

2. Enable traffic engineering for the routing protocol (traffic engineering must be explicitly enabled for OSPF):

```
[edit protocols]
user@switch# set ospf traffic-engineering
```

3. Enable MPLS within the **protocols** stanza and apply it to the core interfaces:

```
[edit protocols]
user@switch# set mpls interface ge-0/0/5.0
user@switch# set mpls interface ge-0/0/6.0
user@switch# set mpls interface ae0
```

4. Configure RSVP on the loopback interface and the core interfaces:

```
[edit protocols]
user@switch# set rsvp interface lo0.0
user@switch# set rsvp interface ge-0/0/5.0
user@switch# set rsvp interface ge-0/0/6.0
user@switch# set rsvp interface ae0
```

5. Configure an IP address for the loopback interface and for the core interfaces:

```
[edit]
```

```

user@switch# set interfaces lo0 unit 0 family inet address 127.1.1/32
user@switch# set interfaces ge-0/0/5 unit 0 family inet address 10.1.5.1/24
user@switch# set interfaces ge-0/0/6 unit 0 family inet address 10.1.6.1/24
user@switch# set interfaces ae0 unit 0 family inet address 10.1.9.2/24

```

6. Configure **family mpls** on the logical units of the core interfaces:

```

[edit]
user@switch# set interfaces ge-0/0/5 unit 0 family mpls
user@switch# set interfaces ge-0/0/6 unit 0 family mpls
user@switch# set interfaces ae0 unit 0 family mpls

```



**NOTE:** You can enable **family mpls** on either individual interfaces or aggregated Ethernet interfaces. You cannot enable it on tagged VLAN interfaces.

#### Related Documentation

- *Example: Configuring MPLS on EX Series Switches*
- *Configuring MPLS on Provider Edge Switches Using Circuit Cross-Connect (CLI Procedure)*
- *Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure)*
- *Configuring an MPLS-Based Layer 2 VPN (CLI Procedure)*
- *Configuring an MPLS-Based Layer 3 VPN (CLI Procedure)*

## Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards (CLI Procedure)

EX8200 switches provide certain line cards that include oversubscribed ports. These ports are logically grouped into a port group and each port group share a certain fixed bandwidth. Because oversubscribed ports handle traffic differently than ports that provide continuous line-rate bandwidth, configuring CoS queues is different for oversubscribed ports than for line-rate ports.

Packets arriving on an oversubscribed port in a line card are directed to a high-priority, low priority, or line-rate queue. These queues are used for scheduling traffic from the port into the Packet Forwarding Engine. The fabric priority associated with the packet's forwarding class determines which queue the packet is sent to. The forwarding class of the packet in turn is determined by the behavior aggregate (BA) classifier assigned to the port. By default, the fabric priority of all forwarding classes is low. Thus all packets, with the exception of critical network packets and line-rate packets, are sent to the low-priority ingress queue by default. The critical network packets and line-rate packets do not need a BA classifier as they are always sent on the high-priority and line-rate queues, respectively.

This procedure describes how you can direct traffic into the high-priority ingress queue and thus avoid congestion at the port group.

To direct traffic to the high-priority ingress queue for a port group:

1. Create the BA classifier for the forwarding class:

```
[edit class-of-service]
user@switch# set classifiers classifier-type classifier-name
forwarding-class class-name loss-priority level code-points code-point
```

2. Assign a queue number and fabric priority to the forwarding class:

```
[edit class-of-service]
user@switch# set forwarding-classes class class-name queue-num number
priority level
```

3. Assign the BA classifier to the physical interface:

```
[edit class-of-service]
user@switch# set interfaces interface-name unit 0
classifiers classifier-type classifier-name
```

For example, to direct voice traffic to the high-priority ingress queue for interface **xe-1/0/2**:

```
[edit class-of-service]
user@switch# set classifiers dscp dscp1 forwarding-class cos-voice
loss-priority low code-points ef
```

```
[edit class-of-service]
user@switch# set forwarding-classes class cos-voice queue-num 5 priority high
```

```
[edit class-of-service]
user@switch# set interfaces xe-1/0/2 unit 0 classifiers dscp dscp1
```



**NOTE:** You must use a BA classifier to classify traffic for ingress queuing. Multifield (MF) classification and port classification (that is, assigning a forwarding class to the interface) are not supported for classifying traffic for ingress queuing. The BA classifier must be assigned to a physical interface, not a Layer 3 tagged interface or a routed VLAN interface (RVI).

**Related  
Documentation**

- [Understanding CoS Queues on EX8200 Line Cards That Include Oversubscribed Ports on page 34](#)

---

## Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure)

You can configure priority-based flow control (PFC) on EX4500 switches to apply link-level flow control on a specific traffic class so that different types of traffic can efficiently use the same network interface card (NIC). You must configure PFC for all interfaces carrying Fibre Channel over Ethernet (FCoE) traffic. You can also configure PFC on interfaces carrying other traffic types, such as Internet small computer system interface (iSCSI) traffic. Using PFC is optional for traffic types other than FCoE.



**NOTE:**

- PFC is supported only on 10-Gigabit Ethernet interfaces.
- If you are using PFC for a non-FCoE DCBX application, use the same 802.1p code points for the PFC congestion notification profile and for the application map that is carrying that application traffic.

Data Center Bridging Capability Exchange protocol (DCBX) is enabled by default on all 10-Gigabit Ethernet interfaces on EX4500 switches. DCBX enables or disables PFC on the local interface depending on whether the PFC configuration on that interface is the same as the PFC configuration of the connected interface on the data center bridging (DCB) peer.



**NOTE:** When you configure PFC, we recommend that you:

- Configure at least 20 percent of the buffer for the queue that is using PFC.
- Configure an appropriate percent of the buffer for any other forwarding classes (default forwarding classes and the user-defined forwarding classes) that you are using.
- Do not specify the exact option when configuring the buffer for the queue that is using PFC.
- Configure the loss-priority statement to low for a traffic class that is using PFC.
- Verify that the PFC configurations of the local interfaces are the same as the PFC configurations of the connected interfaces on the DCB peer. See *show dcbx neighbors*.

EX Series switches support up to six congestion notification profiles for PFC.

To configure PFC:

1. Configure a congestion notification profile, specifying the name of the profile and specifying the three-bit pattern of the User Priority bits in an incoming frame that will trigger the priority-based flow control on that traffic class:

```
[edit class-of-service]
user@switch# set congestion-notification-profile profile-name input ieee-802.1 code-point
up-bits pfc
```

2. Disable standard Ethernet flow control on the interfaces that will be used for the traffic class that you have selected for PFC:

```
[edit interfaces]
user@switch# set interface-name ether-options no-flow-control
```



**NOTE:** You cannot apply PFC to interfaces that are using standard Ethernet flow control. You must first disable flow control on those interfaces.

3. Bind the congestion notification profile to the interfaces that will be used for the traffic class that you have selected for PFC:

```
[edit class-of-service]
user@switch# set interfaces interface-name congestion-notification-profile profile-name
```

4. Create a CoS classifier for a traffic class that will use PFC:

```
[edit class-of-service]
user@switch# set classifiers ieee-802.1 classifier-name import default
```

5. Configure this traffic class (**classifier-name**) to use a user-defined or default forwarding class with a low loss priority value and specify the 802.1p code points::

```
[edit class-of-service]
user@switch# set classifiers ieee-802.1 classifier-name forwarding-class class-name
loss-priority low code-points 3 bit-patterns
```

6. Bind the **classifier-name** classifier to all interfaces that require PFC:

```
[edit class-of-service]
user@switch# set interfaces interface-name unit logical-unit-number classifiers ieee-802.1
classifier-name
```

7. Assign the specified forwarding-class to an egress queue:

```
[edit class-of-service]
user@switch# set forwarding-classes class-name queue-number
```

8. Set a scheduler for this queue, allocating at least 20 percent of the buffer to be used for FCoE traffic:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name buffer-size percent
```

9. Set a scheduler to allocate buffer space for forwarding classes carrying other traffic:



**NOTE:** You must explicitly allocate some buffer space for the other forwarding classes. The default allocation of buffer space for forwarding classes is overridden when you manually configure the requisite amount of buffer space for the FCoE traffic.

```
[edit class-of-service]
user@switch# set scheduler-name buffer-size percent
```

10. Configure a scheduler map that associates the specified scheduler with the specified forwarding class:

```
[edit class-of-service]
user@switch# set scheduler-maps map-name forwarding-class class-name scheduler
scheduler-name
```

For example:

```
[edit class-of-service]
user@switch# set scheduler-maps pfc-map forwarding-class af2 scheduler pfc-sched
user@switch# set scheduler-maps pfc-map forwarding-class best-effort scheduler
default-sched user@switch# set scheduler-maps pfc-map forwarding-class network-control
scheduler default-sched
user@switch# set scheduler-maps pfc-map forwarding-class expedited-forwarding scheduler
default-sched
```

11. Assign the scheduler map to the egress interface:

```
[edit class-of-service]
user@switch# set interfaces interface-name scheduler-map pfc-map
```

#### Related Documentation

- [Example: Configuring an FCoE Transit Switch](#)
- [Understanding Priority-Based Flow Control on page 37](#)



---

## Configuring Shaping for CoS (CLI Procedure)

---

Port shaping and queue shaping enable you to limit traffic on an interface or queue, respectively, so that you can control the amount of traffic passing through the interface or the queue. Port shaping enables you to shape the aggregate traffic through an interface to a rate that is less than the line rate for that interface. When you configure port shaping on an interface, you are essentially specifying a value that indicates the maximum amount of traffic that can pass through the interface. This value must be less than the maximum bandwidth for that interface. Queue shaping enables you to throttle the rate at which a queue transmits packets. When you configure queue shaping, you can specify either as the maximum rate at which traffic can pass through the queue or as a percentage of the available bandwidth.

This topic describes:

- [Configuring Port Shaping for CoS on an EX Series Switch on page 119](#)
- [Configuring Queue Shaping for CoS on an EX Series Switch on page 119](#)

### Configuring Port Shaping for CoS on an EX Series Switch

You can configure port shaping on network interfaces, aggregated Ethernet interfaces (also known as link aggregation groups (LAGs)), and loopback interfaces.

To configure port shaping on an interface:

1. Ensure that the interface on which you want to configure port shaping is up and running.
2. Assign a shaping rate for the interface:

**[edit]**

```
user@switch# set class-of-service interfaces interface-name shaping-rate value
```

The value indicates the maximum amount of traffic (in bps) that can pass through the interface. This value must be less than the maximum bandwidth for that interface.

### Configuring Queue Shaping for CoS on an EX Series Switch

Queue shaping enables you to restrict the rate at which queues transmit traffic. You can configure queue shaping on any queue supported by CoS on an EX Series switch that supports up to eight output queues and 16 forwarding classes. Forwarding classes can be thought of as output queues. In effect, the result of classifying packets into forwarding classes is the identification of an output queue for a particular packet. For a classifier to assign an output queue to a packet, it must associate the packet with one of the forwarding classes discussed in [“Understanding CoS Forwarding Classes” on page 14](#).

To configure queue shaping:

1. Ensure that the interface on which you want to configure queue shaping is up and running.
2. Configure queue shaping:
  - a. Define a scheduler and assign a shaping rate to the scheduler:

[edit]

```
user@switch# set class-of-service schedulers scheduler-name shaping-rate (rate | percent percentage)
```

You can assign a *rate* (a value in bits per second (bps)) or a percentage value for *shaping-rate*.

- b. Define a scheduler map and assign a forwarding class and scheduler (that you defined in the previous step) to the scheduler map:

[edit]

```
user@switch# set class-of-service scheduler-maps scheduler-map-name forwarding-class class-name scheduler scheduler-name
```

- c. Assign the scheduler map to an interface:

[edit]

```
user@switch# set class-of-service interfaces interface-name scheduler-map scheduler-map-name
```

**Related Documentation**

- [Understanding Port Shaping and Queue Shaping for CoS on EX Series Switches on page 27](#)
- [Understanding CoS Schedulers on page 17](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)

---

## Configuring CoS Congestion Management (CLI Procedure)

---

An effective congestion management mechanism is imperative to ensure smooth flow of traffic in a network and also to ensure minimum packet drops in the network. Class of service (CoS) provides congestion management methods that allow you to define parameters based on which packets can be dropped when the output queue is full. These parameters vary depending on the EX Series switch that you are using in a network.

You can specify parameters for dropping packets at the **[edit class-of-service drop-profiles]** hierarchy level and reference them in a scheduler configuration. The parameters that you can specify are **fill-level** and **drop-probability**. The first parameter defines the delay-buffer bandwidth, which provides packet buffer space to absorb burst traffic up to the specified duration of delay. When the specified delay buffer becomes full, packets with 100 percent drop probability are dropped from the head of the buffer. The second parameter represents a percentage value that correlates to the likelihood that an individual packet is dropped from the network.

Depending on the switch on which you are configuring a drop profile, you can configure either a weighted tail drop (WTD) profile or a weighted random early detection (WRED) profile.

This topic describes:

- [Configuring a Weighted Tail Drop Profile on page 121](#)
- [Configuring a Weighted Random Early Detection Drop Profile on page 121](#)

## Configuring a Weighted Tail Drop Profile

A weighted tail drop (WTD) is a congestion management mechanism in which packets are dropped from the tail of the queue when the queue reaches a certain buffer capacity (that is, the fill level), and hence the name weighted tail drop. When that level is reached on EX2200, EX3200, or EX4200 Switches, packets marked with a packet loss priority (PLP) of high are prevented from entering the queue (that is, they are discarded).

To configure a WTD profile, create a drop profile name and assign a fill level:

```
[edit class-of-service drop-profiles]
user@switch# set profile-name fill-level percentage
```

Following is a sample WTD profile in which the fill level is set to 80 percent:

```
[edit class-of-service drop-profiles]
user@switch# set wtd-profile fill-level 80
```

## Configuring a Weighted Random Early Detection Drop Profile

A WRED drop profile enables you to define multiple data points for fill level and drop probability so that packets are dropped at various levels of queue fullness, and for various drop probabilities. Unlike the WTD drop profile that can be defined only for packets with a PLP of high, WRED can be defined for packets with a PLP of high and also for packets with a PLP of low.



**NOTE:** The WRED drop profile is supported only on EX4300 standalone switches, EX4300 Virtual Chassis, EX8200 standalone switches and EX8200 Virtual Chassis.

WRED has two implementations: segmented and interpolated. From a high level, segmented is a stair-step-like drop profile, whereas interpolated is a smoother (curve) drop profile. For a graphical representation of both these implementations, see [“Understanding CoS Congestion Management” on page 40](#). Although the formation of graph lines is different for both these implementations, the application of the profile is the same. On EX Series switches except EX4300 switches, when a packet reaches the head of the queue, a random number between 0 and 100 is calculated. This random number is plotted against the drop profile using the current queue fullness of that particular queue. When the random number falls above the graph line, the packet is transmitted. When the number falls below the graph line, the packet is dropped from the network.

For information about congestion management on EX4300 switches, see [“Understanding CoS Congestion Management” on page 40](#).



**NOTE:** On EX4300 switches, you cannot enable WRED on multidestination (multicast) queues. You can enable WRED only on unicast queues.

Following is the procedure to define a segmented and an interpolated drop profiles:

- To configure a segmented drop profile, specify multiple data points for fill level (**l**) and drop probability (**p**) as follows:

[edit class-of-service drop-profiles]

```
user@switch# set profile-name fill-level percentage-l1 drop-probability percentage-p1
user@switch# set profile-name fill-level percentage-l2 drop-probability percentage-p2
user@switch# set profile-name fill-level percentage-l3 drop-probability percentage-p3
user@switch# set profile-name fill-level percentage-l4 drop-probability percentage-p4
```

Following is a sample segmented drop profile:

[edit class-of-service drop-profiles]

```
user@switch# set seg-prof fill-level 20 drop-probability 25
user@switch# set seg-prof fill-level 40 drop-probability 50
user@switch# set seg-prof fill-level 60 drop-probability 75
user@switch# set seg-prof fill-level 80 drop-probability 100
```

- To configure an interpolated drop profile on EX Series switches except EX4300 switches, specify multiple data points for fill level (**l**) and drop probability (**p**) using the **interpolate** statement as follows:

[edit class-of-service drop-profiles]

```
user@switch# set profile-name interpolate fill-level percentage-l1 drop-probability percentage-l1
user@switch# set profile-name interpolate fill-level percentage-l2 drop-probability percentage-l2
user@switch# set profile-name interpolate fill-level percentage-l3 drop-probability percentage-p3
user@switch# set profile-name interpolate fill-level percentage-l4 drop-probability percentage-p4
```

Following is a sample interpolated drop profile:

[edit class-of-service drop-profiles]

```
user@switch# set inter-prof interpolate fill-level 20 drop-probability 25
user@switch# set inter-prof interpolate fill-level 40 drop-probability 50
user@switch# set inter-prof interpolate fill-level 60 drop-probability 75
user@switch# set inter-prof interpolate fill-level 80 drop-probability 100
```

- To configure an interpolated drop profile EX4300 switches, specify two data points for fill level (**l**) and drop probability (**p**) by using the **interpolate** statement as follows:

[edit class-of-service drop-profiles]

```
user@switch# set profile-name interpolate fill-level percentage-l1 fill-level percentage-l2
drop-probability percentage-l1 percentage-l2
```

Following is a sample interpolated drop profile:

[edit class-of-service drop-profiles]

```
user@switch# set inter-prof interpolate fill-level 20 fill-level 80 drop-probability 25
drop-probability 100
```

#### Related Documentation

- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Understanding CoS Congestion Management on page 40](#)

## CHAPTER 4

# Configuration Statements

- [\[edit class-of-service\] Configuration Statement Hierarchy on EX Series Switches on page 124](#)
- [broadcast on page 127](#)
- [buffer-size on page 128](#)
- [class on page 129](#)
- [class-of-service on page 130](#)
- [classifiers on page 132](#)
- [code-point \(Congestion Notification\) on page 133](#)
- [code-point-aliases on page 133](#)
- [code-points on page 134](#)
- [congestion-notification-profile \(Priority-Based Flow Control\) on page 135](#)
- [drop-probability \(Fill Level\) on page 136](#)
- [drop-profile-map on page 136](#)
- [dscp on page 137](#)
- [dscp-ipv6 on page 138](#)
- [ethernet \(CoS for Multidestination Traffic\) on page 139](#)
- [exp on page 140](#)
- [family on page 141](#)
- [forwarding-class on page 142](#)
- [forwarding-classes on page 143](#)
- [ieee-802.1 on page 144](#)
- [ieee-802.1 \(Congestion Notification\) on page 145](#)
- [import on page 146](#)
- [inet \(CoS\) on page 147](#)
- [inet6 \(CoS Multidestination\) on page 147](#)
- [inet-precedence on page 148](#)
- [input \(Congestion Notification\) on page 149](#)
- [interfaces on page 150](#)

- [loss-priority \(Classifiers and Rewrite Rules\) on page 151](#)
- [multi-destination on page 152](#)
- [policing on page 153](#)
- [priority \(Schedulers\) on page 154](#)
- [protocol \(Drop Profiles\) on page 154](#)
- [rewrite-rules on page 155](#)
- [scheduler-map on page 156](#)
- [scheduler-maps on page 157](#)
- [schedulers \(CoS\) on page 158](#)
- [shaping-rate on page 159](#)
- [shared-buffer on page 160](#)
- [transmit-rate \(EX Series Switches\) on page 161](#)
- [tri-color \(EX Series Switches\) on page 162](#)
- [unit on page 164](#)

---

## [edit class-of-service] Configuration Statement Hierarchy on EX Series Switches

This topic lists supported and unsupported configuration statements in the **[edit class-of-service]** hierarchy level on EX Series switches.

- *Supported* statements are those that you can use to configure some aspect of a software feature on the switch.
- *Unsupported* statements are those that appear in the command-line interface (CLI) on the switch, but that have no effect on switch operation if you configure them.
- Not all features are supported on all switch platforms. For detailed information about feature support on specific EX Series switch platforms, see [Feature Explorer](#).

This topic lists:

- [Supported Statements in the \[edit class-of-service\] Hierarchy Level on page 124](#)
- [Unsupported Statements in the \[edit class-of-service\] Hierarchy Level on page 126](#)

### Supported Statements in the [edit class-of-service] Hierarchy Level

The following hierarchy shows the **[edit class-of-service]** configuration statements supported on EX Series switches:

```
class-of-service {
 classifiers {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) classifier-name {
 forwarding-class class-name {
 loss-priority (high | low | medium-high | medium-low) {
 code-points [aliases] [6 bit-patterns];
 }
 }
 }
 }
 import (classifier-name | default);
}
```

```

 }
 }
 code-point-aliases {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) {
 alias-name bits;
 }
 }
 drop-profiles {
 profile-name {
 interpolate {
 drop-probability [values];
 fill-level [values]
 }
 }
 }
 forwarding-classes {
 class class-name
 queue queue-number;
 }
 interfaces interface-name {
 scheduler-map map-name;
 shaping-rate rate;
 unit (logical-unit-number | *) {
 classifiers {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) (classifier-name | default);
 }
 forwarding-class class-name ;
 }
 }
 rewrite-rules {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) (rewrite-rule-name | default);
 }
}
rewrite-rules {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) rewrite-name {
 import (default | rewrite-name);
 forwarding-class class-name {
 loss-priority (high | low | medium-high | medium-low) code-point (alias | bits);
 }
 }
}
scheduler-maps {
 map-name {
 forwarding-class class-name {
 scheduler scheduler-name;
 }
 }
}
schedulers {
 scheduler-name {
 buffer-size (exact | percent percentage | remainder);
 drop-profile-map {
 loss-priority (any | high | medium-high | medium-low);
 protocol any;
 {
 drop-profile profile-name
 }
 }
 }
}

```

```
 }
 }
 excess-rate {
 percent percentage;
 }
 priority (low | strict-high);
 shaping-rate (rate | percent percentage);
 transmit-rate (EX Series Switches) (rate | percent percentage | remainder) ;
}
}
shared-buffer {
 percent;
}
traceoptions {
 file (file-name | files files | match match | no-world-readable | size size | world-readable);
 flag (all | asynch | chassis-scheduler | cos-adjustment | dynamic | hardware-database
 | init | parse | performance-monitor | process | restart | route-socket | show | snmp |
 util);
 no-remote-trace;
}
tri-color;
}
```

## Unsupported Statements in the [edit class-of-service] Hierarchy Level

All statements in the **[edit class-of-service]** hierarchy level that are displayed in the command-line interface (CLI) on the switch are supported on the switch and operate as documented.

### Related Documentation

- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Defining CoS Code-Point Aliases \(CLI Procedure\) on page 85](#) or [Defining CoS Code-Point Aliases \(J-Web Procedure\) on page 85](#)
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#) or [Defining CoS Classifiers \(J-Web Procedure\) on page 89](#)
- [Defining CoS Forwarding Classes \(CLI Procedure\) on page 91](#) or [Defining CoS Forwarding Classes \(J-Web Procedure\) on page 91](#)
- [Configuring CoS Tail Drop Profiles \(CLI Procedure\) on page 100](#)
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#) or [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)
- [Defining CoS Rewrite Rules \(CLI Procedure\) on page 102](#) or [Defining CoS Rewrite Rules \(J-Web Procedure\) on page 103](#)



---

## broadcast

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>broadcast forwarding-class-name;</code>                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service multi-destination</a> family <a href="#">ethernet</a> ]                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Specify the forwarding class for the broadcast traffic belonging to the Ethernet family.                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><i>forwarding-class-name</i> —Name of the forwarding class:</p> <ul style="list-style-type: none"><li>• <b>mcast-af</b>—Default forwarding class for assured forwarding of multicast traffic.</li><li>• <b>mcast-be</b>—Default best-effort forwarding class for multicast traffic.</li><li>• <b>mcast-ef</b>—Default forwarding class for expedited forwarding of multicast traffic.</li></ul> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Understanding CoS Schedulers on page 17</a></li><li>• <a href="#">Understanding CoS Forwarding Classes on page 14</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li></ul>                                                                                                                                             |

## buffer-size

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | buffer-size (exact   percent <i>percentage</i>   remainder   temporal);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service schedulers scheduler-name</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Specify buffer size in a scheduler configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Default</b>                  | On EX Series switches except EX4300 switches, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 0, 0, 0, 0, and 5 percent, respectively. On EX4300 switches, the default scheduler transmission rate and buffer size for queues 0 through 11 are 75, 0, 0, 5, 0, 0, 0, 0, 15, 0, 0 and 5 percent, respectively, of the total available buffer.                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>exact</b>—(Except on EX8200 standalone switches and EX8200 Virtual Chassis) Enforce the exact buffer size. When this option is configured, sharing is disabled on the queue, restricting the usage to guaranteed buffers only.</p> <p><b>percent <i>percentage</i></b>—Buffer size as a percentage of the total buffer.</p> <p><b>remainder</b>—Remaining buffer available.</p> <p><b>temporal</b>—(EX4200 standalone switches, EX4200 Virtual Chassis, EX4300 standalone switches, EX4300 Virtual Chassis, EX8200 standalone switches, and EX8200 Virtual Chassis only) Buffer size as a temporal value.</p> |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Schedulers and Scheduler Maps (CLI Procedure) on page 93</a> or <a href="#">Defining CoS Schedulers (J-Web Procedure) on page 95</a></li><li>• <a href="#">Understanding CoS Schedulers on page 17</a></li></ul>                                                                                                                                                                                                                                               |

## class

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>class <i>class-name</i> queue-num <i>queue-number</i> priority ( high   low );</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service forwarding-classes</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | <p>Configure up to 16 forwarding classes with multiple forwarding classes mapped to single queues. If you want to configure up to eight forwarding classes with one-to-one mapping to output queues, use the <b>queue</b> statement instead of the <b>class</b> statement at the <a href="#">[edit class-of-service forwarding-classes]</a> hierarchy level.</p> <p>On EX8200 switches, you can assign a fabric priority to a forwarding class. The fabric priority determines scheduling priority of packets ingressing the switch fabric. In addition, for interfaces on the 40-port SFP+ line card, the fabric priority determines whether packets are sent to the high or low priority queue for ingressing the port group. The primary use of this option is to prevent high priority input traffic from being dropped due to congestion on the port group of a 40-port SFP+ line card.</p> |
| <b>Options</b>                  | <p><b><i>class-name</i></b>—Name of forwarding class.</p> <p><b>priority (high   low)</b>—(Optional) (EX8200 switches only) Fabric priority.<br/> <b>Values:</b> high or low<br/> <b>Default:</b> low</p> <p><b>queue-num <i>queue-number</i></b>—Output queue number.<br/> <b>Range:</b> 0 through 7</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Defining CoS Forwarding Classes (CLI Procedure) on page 91</a> or <a href="#">Defining CoS Forwarding Classes (J-Web Procedure) on page 91</a></li> <li>• <a href="#">Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards (CLI Procedure) on page 115</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                               |

## class-of-service

```
Syntax class-of-service {
 classifiers {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) classifier-name {
 import (classifier-name | default);
 forwarding-class class-name {
 loss-priority level {
 code-points [aliases] [6 bit-patterns];
 }
 }
 }
 }
 code-point-aliases {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) {
 alias-name bits;
 }
 }
 forwarding-classes {
 class class-name queue-num queue-number priority (high | low);
 }
 interfaces {
 interface-name {
 scheduler-map map-name;
 unit logical-unit-number {
 forwarding-class class-name;
 classifiers {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) (classifier-name | default);
 }
 }
 }
 }
 multi-destination {
 family {
 ethernet {
 broadcast forwarding-class-name;
 }
 inet {
 classifiers {
 (dscp | dscp-ipv6 | inet-precedence) classifier-name;
 }
 }
 }
 scheduler-map map-name;
 }
 rewrite-rules {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) rewrite-name {
 import (rewrite-name | default);
 forwarding-class class-name {
 loss-priority priority code-point (alias | bits);
 }
 }
 }
 scheduler-maps {
```

```

 map-name {
 forwarding-class class-name scheduler scheduler-name;
 }
}
schedulers {
 scheduler-name {
 buffer-size (percent percentage | remainder);
 drop-profile-map loss-priority loss-priority protocol protocol drop-profile profile-name;
 priority priority;
 shaping-rate (rate | percent percentage);
 transmit-rate (EX Series Switches) (rate | percent percentage | remainder);
 }
}
}

```

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Hierarchy Level</b>          | [edit]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Configure class-of-service (CoS) parameters on EX Series switches.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Default</b>                  | If you do not configure any CoS features, the default CoS settings are used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Defining CoS Code-Point Aliases (CLI Procedure) on page 85</a> or <a href="#">Defining CoS Code-Point Aliases (J-Web Procedure) on page 85</a></li> <li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li> <li>• <a href="#">Defining CoS Forwarding Classes (CLI Procedure) on page 91</a> or <a href="#">Defining CoS Forwarding Classes (J-Web Procedure) on page 91</a></li> <li>• <a href="#">Configuring CoS Tail Drop Profiles (CLI Procedure) on page 100</a></li> <li>• <a href="#">Defining CoS Schedulers and Scheduler Maps (CLI Procedure) on page 93</a> or <a href="#">Defining CoS Schedulers (J-Web Procedure) on page 95</a></li> <li>• <a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102</a> or <a href="#">Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li> <li>• <a href="#">Assigning CoS Components to Interfaces (CLI Procedure) on page 106</a> or <a href="#">Assigning CoS Components to Interfaces (J-Web Procedure) on page 106</a></li> <li>• <a href="#">Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards (CLI Procedure) on page 115</a></li> </ul> |

## classifiers

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>classifiers {<br/>  (dscp   dscp-ipv6   ieee-802.1   inet-precedence   exp) classifier-name {<br/>    import (classifier-name   default);<br/>    forwarding-class class-name {<br/>      loss-priority level {<br/>        code-points [aliases] [6-bit-patterns];<br/>      }<br/>    }<br/>  }<br/>}</pre>                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> ],<br>[edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Expanded to include EXP classifiers in Junos OS Release 10.1 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>Apply a CoS aggregate behavior classifier to a logical interface. You can apply a default classifier or a custom classifier.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Example: Combining CoS with MPLS on EX Series Switches on page 71</a></li><li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li><li>• <a href="#">Assigning CoS Components to Interfaces (CLI Procedure) on page 106</a> or <a href="#">Assigning CoS Components to Interfaces (J-Web Procedure) on page 106</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li></ul> |

## code-point (Congestion Notification)

|                                 |                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>code-point <i>up-bits</i> pfc;</code>                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service congestion-notification-profile (Priority-Based Flow Control)</a> <i>profile-name</i> input <a href="#">ieee-802.1</a> ],<br>[edit class-of-service interfaces <i>interface-name</i> congestion-notification-profile <i>profile-name</i> input <a href="#">ieee-802.1</a> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                                                                                                                                                                          |
| <b>Description</b>              | Configure the IEEE 802.1p (User Priority) code point bits as input for creating the priority-based flow control (PFC) congestion notification profile, which you will associate with a particular traffic class.                                                                                               |
| <b>Options</b>                  | <ul style="list-style-type: none"> <li>• <b>pfc</b>—PFC flow control method</li> <li>• <b>up-bits</b>—Three-bit pattern of the User Priority field in an IEEE 802.1Q tag</li> </ul>                                                                                                                            |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring an FCoE Transit Switch</a></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 116</a></li> </ul>                                                                         |

## code-point-aliases

|                                 |                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>code-point-aliases {<br/>    (<a href="#">dscp</a>   <a href="#">dscp-ipv6</a>   <a href="#">ieee-802.1</a>   <a href="#">inet-precedence</a>) [{<br/> <i>alias-name</i> <i>bits</i>;<br/>    }<br/>}</code>                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> ]                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | Define an alias for a CoS marker.<br><br>The remaining statement is explained separately.                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Defining CoS Code-Point Aliases (CLI Procedure) on page 85</a> or <a href="#">Defining CoS Code-Point Aliases (J-Web Procedure) on page 85</a></li> <li>• <a href="#">Understanding CoS Code-Point Aliases on page 8</a></li> </ul> |

## code-points

---

|                                 |                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>code-points [ <i>aliases</i> ] [ <i>6 bit-patterns</i> ];</code>                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service classifiers</a> ( <a href="#">dscp</a>   <a href="#">ieee-802.1</a>   <a href="#">inet-precedence</a> ) <a href="#">forwarding-class</a> <a href="#">class-name</a> <a href="#">loss-priority level</a> ]                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify one or more DSCP code-point aliases or bit sets for association with a forwarding class.                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><i>aliases</i> —Name of the DSCP alias.</p> <p><i>6 bit-patterns</i> —Value of the code-point bits, in decimal form.</p>                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li></ul> |



## congestion-notification-profile (Priority-Based Flow Control)

|                            |                                                                                                                                                            |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>congestion-notification-profile <i>profile-name</i> {<br/>    input {<br/>        ieee-802.1 {<br/>            code-point <i>up-bits</i> pfc;</code> |
| <b>Hierarchy Level</b>     | [edit <code>class-of-service</code> ],<br>[edit <code>class-of-service interfaces interface-name</code> ]                                                  |
| <b>Release Information</b> | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                      |
| <b>Description</b>         | (EX4500 and EX4550 switches only) Configure a congestion notification profile for priority-based flow control (PFC).                                       |



**NOTE:** You must configure PFC for FCoE traffic. The interface where PFC is enabled must be a 10-Gigabit Ethernet interface.

The remaining statements are explained separately.

|                                 |                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring an FCoE Transit Switch</i></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 116</a></li> </ul> |

## drop-probability (Fill Level)

---

|                                 |                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>drop-probability <i>percentage</i>;</code>                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit <code>class-of-service drop-profiles <i>profile-name</i> fill-level <i>percentage</i></code> ]                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced before Junos OS 11.4 for EX Series switches.                                                                                                                                                                            |
| <b>Description</b>              | (EX8200 standalone switches and EX8200 Virtual Chassis only) Drop packets at the rate of the drop-probability value when the queue fills to the percentage configured with the fill-level value. This way you can manage network congestion. |
| <b>Options</b>                  | <b><i>percentage</i></b> —The probability (expressed in percentage) for a packet to be dropped from the queue.<br><b>Range:</b> 0 through 100                                                                                                |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring CoS Tail Drop Profiles (CLI Procedure) on page 100</a></li><li>• <a href="#">Understanding Junos OS CoS Components for EX Series Switches on page 6</a></li></ul>            |

## drop-profile-map

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>drop-profile-map <b>loss-priority</b> <i>loss-priority</i> <b>protocol</b> <i>protocol</i> drop-profile <i>profile-name</i>;</code>                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit <code>class-of-service schedulers <i>scheduler-name</i></code> ]                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Define the loss priority value for the specified drop profile.                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <b>drop-profile <i>profile-name</i></b> —Name of the drop profile.<br><br>The remaining statements are explained separately.                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Schedulers and Scheduler Maps (CLI Procedure) on page 93</a> or <a href="#">Defining CoS Schedulers (J-Web Procedure) on page 95</a></li><li>• <a href="#">Understanding CoS Schedulers on page 17</a></li></ul> |

## dscp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> dscp classifier-name {     import (classifier-name   default);     forwarding-class class-name {         loss-priority level {             code-points [ aliases ] [ 6-bit-patterns ];         }     } } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | <pre> [edit class-of-service classifiers], [edit class-of-service code-point-aliases], [edit class-of-service interfaces interface-name unit logical-unit-number classifiers], [edit class-of-service rewrite-rules] </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Define the Differentiated Services code point (DSCP) mapping that is applied to the packets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>classifier-name</b>—Name of the classifier.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Defining CoS Code-Point Aliases (CLI Procedure) on page 85</a> or <a href="#">Defining CoS Code-Point Aliases (J-Web Procedure) on page 85</a></li> <li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li> <li>• <a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102</a> or <a href="#">Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li> <li>• <a href="#">Assigning CoS Components to Interfaces (CLI Procedure) on page 106</a> or <a href="#">Assigning CoS Components to Interfaces (J-Web Procedure) on page 106</a></li> <li>• <a href="#">Understanding CoS Classifiers on page 11</a></li> </ul> |

## dscp-ipv6

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>dscp-ipv6 classifier-name {<br/>    import (classifier-name   default);<br/>    forwarding-class class-name {<br/>        loss-priority level {<br/>            code-points [aliases] [6-bit-patterns];<br/>        }<br/>    }<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | <pre>[edit class-of-service classifiers],<br/>[edit class-of-service code-point-aliases],<br/>[edit class-of-service interfaces interface-name unit logical-unit-number classifiers]<br/>[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]<br/>[edit class-of-service rewrite-rules]</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.2 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Define the Differentiated Services code point (DSCP) mapping that is applied to the IPv6 packets.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><i>classifier-name</i>—Name of the classifier.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Code-Point Aliases (CLI Procedure) on page 85</a> or <a href="#">Defining CoS Code-Point Aliases (J-Web Procedure) on page 85</a></li><li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li><li>• <a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102</a> or <a href="#">Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li><li>• <a href="#">Assigning CoS Components to Interfaces (CLI Procedure) on page 106</a> or <a href="#">Assigning CoS Components to Interfaces (J-Web Procedure) on page 106</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li></ul> |

---

## ethernet (CoS for Multidestination Traffic)

---

|                                 |                                                                                                                                                                                                                                                        |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ethernet {<br/>    <b>broadcast</b> <i>forwarding-class-name</i>;<br/>}</pre>                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit <b>class-of-service multi-destination family</b> ]                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                   |
| <b>Description</b>              | <p>Specify the Ethernet broadcast traffic family.</p> <p>The remaining statement is explained separately.</p>                                                                                                                                          |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Understanding CoS Schedulers on page 17</a></li><li>• <a href="#">Understanding CoS Forwarding Classes on page 14</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li></ul> |

## exp

---

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | <pre>exp classifier-name {<br/>    import (classifier-name   default);<br/>    forwarding-class class-name {<br/>        loss-priority level {<br/>            code-points [aliases] [3-bit-patterns];<br/>        }<br/>    }<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                   |
| Hierarchy Level          | <pre>[edit class-of-service classifiers],<br/>[edit class-of-service code-point-aliases],<br/>[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules],<br/>[edit class-of-service rewrite-rules]</pre>                                                                                                                                                                                                                                                                                                                                                      |
| Release Information      | Statement introduced in Junos OS Release 10.1 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Description              | <p>Define the experimental bits (EXP) code point mapping that is applied to MPLS packets. You can define an <b>exp</b> classifier only on EX3200 switches, EX4200 and EX8200 standalone switches, and EX8200 Virtual Chassis. You can bind an <b>exp</b> rewrite rule on EX8200 standalone switches and EX8200 Virtual Chassis.</p> <p>EX Series switches support only one EXP code mapping on the switch (either default or custom). It is applied globally and implicitly to all the MPLS-enabled interfaces on the switch. You cannot bind it or disable it on individual interfaces.</p> |
| Options                  | <p><b>classifier-name</b>—Name of the classifier.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Required Privilege Level | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Related Documentation    | <ul style="list-style-type: none"><li>• <a href="#">Understanding Using CoS with MPLS Networks on EX Series Switches on page 29</a></li><li>• <a href="#">Configuring MPLS on Provider Edge Switches Using Circuit Cross-Connect (CLI Procedure)</a></li><li>• <a href="#">Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure)</a></li><li>• <a href="#">Configuring CoS on Provider Switches of an MPLS Network (CLI Procedure) on page 113</a></li></ul>                                                                                                         |

## family

---

**Syntax**

```
family {
 ethernet {
 broadcast forwarding-class-name;
 }
 inet {
 classifiers{
 (dscp | ieee-802.1 | inet-precedence) classifier-name;
 }
 }
}
```

**Hierarchy Level** [edit [class-of-service multi-destination](#)]

**Release Information** Statement introduced in Junos OS Release 9.5 for EX Series switches.

**Description** Specify the multidestination traffic family.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.interface-control—To add this statement to the configuration.

- Related Documentation**
- [Understanding CoS Schedulers on page 17](#)
  - [Understanding CoS Forwarding Classes on page 14](#)
  - [Understanding CoS Classifiers on page 11](#)

## forwarding-class

---

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | <pre>forwarding-class <i>class-name</i> {<br/>    loss-priority <i>level</i> {<br/>        code-points [<i>aliases</i>] [<i>6-bit-patterns</i>];<br/>    }<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Hierarchy Level          | [edit <a href="#">class-of-service classifiers</a> ( <a href="#">dscp</a>   <a href="#">ieee-802.1</a>   <a href="#">inet-precedence</a> ) <i>classifier-name</i> ],<br>[edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ],<br>[edit <a href="#">class-of-service rewrite-rules</a> ] ( <a href="#">dscp</a>   <a href="#">ieee-802.1</a>   <a href="#">inet-precedence</a> ) <i>rewrite-rule-name</i> ],<br>[edit <a href="#">class-of-service scheduler-maps</a> <i>map-name</i> ],<br>[edit <a href="#">class-of-service</a> <i>host-outbound-traffic</i> ] |
| Release Information      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Description              | Define forwarding class name and option values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Options                  | <p><i>class-name</i> —Name of the forwarding class.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Required Privilege Level | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Related Documentation    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Forwarding Classes (CLI Procedure) on page 91</a> or <a href="#">Defining CoS Forwarding Classes (J-Web Procedure) on page 91</a></li><li>• <a href="#">Understanding CoS Forwarding Classes on page 14</a></li></ul>                                                                                                                                                                                                                                                            |



---

## forwarding-classes

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>forwarding-classes {<br/>  <b>class</b> <i>class-name</i> queue-num <i>queue-number</i>;<br/>}</pre>                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit <b>class-of-service</b> ]                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | <p>Associate the forwarding class with a queue name and number.</p> <p>The statement is explained separately.</p>                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Forwarding Classes (CLI Procedure) on page 91</a> or <a href="#">Defining CoS Forwarding Classes (J-Web Procedure) on page 91</a></li><li>• <a href="#">Understanding CoS Forwarding Classes on page 14</a></li></ul> |

## ieee-802.1

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ieee-802.1 classifier-name {<br/>    import (classifier-name   default);<br/>    forwarding-class class-name {<br/>        loss-priority level {<br/>            code-points [ aliases ] [ 6 bit-patterns ];<br/>        }<br/>    }<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service classifiers</a> ],<br>[edit <a href="#">class-of-service code-point-aliases</a> ],<br>[edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number classifiers</a> ],<br>[edit <a href="#">class-of-service rewrite-rules</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Apply an IEEE-802.1 rewrite rule.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <b>classifier-name</b> —Name of the classifier.<br><br>The remaining statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li><li>• <a href="#">Defining CoS Code-Point Aliases (CLI Procedure) on page 85</a> or <a href="#">Defining CoS Code-Point Aliases (J-Web Procedure) on page 85</a></li><li>• <a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102</a> or <a href="#">Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li><li>• <a href="#">Understanding CoS Rewrite Rules on page 25</a></li></ul> |

## ieee-802.1 (Congestion Notification)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ieee-802.1 {   code-point up-bits pfc ; }</pre>                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> congestion-notification-profile <i>profile-name</i> ],<br>[edit class-of-service interfaces interface-name congestion-notification-profile <i>profile-name</i> ]                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Set an association between the traffic class and the congestion notification profile.<br><br>The remaining statement is explained separately.                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">[edit class-of-service] Configuration Statement Hierarchy on EX Series Switches on page 124</a></li> <li>• <i>Example: Configuring an FCoE Transit Switch</i></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 116</a></li> </ul> |

## import

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>import (classifier-name   default);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | <code>[edit class-of-service classifiers (dscp   ieee-802.1   inet-precedence) classifier-name],</code><br><br><code>[edit class-of-service rewrite-rules (dscp   ieee-802.1   inet-precedence) rewrite-name]</code>                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Specify a default or previously defined classifier.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <b>classifier-name</b> —Name of the classifier mapping configured at the <code>[edit class-of-service classifiers]</code> hierarchy level.<br><br><b>default</b> —Default classifier mapping.                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | <b>interface</b> —To view this statement in the configuration.<br><b>interface-control</b> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li><li>• <a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102</a> or <a href="#">Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li><li>• <a href="#">Understanding CoS Rewrite Rules on page 25</a></li></ul> |

## inet (CoS)

|                                 |                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>inet {   classifiers {     (dscp   ieee-802.1   inet-precedence) classifier-name ;   } }</pre>                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service multi-destination family</a> ]                                                                                                                                                                                          |
| <b>Release Information</b>      | Option <b>inet</b> introduced in Junos OS Release 9.5 for EX Series switches.<br>The remaining statements are explained separately.                                                                                                                        |
| <b>Description</b>              | Specify the IP multicast family.<br><br>The remaining statements are explained separately.                                                                                                                                                                 |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding CoS Schedulers on page 17</a></li> <li>• <a href="#">Understanding CoS Forwarding Classes on page 14</a></li> <li>• <a href="#">Understanding CoS Classifiers on page 11</a></li> </ul> |

## inet6 (CoS Multidestination)

|                                 |                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>inet6 {   classifiers {     dscp-ipv6 classifier-name;   } }</pre>                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service multi-destination family</a> ]                                                                                                                                                                                          |
| <b>Release Information</b>      | Option <b>inet6</b> introduced in Junos OS Release before Junos OS 11.4 for EX Series switches.                                                                                                                                                            |
| <b>Description</b>              | (EX8200 standalone switches and EX8200 Virtual Chassis only) Specify the IPv6 multicast family.<br><br>The remaining statements are explained separately.                                                                                                  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding CoS Schedulers on page 17</a></li> <li>• <a href="#">Understanding CoS Forwarding Classes on page 14</a></li> <li>• <a href="#">Understanding CoS Classifiers on page 11</a></li> </ul> |

## inet-precedence

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>inet-precedence classifier-name {<br/>    import (classifier-name   default);<br/>    forwarding-class class-name {<br/>        loss-priority level {<br/>            code-points [ aliases ] [ 6-bit-patterns ];<br/>        }<br/>    }<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service classifiers</a> ],<br>[edit <a href="#">class-of-service code-point-aliases</a> ],<br>[edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number classifiers</a> ],<br>[edit <a href="#">class-of-service rewrite-rules</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Apply an IPv4 precedence rewrite rule.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><i>classifier-name</i>—Name of the classifier.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li><li>• <a href="#">Defining CoS Code-Point Aliases (CLI Procedure) on page 85</a> or <a href="#">Defining CoS Code-Point Aliases (J-Web Procedure) on page 85</a></li><li>• <a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102</a> or <a href="#">Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li><li>• <a href="#">Understanding CoS Rewrite Rules on page 25</a></li></ul> |

## input (Congestion Notification)

|                                 |                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>input {   ieee-802.1 {     code-point <i>up-bits</i> pfc ;   } }</pre>                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service congestion-notification-profile (Priority-Based Flow Control) <i>profile-name</i></a> ],<br>[edit class-of-service interfaces <i>interface-name</i> congestion-notification-profile <i>profile-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.4 for EX Series switches.                                                                                                                                                                        |
| <b>Description</b>              | <p>Identify the three-bit pattern of the User Priority field that triggers the priority-based congestion notification profile for a specified traffic class.</p> <p>The remaining statements are explained separately.</p>                   |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring an FCoE Transit Switch</a></li> <li>• <a href="#">Configuring Priority-Based Flow Control for an EX Series Switch (CLI Procedure) on page 116</a></li> </ul>       |

## interfaces

```
Syntax interfaces {
 interface-name {
 congestion-notification-profile profile-name {
 input {
 ieee-802.1 {
 code-point up-bits pfc;
 }
 }
 }
 scheduler-map map-name;
 unit logical-unit-number {
 forwarding-class class-name;
 classifiers {
 (dscp | ieee-802.1 | inet-precedence) (classifier-name | default);
 }
 }
 }
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 9.0 for EX Series switches.

**Description** Configure interface-specific class-of-service (CoS) properties for incoming packets.

**Options** *interface-name*—Name of the interface.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring CoS on EX Series Switches on page 47](#)
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#) or [Defining CoS Classifiers \(J-Web Procedure\) on page 89](#)
- [Defining CoS Forwarding Classes \(CLI Procedure\) on page 91](#) or [Defining CoS Forwarding Classes \(J-Web Procedure\) on page 91](#)
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#) or [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)
- [Configuring Priority-Based Flow Control for an EX Series Switch \(CLI Procedure\) on page 116](#)



## loss-priority (Classifiers and Rewrite Rules)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>loss-priority <i>level</i> {   <i>code-points</i> [<i>aliases</i>] [<i>6-bit-patterns</i>   <i>3-bit-patterns</i>]; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | <pre>[edit <i>class-of-service</i> <i>classifiers</i> (<i>dscp</i>   <i>ieee-802.1</i>   <i>inet-precedence</i>   <i>exp</i>) <i>classifier-name</i>   <i>forwarding-class</i> <i>class-name</i>], [edit <i>class-of-service</i> <i>rewrite-rules</i> (<i>dscp</i>   <i>ieee-802.1</i>   <i>inet-precedence</i>   <i>exp</i>)   <i>rewrite-rule-name</i> <i>forwarding-class</i> <i>class-name</i>]</pre>                                                                                                                                                                           |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement expanded to apply to EXP classifiers in Junos OS Release 10.1 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify packet loss priority value for a specific set of code-point aliases and bit patterns.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b><i>level</i></b> —Can be one of the following:</p> <ul style="list-style-type: none"> <li><b>high</b>—Packet has high loss priority.</li> <li><b>medium-high</b>— (On EX3200, EX4200, EX4300, and EX4500 switches only) Code points to classify to loss priority medium-high.</li> <li><b>low</b>—Packet has low loss priority.</li> <li><b>medium-low</b> — (On EX3200, EX4200, EX4300, and EX4500 switches only) Code points to classify to loss priority medium-low.</li> </ul> <p>The remaining statement is explained separately.</p>                                    |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li><a href="#">Defining CoS Classifiers (CLI Procedure) on page 87</a> or <a href="#">Defining CoS Classifiers (J-Web Procedure) on page 89</a></li> <li><a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102</a> or <a href="#">Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li> <li><a href="#">Understanding CoS Classifiers on page 11</a></li> <li><a href="#">Understanding CoS Rewrite Rules on page 25</a></li> </ul> |

## multi-destination

---

**Syntax**

```
multi-destination {
 classifiers {
 dscp classifier-name;
 }
 family {
 ethernet {
 broadcast (forwarding-class-name);
 }
 inet {
 classifiers {
 (dscp | inet-precedence) classifier-name;
 }
 }
 inet6 {
 classifiers {
 dscp-ipv6 classifier-name;
 }
 }
 }
 scheduler-map map-name;
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 9.5 for EX Series switches.

**Description** (EX8200 standalone switches and EX8200 Virtual Chassis only) Define the CoS configuration for multidestination traffic.

The remaining statements are explained separately.

**Required Privilege Level** interface—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Understanding CoS Schedulers on page 17](#)
- [Understanding CoS Forwarding Classes on page 14](#)
- [Understanding CoS Classifiers on page 11](#)

## policing

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>policing (filter <i>filter-name</i>   no-automatic-policing);</code>                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | <code>[edit protocols mpls label-switched-path <i>lsp-name</i>]</code><br><code>[edit interfaces <i>interface-id</i> unit <i>number-of-logical-unit</i> family inet address <i>ip-address</i>]</code>                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1 for EX Series switches.                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Apply a rate-limiting policer as the specified policing filter: <ul style="list-style-type: none"> <li>• To the LSP for MPLS over CCC.</li> <li>• To the customer-edge interface for IP over MPLS.</li> </ul>                                                                                                                                                                                 |
| <b>Options</b>                  | <b>filter <i>filter-name</i></b> —Specify the name of the policing filter.<br><br><b>no-automatic-policing</b> —Disable automatic policing on this LSP.                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>policer</i></li> <li>• <i>Configuring Policers to Control Traffic Rates (CLI Procedure)</i></li> <li>• <i>Configuring CoS on an MPLS Provider Edge Switch Using Circuit Cross-Connect (CLI Procedure)</i> on page 111</li> <li>• <i>Configuring CoS on an MPLS Provider Edge Switch Using IP Over MPLS (CLI Procedure)</i> on page 109</li> </ul> |

## priority (Schedulers)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>priority <i>priority</i>;</code>                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service schedulers <i>scheduler-name</i></a> ]                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify packet-scheduling priority value.                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <b><i>priority</i></b> —It can be one of the following: <ul style="list-style-type: none"><li>• <b>low</b>—Scheduler has low priority.</li><li>• <b>strict-high</b>—Scheduler has strictly high priority.</li></ul>                                                                                                                                                   |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Schedulers and Scheduler Maps (CLI Procedure) on page 93</a> or <a href="#">Defining CoS Schedulers (J-Web Procedure) on page 95</a></li><li>• <a href="#">Understanding CoS Schedulers on page 17</a></li></ul> |

## protocol (Drop Profiles)

---

|                                 |                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>protocol <i>protocol</i> drop-profile <i>profile-name</i>;</code>                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service schedulers <i>scheduler-name</i></a> ]                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                           |
| <b>Description</b>              | Specify the protocol type for the specified drop profile.                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <b>drop-profile <i>profile-name</i></b> —Name of the drop profile.<br><br><b><i>protocol</i></b> —Type of protocol. It can be: <ul style="list-style-type: none"><li>• <b>any</b>—Accept any protocol type.</li></ul>                                                                          |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Configuring CoS Tail Drop Profiles (CLI Procedure) on page 100</a></li><li>• <a href="#">Understanding CoS Tail Drop Profiles on page 17</a></li></ul> |

## rewrite-rules

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>rewrite-rules {   (dscp   dscp-ipv6   exp   ieee-802.1   inet-precedence ) rewrite-name {     import ( default   rewrite-name);     forwarding-class class-name {       loss-priority level code-point (alias   bits);     }   } }</pre>                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Statement expanded for use with global EXP classifiers in Junos OS Release 10.1 for EX Series switches.</p>                                                                                                                                                                                                                                                               |
| <b>Description</b>              | <p>Specify a rewrite-rules mapping for the traffic that passes through all queues on the interface.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Defining CoS Rewrite Rules (CLI Procedure) on page 102 or Defining CoS Rewrite Rules (J-Web Procedure) on page 103</a></li> <li>• <a href="#">Understanding CoS Rewrite Rules on page 25</a></li> <li>• <a href="#">Understanding Using CoS with MPLS Networks on EX Series Switches on page 29</a></li> </ul> |

## scheduler-map

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>scheduler-map <i>map-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service interfaces</a> ],<br>[edit <a href="#">class-of-service multi-destination</a> ]                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Associate a scheduler map name with an interface or with a multidestination traffic configuration.                                                                                                                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <i>map-name</i> —Name of the scheduler map.                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Assigning CoS Components to Interfaces (CLI Procedure) on page 106</a> or <a href="#">Assigning CoS Components to Interfaces (J-Web Procedure) on page 106</a></li><li>• <a href="#">Understanding CoS Schedulers on page 17</a></li><li>• <a href="#">Understanding CoS Classifiers on page 11</a></li></ul> |

## scheduler-maps

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> scheduler-maps {   map-name {     forwarding-class class-name scheduler scheduler-name;   } } </pre>                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> ]                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Specify a scheduler map name and associate it with the scheduler configuration and forwarding class.                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <p><b>map-name</b> —Name of the scheduler map.</p> <p>The remaining statement is explained separately.</p>                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Defining CoS Forwarding Classes (CLI Procedure) on page 91</a> or <a href="#">Defining CoS Forwarding Classes (J-Web Procedure) on page 91</a></li> <li>• <a href="#">Understanding CoS Schedulers on page 17</a></li> <li>• <a href="#">Understanding CoS Forwarding Classes on page 14</a></li> </ul> |

## schedulers (CoS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>schedulers {<br/>  scheduler-name {<br/>    buffer-size (percent <i>percentage</i>   remainder);<br/>    drop-profile-map loss-priority <i>loss-priority</i> protocol <i>protocol</i> drop-profile <i>profile-name</i>;<br/>    excess-rate (percent <i>percentage</i>);<br/>    priority <i>priority</i>;<br/>    shaping-rate (rate   percent <i>percentage</i>);<br/>    transmit-rate (EX Series Switches) (rate   percent <i>percentage</i>   remainder);<br/>  }<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Specify scheduler name and parameter values.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><i>scheduler-name</i> —Name of the scheduler.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Defining CoS Schedulers and Scheduler Maps (CLI Procedure) on page 93</a> or <a href="#">Defining CoS Schedulers (J-Web Procedure) on page 95</a></li><li>• <a href="#">Understanding CoS Schedulers on page 17</a></li></ul>                                                                                                                   |



## shaping-rate

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | shaping-rate (percent <i>percentage</i>   rate);                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service schedulers (CoS) scheduler-name</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.3 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | <p>Configure shaping rate to throttle the rate at which queues transmit packets.</p> <p>We recommend that you configure the shaping rate as an absolute maximum usage and not as additional usage beyond the configured transmit rate.</p>                                                                                                                                                                                                                                                                    |
| <b>Default</b>                  | If you do not include this statement, the default shaping rate is 100 percent, which is the same as no shaping at all.                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>percentpercentage</b>—Shaping rate as a percentage of the available interface bandwidth.<br/> <b>Range:</b> 0 through 100 percent</p> <p><b>rate</b>—Peak rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).<br/> <b>Range:</b> 3200 through 32,000,000,000 bps<br/>         (EX4300 switches only) 8000 through 160,000,000,000 bps</p> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Understanding Junos OS CoS Components for EX Series Switches on page 6</a></li> </ul>                                                                                                                                                                                                                                                                               |

## shared-buffer

---

|                                 |                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | shared-buffer percent <i>percentage</i>                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> ],                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1 for EX Series switches.                                                                                                                                                        |
| <b>Description</b>              | Configure the buffer allocation for the shared buffer pool.                                                                                                                                                                  |
| <b>Options</b>                  | <b>percent <i>percentage</i></b> —Size of the shared buffer as a percentage of the buffer allocated to the shared buffer pool.                                                                                               |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Understanding Junos OS CoS Components for EX Series Switches on page 6</a></li></ul> |

## transmit-rate (EX Series Switches)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>transmit-rate (rate   percent <i>percentage</i>   remainder);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service schedulers scheduler-name</a> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Specify the transmit rate or percentage for a scheduler.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Default</b>                  | If you do not include this statement, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are 95, 0, 0, 0, 0, 0, 0, and 5 percent.                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><b>rate</b> —Transmission rate, in bps. You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).</p> <p><b>Range:</b> 3200 through 160,000,000,000 bps</p> <p>(EX4300 switches only) 8000 through 160,000,000,000 bps</p> <p><b>percent <i>percentage</i></b> —Percentage of transmission capacity. A percentage of zero drops all packets in the queue.</p> <p><b>Range:</b> 0 through 100 percent</p> <p><b>remainder</b>—Remaining rate available</p> |
| <b>Required Privilege Level</b> | <p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Defining CoS Schedulers and Scheduler Maps (CLI Procedure) on page 93</a> or <a href="#">Defining CoS Schedulers (J-Web Procedure) on page 95</a></li> <li>• <a href="#">Understanding CoS Schedulers on page 17</a></li> </ul>                                                                                                                                                                                                            |

## tri-color (EX Series Switches)

```
Syntax tri-color {
 classifiers {
 (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) classifier-name {
 forwarding-class (class-name | assured-forwarding | best-effort | expedited-forwarding
 | network-control) {
 loss-priority (high | low | medium-high | medium-low) {
 code-points [aliases] [6 bit-patterns];
 }
 }
 }
 import (classifier-name | default);
 }
}
code-point-aliases {
 (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) {
 alias-name bits;
 }
}
drop-profiles {
 profile-name {
 fill-level percentage drop-probability percentage;
 interpolate {
 drop-probability [values];
 fill-level [values]
 }
 }
}
forwarding-classes {
 class class-name {
 priority (high | low);
 queue-num queue-number;
 }
 queue queue-number;
}
host-outbound-traffic {
 forwarding-class class-name;
 dscp-code-point value;
}
interfaces {
 interface-name {
 congestion-notification-profile profile-name {
 input {
 ieee-802.1 {
 code-point up-bits pfc;
 }
 }
 }
 }
}
scheduler-map map-name;
shaping-rate;
unit (logical-unit-number | *) {
 classifiers {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) (classifier-name | default);
 }
}
```

```

 }
 forwarding-class (class-name | assured-forwarding | best-effort |
 expedited-forwarding | network-control) ; {
 rewrite-rules {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) (rewrite-rule-name | default);
 }
 classifiers {
 (dscp | dscp-ipv6 | ieee-802.1 | inet-precedence) classifier-name;
 }
 }
 rewrite-rules {
 (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) rewrite-rule-name;
 }
}
}
rewrite-rules {
 (dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence) rewrite-rule-name {
 forwarding-class (class-name | assured-forwarding | best-effort | expedited-forwarding
 | network-control) {
 loss-priority (high | low | medium-high | medium-low) code-point (alias | bits);
 }
 import (rewrite-rule-name | default);
 }
}
scheduler-maps {
 map-name {
 forwarding-class (class-name | assured-forwarding | best-effort | expedited-forwarding
 | network-control) {
 scheduler scheduler-name;
 }
 }
}
schedulers {
 scheduler-name {
 buffer-size (exact | percent percentage | remainder | temporal);
 drop-profile-map {
 loss-priority (high | low);
 protocol any;
 }
 priority (low | strict-high);
 shaping-rate (rate | percent percentage);
 transmit-rate (EX Series Switches) (rate | percent percentage | remainder);
 }
}
shared-buffer {
 percent percentage;
}
traceoptions {
 file (file-name | files files | match match | no-world-readable | size size | world-readable);
 flag (all | asynch | chassis-scheduler | cos-adjustment | dynamic | hardware-database
 | init | parse | performance-monitor | process | restart | route-socket | show | snmp |
 util);
 no-remote-trace;
}
}

```

|                                 |                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service</a> ]                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced before Junos OS 11.4 for EX Series switches.                                                                                                                                                            |
| <b>Description</b>              | (EX4500 and EX4550 switches only) Enable tricolor marking.                                                                                                                                                                   |
| <b>Options</b>                  | <b>percent <i>percentage</i></b> —Size of the shared buffer as a percentage of the buffer allocated to the shared buffer pool.                                                                                               |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Understanding Junos OS CoS Components for EX Series Switches on page 6</a></li></ul> |

---

## unit

---

|                                 |                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>unit <i>logical-unit-number</i> {<br/>    forwarding-class <i>class-name</i>;<br/>    classifiers {<br/>        (<i>dscp</i>   <i>ieee-802.1</i>   <i>inet-precedence</i>) (<i>classifier-name</i>   default);<br/>    }<br/>}</pre>                                                                        |
| <b>Hierarchy Level</b>          | [edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> ]                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0 for EX Series switches.                                                                                                                                                                                                                                             |
| <b>Description</b>              | Configure a logical interface on the physical device. You must configure a logical interface to be able to use the physical device.                                                                                                                                                                              |
| <b>Options</b>                  | <b><i>logical-unit-number</i></b> —Number of the logical unit.<br><b>Range:</b> 0 through 16,385<br><br>The remaining statements are explained separately.                                                                                                                                                       |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li><li>• <a href="#">Assigning CoS Components to Interfaces (CLI Procedure) on page 106</a> or <a href="#">Assigning CoS Components to Interfaces (J-Web Procedure) on page 106</a></li></ul> |

## PART 3

# Administration

- [Routine Monitoring on page 167](#)
- [Operational Commands on page 177](#)





## CHAPTER 5

# Routine Monitoring

- [Monitoring CoS Classifiers on page 167](#)
- [Monitoring CoS Forwarding Classes on page 168](#)
- [Monitoring Interfaces That Have CoS Components on page 170](#)
- [Monitoring CoS Rewrite Rules on page 171](#)
- [Monitoring CoS Scheduler Maps on page 172](#)
- [Monitoring CoS Value Aliases on page 174](#)
- [Monitoring CoS Drop Profiles on page 174](#)

## Monitoring CoS Classifiers

### Purpose



**NOTE:** This topic applies only to the J-Web Application package.

Use the monitoring functionality to display the mapping of incoming CoS values to forwarding class and loss priority for each classifier.

### Action

To monitor CoS classifiers in the J-Web interface, select **Monitor > Class of Service > Classifiers**.

To monitor CoS classifiers in the CLI, enter the following CLI command:

```
show class-of-service classifier
```

### Meaning

[Table 27 on page 167](#) summarizes key output fields for CoS classifiers.

**Table 27: Summary of Key CoS Classifier Output Fields**

| Field           | Values                | Additional Information                                      |
|-----------------|-----------------------|-------------------------------------------------------------|
| Classifier Name | Name of a classifier. | To display classifier assignments, click the plus sign (+). |

Table 27: Summary of Key CoS Classifier Output Fields (*continued*)

| Field                      | Values                                                                                                                                                                                                                                                                                     | Additional Information |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| CoS Value Type             | The classifiers are displayed by type: <ul style="list-style-type: none"> <li>• <b>dscp</b>—All classifiers of the DSCP type.</li> <li>• <b>ieee-802.1</b>—All classifiers of the IEEE 802.1 type.</li> <li>• <b>inet-precedence</b>—All classifiers of the IP precedence type.</li> </ul> |                        |
| Index                      | Internal index of the classifier.                                                                                                                                                                                                                                                          |                        |
| Incoming CoS Value         | CoS value of the incoming packets, in bits. These values are used for classification.                                                                                                                                                                                                      |                        |
| Assign to Forwarding Class | Forwarding class that the classifier assigns to an incoming packet. This class affects the forwarding and scheduling policies that are applied to the packet as it transits the switch.                                                                                                    |                        |
| Assign to Loss Priority    | Loss priority value that the classifier assigns to the incoming packet based on its CoS value.                                                                                                                                                                                             |                        |

- Related Documentation**
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#)
  - [Defining CoS Classifiers \(J-Web Procedure\) on page 89](#)
  - [Example: Configuring CoS on EX Series Switches on page 47](#)

## Monitoring CoS Forwarding Classes

### Purpose



**NOTE:** This topic applies only to the J-Web Application package.

View the current assignment of class-of-service (CoS) forwarding classes to queues on the switch.

### Action

To monitor CoS forwarding classes in the J-Web interface, select **Monitor > Class of Service > Forwarding Classes**.

To monitor CoS forwarding classes in the CLI, enter the following CLI command:

```
show class-of-service forwarding-class
```

### Meaning

[Table 28 on page 169](#) summarizes key output fields for CoS forwarding classes.

Table 28: Summary of Key CoS Forwarding Class Output Fields

| Field            | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Forwarding Class | <p>Names of forwarding classes assigned to queue numbers. The following are the default forwarding classes:</p> <ul style="list-style-type: none"> <li>• <b>best-effort</b>—Provides no special CoS handling of packets. Loss priority is typically not carried in a CoS value.</li> <li>• <b>expedited-forwarding</b>—Provides low loss, low delay, low jitter, assured bandwidth, and end-to-end service.</li> <li>• <b>assured-forwarding</b>—Provides high assurance for packets within the specified service profile. Excess packets are dropped.</li> <li>• <b>network-control</b>—Packets can be delayed but not dropped.</li> </ul> <p>EX8200 switches have the following additional default forwarding classes:</p> <ul style="list-style-type: none"> <li>• <b>mcast-be</b>—Provides no special CoS handling of packets.</li> <li>• <b>mcast-ef</b>—Provides low loss, low delay, low jitter, assured bandwidth, and end-to-end service.</li> <li>• <b>mcast-af</b>—Provides high assurance for packets within the specified service profile. Excess packets are dropped.</li> </ul> <p>EX4300 switches supports all the forwarding classes mentioned above and the one mentioned in this section:</p> <ul style="list-style-type: none"> <li>• <b>mcast-nc</b>—Provides multicast network-control traffic.</li> </ul> |
| Queue            | <p>Queue number corresponding to the forwarding class name. The default forwarding classes are assigned as follows:</p> <ul style="list-style-type: none"> <li>• <b>best-effort</b>—0</li> <li>• <b>expedited-forwarding</b>—5</li> <li>• <b>assured-forwarding</b>—1</li> <li>• <b>network-control</b>—7</li> <li>• <b>mcast-be</b>—2</li> <li>• <b>mcast-ef</b>—4</li> <li>• <b>mcast-af</b>—6</li> </ul> <p>EX4300 switches have the following queue numbers for the forwarding classes:</p> <ul style="list-style-type: none"> <li>• <b>best-effort</b>—0</li> <li>• <b>expedited-forwarding</b>—1</li> <li>• <b>assured-forwarding</b>—2</li> <li>• <b>network-control</b>—3</li> <li>• <b>mcast-be</b>—8</li> <li>• <b>mcast-ef</b>—9</li> <li>• <b>mcast-af</b>—10</li> <li>• <b>mcast-nc</b>—11</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Fabric Priority  | <p>(EX8200 switches only) Fabric priority for the forwarding class, either <b>high</b> or <b>low</b>. The fabric priority determines the priority of packets entering the switch fabric.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

- Related Documentation**
- [Defining CoS Forwarding Classes \(CLI Procedure\) on page 91](#)
  - [Defining CoS Forwarding Classes \(J-Web Procedure\) on page 91](#)
  - [Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards \(CLI Procedure\) on page 115](#)
  - [Example: Configuring CoS on EX Series Switches on page 47](#)

## Monitoring Interfaces That Have CoS Components

### Purpose



**NOTE:** This topic applies only to the J-Web Application package.

Use the monitoring functionality to display details about the physical and logical interfaces and the CoS components assigned to them.

### Action

To monitor interfaces that have CoS components in the J-Web interface, select **Monitor > Class of Service > Interface Association**.

To monitor interfaces that have CoS components in the CLI, enter the following command:

```
show class-of-service interface interface
```

### Meaning

[Table 29 on page 170](#) summarizes key output fields for CoS interfaces.

**Table 29: Summary of Key CoS Interfaces Output Fields**

| Field             | Values                                                                                            | Additional Information                                                                                 |
|-------------------|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| Interface         | Name of a physical interface to which CoS components are assigned.                                | To display names of logical interfaces configured on this physical interface, click the plus sign (+). |
| Scheduler Map     | Name of the scheduler map associated with this interface.                                         |                                                                                                        |
| Queues Supported  | Number of queues you can configure on the interface.                                              |                                                                                                        |
| Queues in Use     | Number of queues currently configured.                                                            |                                                                                                        |
| Logical Interface | Name of a logical interface on the physical interface to which CoS components are assigned.       |                                                                                                        |
| Object            | Category of an object—for example, <b>classifier</b> , <b>scheduler-map</b> , or <b>rewrite</b> . |                                                                                                        |
| Name              | Name that you have given to an object—for example, <b>ba-classifier</b> .                         |                                                                                                        |

Table 29: Summary of Key CoS Interfaces Output Fields (*continued*)

| Field | Values                                                              | Additional Information |
|-------|---------------------------------------------------------------------|------------------------|
| Type  | Type of an object—for example, <b>dscp</b> for a classifier.        |                        |
| Index | Index of this interface or the internal index of a specific object. |                        |

- Related Documentation**
- [Assigning CoS Components to Interfaces \(CLI Procedure\) on page 106](#)
  - [Assigning CoS Components to Interfaces \(J-Web Procedure\) on page 106](#)
  - [Example: Configuring CoS on EX Series Switches on page 47](#)

## Monitoring CoS Rewrite Rules

### Purpose



**NOTE:** This topic applies only to the J-Web Application package.

Use the monitoring functionality to display information about CoS value rewrite rules, which are based on the forwarding class and loss priority.

**Action** To monitor CoS rewrite rules in the J-Web interface, select **Monitor > Class of Service > Rewrite Rules**.

To monitor CoS rewrite rules in the CLI, enter the following command:

```
show class-of-service rewrite-rules
```

**Meaning** [Table 30 on page 171](#) summarizes key output fields for CoS rewrite rules.

Table 30: Summary of Key CoS Rewrite Rules Output Fields

| Field             | Values                                                                                                                                                                                                                                                      | Additional Information                                                                             |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Rewrite Rule Name | Names of rewrite rules.                                                                                                                                                                                                                                     |                                                                                                    |
| CoS Value Type    | Rewrite rule type: <ul style="list-style-type: none"> <li>• <b>dscp</b>—For IPv4 DiffServ traffic.</li> <li>• <b>exp</b>—For MPLS traffic.</li> <li>• <b>ieee-802.1</b>—For Layer 2 traffic.</li> <li>• <b>inet-precedence</b>—For IPv4 traffic.</li> </ul> | To display forwarding classes, loss priorities, and rewritten CoS values, click the plus sign (+). |
| Index             | Internal index for this particular rewrite rule.                                                                                                                                                                                                            |                                                                                                    |

Table 30: Summary of Key CoS Rewrite Rules Output Fields (*continued*)

| Field                | Values                                                                                                 | Additional Information                                                                                           |
|----------------------|--------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Forwarding Class     | Forwarding class that is used to determine CoS values for rewriting in combination with loss priority. | Rewrite rules are applied to CoS values in outgoing packets based on forwarding class and loss priority setting. |
| Loss Priority        | Loss priority that is used to determine CoS values for rewriting in combination with forwarding class. |                                                                                                                  |
| Rewrite CoS Value To | Value that the CoS value is rewritten to.                                                              |                                                                                                                  |

- Related Documentation**
- [Defining CoS Rewrite Rules \(CLI Procedure\) on page 102](#)
  - [Defining CoS Rewrite Rules \(J-Web Procedure\) on page 103](#)
  - [Example: Configuring CoS on EX Series Switches on page 47](#)

## Monitoring CoS Scheduler Maps

### Purpose



**NOTE:** This topic applies only to the J-Web Application package.

Use the monitoring functionality to display assignments of CoS forwarding classes to schedulers.

### Action

To monitor CoS scheduler maps in the J-Web interface, select **Monitor > Class of Service > Scheduler Maps**.

To monitor CoS scheduler maps in the CLI, enter the following CLI command:

```
show class-of-service scheduler-map
```

### Meaning

[Table 31 on page 172](#) summarizes key output fields for CoS scheduler maps.

Table 31: Summary of Key CoS Scheduler Maps Output Fields

| Field            | Values                                                                   | Additional Information                |
|------------------|--------------------------------------------------------------------------|---------------------------------------|
| Scheduler Map    | Name of a scheduler map.                                                 | For details, click the plus sign (+). |
| Index            | Index of a specific object—scheduler maps, schedulers, or drop profiles. |                                       |
| Scheduler Name   | Name of a scheduler.                                                     |                                       |
| Forwarding Class | Forwarding classes this scheduler is assigned to.                        |                                       |

Table 31: Summary of Key CoS Scheduler Maps Output Fields (*continued*)

| Field             | Values                                                                                                                                                                                                                                                                                                                                                                                                         | Additional Information |
|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|
| Transmit Rate     | Configured transmit rate of the scheduler in bits per second (bps). The rate value can be either of the following: <ul style="list-style-type: none"> <li>A percentage—The scheduler receives the specified percentage of the total interface bandwidth.</li> <li><b>remainder</b>— The scheduler receives the remaining bandwidth of the interface after bandwidth allocation to other schedulers.</li> </ul> |                        |
| Buffer Size       | Delay buffer size in the queue or the amount of transmit delay (in milliseconds). The buffer size can be either of the following: <ul style="list-style-type: none"> <li>A percentage—The buffer is a percentage of the total buffer allocation.</li> <li><b>remainder</b>—The buffer is sized according to what remains after other scheduler buffer allocations.</li> </ul>                                  |                        |
| Priority          | Scheduling priority of a queue: <ul style="list-style-type: none"> <li><b>strict-high</b>—Packets in this queue are transmitted first.</li> <li><b>low</b>—Packets in this queue are transmitted last.</li> </ul>                                                                                                                                                                                              |                        |
| Excess rate       | The percentage of excess bandwidth traffic to share.                                                                                                                                                                                                                                                                                                                                                           |                        |
| Drop Profiles     | Name and index of a drop profile that is assigned to a specific loss priority and protocol pair.                                                                                                                                                                                                                                                                                                               |                        |
| Loss Priority     | Packet loss priority corresponding to a drop profile.                                                                                                                                                                                                                                                                                                                                                          |                        |
| Protocol          | Transport protocol corresponding to a drop profile.                                                                                                                                                                                                                                                                                                                                                            |                        |
| Drop Profile Name | Name of the drop profile.                                                                                                                                                                                                                                                                                                                                                                                      |                        |
| Index             | Index of a specific object—scheduler maps, schedulers, or drop profiles.                                                                                                                                                                                                                                                                                                                                       |                        |

- Related Documentation**
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)
  - [Defining CoS Schedulers \(J-Web Procedure\) on page 95](#)
  - [Example: Configuring CoS on EX Series Switches on page 47](#)

## Monitoring CoS Value Aliases

### Purpose



**NOTE:** This topic applies only to the J-Web Application package.

Use the monitoring functionality to display information about the CoS value aliases that the system is currently using to represent DSCP, IEEE 802.1p, and IPv4 precedence bits.

### Action

To monitor CoS value aliases in the J-Web interface, select **Monitor > Class of Service > CoS Value Aliases**.

To monitor CoS value aliases in the CLI, enter the following command:

```
show class-of-service code-point-aliases
```

### Meaning

[Table 32 on page 174](#) summarizes key output fields for CoS value aliases.

**Table 32: Summary of Key CoS Value Alias Output Fields**

| Field           | Values                                                                                                                                                                                                                                                                                                                                 | Additional Information                                        |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| CoS Value Type  | Type of the CoS value: <ul style="list-style-type: none"> <li><b>dscp</b>—Examines Layer 3 packet headers for IP packet classification.</li> <li><b>ieee-802.1</b>—Examines Layer 2 packet headers for packet classification.</li> <li><b>inet-precedence</b>—Examines Layer 3 packet headers for IP packet classification.</li> </ul> | To display aliases and bit patterns, click the plus sign (+). |
| CoS Value Alias | Name given to a set of bits—for example, <b>af11</b> is a name for <b>001010</b> bits.                                                                                                                                                                                                                                                 |                                                               |
| CoS Value       | Set of bits associated with an alias.                                                                                                                                                                                                                                                                                                  |                                                               |

### Related Documentation

- [Defining CoS Code-Point Aliases \(CLI Procedure\) on page 85](#)
- [Defining CoS Code-Point Aliases \(J-Web Procedure\) on page 85](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)

## Monitoring CoS Drop Profiles

### Purpose



**NOTE:** This topic applies only to the J-Web Application package.



Use the monitoring functionality to view data point information for each CoS random early detection (RED) drop profile on the EX8200 switch.

**Action** To monitor CoS RED drop profiles in the J-Web interface, select **Monitor > Class of Service > RED Drop Profiles**.

To monitor CoS RED drop profiles in the CLI, enter the following CLI command:  
`show class-of-service drop-profile`

**Meaning** [Table 33 on page 175](#) summarizes the key output fields for CoS RED drop profiles.

**Table 33: Summary of the Key Output Fields for CoS Red Drop Profiles**

| Field                 | Values                                                                                                                                                                                                                                                                                                                                 | Additional Information                                                                             |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| RED Drop Profile Name | Name of the RED drop profile.<br><br>A drop profile consists of pairs of values between 0 and 100, one for queue buffer fill level and the other for drop probability, that determine the relationship between a buffer's fullness and the likelihood it will drop packets.                                                            | To display profile values, click the plus sign (+).                                                |
| Graph RED Profile     | Links to a graph of a RED curve that the system uses to determine the drop probability based on queue buffer fullness.                                                                                                                                                                                                                 | The x axis represents the queue buffer fill level, and the y axis represents the drop probability. |
| Type                  | Type of a specific drop profile: <ul style="list-style-type: none"> <li><b>interpolated</b>—The two coordinates (x and y) of the graph are interpolated to produce a smooth profile.</li> <li><b>segmented</b>—The two coordinates (x and y) of the graph are represented by line fragments to produce a segmented profile.</li> </ul> |                                                                                                    |
| Index                 | Internal index of this drop profile.                                                                                                                                                                                                                                                                                                   |                                                                                                    |
| Fill Level            | Percentage fullness of a buffer queue. This value is the x coordinate of the RED drop profile graph.                                                                                                                                                                                                                                   |                                                                                                    |
| Drop Probability      | Drop probability of a packet corresponding to a specific queue buffer fill level. This value is the y coordinate of the RED drop profile graph.                                                                                                                                                                                        |                                                                                                    |

**Related Documentation**

- [Defining CoS Drop Profiles \(J-Web Procedure\) on page 100](#)
- [Example: Configuring CoS on EX Series Switches on page 47](#)



## CHAPTER 6

# Operational Commands

- `show class-of-service`
- `show class-of-service classifier`
- `show class-of-service code-point-aliases`
- `show class-of-service drop-profile`
- `show class-of-service forwarding-class`
- `show class-of-service interface`
- `show pfe statistics traffic cpu`
- `show pfe statistics traffic egress-queues`
- `show pfe statistics traffic multicast`

## show class-of-service

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <b>show class-of-service</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0 for EX Series switches.<br>EXP classifiers added in Junos OS Release 10.1 for EX Series switches.                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | Display the class-of-service (CoS) information.                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Monitoring CoS Value Aliases on page 174</a></li> <li>• <a href="#">Monitoring CoS Classifiers on page 167</a></li> <li>• <a href="#">Monitoring CoS Forwarding Classes on page 168</a></li> <li>• <a href="#">Monitoring CoS Scheduler Maps on page 172</a></li> <li>• <a href="#">Monitoring CoS Rewrite Rules on page 171</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show class-of- service on page 179</a><br><a href="#">show class-of-service rewrite-rule on page 182</a>                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Output Fields</b>            | <a href="#">Table 34 on page 178</a> lists the output fields for the <b>show class-of-service</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                    |

**Table 34: show class-of-service Output Fields**

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                      | Level of Output |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Forwarding class</b> | The forwarding class configuration: <ul style="list-style-type: none"> <li>• <b>Forwarding class</b>—Name of the forwarding class.</li> <li>• <b>ID</b>—Forwarding class ID.</li> <li>• <b>Queue</b>—Queue number.</li> <li>• <b>Fabric Priority</b>—(EX8200 switches only) Fabric priority: either <b>high</b> or <b>low</b>. The fabric priority determines which CoS ingress queues packets are sent to.</li> </ul> | All levels      |
| <b>Code point type</b>  | The type of code-point alias: <ul style="list-style-type: none"> <li>• <b>dscp</b>—Aliases for DiffServ code point (DSCP) values.</li> <li>• <b>ieee-802.1</b>—Aliases for IEEE 802.1p values.</li> <li>• <b>inet-precedence</b>—Aliases for IP precedence values.</li> <li>• <b>exp</b>—Aliases for experimental (EXP) values.</li> </ul>                                                                             | All levels      |
| <b>Alias</b>            | Names given to CoS values.                                                                                                                                                                                                                                                                                                                                                                                             | All levels      |
| <b>Bit pattern</b>      | Set of bits associated with an alias.                                                                                                                                                                                                                                                                                                                                                                                  | All levels      |
| <b>Classifier</b>       | Name of the classifier.                                                                                                                                                                                                                                                                                                                                                                                                | All levels      |

Table 34: show class-of-service Output Fields (*continued*)

| Field Name                | Field Description                                                                                        | Level of Output |
|---------------------------|----------------------------------------------------------------------------------------------------------|-----------------|
| <b>Code point</b>         | Code-point values.                                                                                       | All levels      |
| <b>Loss priority</b>      | Loss priority assigned to specific CoS values and aliases of the classifier.                             | All levels      |
| <b>Rewrite rule</b>       | Name of the rewrite-rule.                                                                                | All levels      |
| <b>Drop profile</b>       | Name of the drop profile.                                                                                | All levels      |
| <b>Type</b>               | Type of drop profile. EX Series switches support only the <b>discrete</b> type of drop profile.          | All levels      |
| <b>Fill level</b>         | Percentage of queue buffer fullness of <i>high</i> packets beyond which <i>high</i> packets are dropped. | All levels      |
| <b>Scheduler</b>          | Name of the scheduler.                                                                                   | All levels      |
| <b>Transmit rate</b>      | Transmission rate of the scheduler.                                                                      | All levels      |
| <b>Excess rate</b>        | Percentage of excess bandwidth traffic to share.                                                         | All levels      |
| <b>Buffer size</b>        | Delay buffer size in the queue.                                                                          | All levels      |
| <b>Drop profiles</b>      | Drop profiles configured for the specified scheduler.                                                    | All levels      |
| <b>Protocol</b>           | Transport protocol corresponding to the drop profile.                                                    | All levels      |
| <b>Name</b>               | Name of the drop profile.                                                                                | All levels      |
| <b>Queues supported</b>   | Number of queues that can be configured on the interface.                                                | All levels      |
| <b>Queues in use</b>      | Number of queues currently configured.                                                                   | All levels      |
| <b>Physical interface</b> | Name of the physical interface.                                                                          | All levels      |
| <b>Scheduler map</b>      | Name of the scheduler map.                                                                               | All levels      |
| <b>Index</b>              | Internal index of a specific object.                                                                     | All levels      |

## Sample Output

### show class-of- service

```

user@switch> show class-of-service
Forwarding class ID Queue
best-effort 0 0
expedited-forwarding 1 5
assured-forwarding 2 1
network-control 3 7

```

## Code point type: dscp

| Alias | Bit pattern |
|-------|-------------|
| af11  | 001010      |
| af12  | 001100      |
| ...   | ...         |

## Code point type: ieee-802.1

| Alias | Bit pattern |
|-------|-------------|
| af11  | 010         |
| ...   | ...         |

## Code point type: inet-precedence

| Alias | Bit pattern |
|-------|-------------|
| af11  | 001         |
| ...   | ...         |

## Classifier: dscp-default, Code point type: dscp, Index: 7

| Code point | Forwarding class | Loss priority |
|------------|------------------|---------------|
| 000000     | best-effort      | low           |
| 000001     | best-effort      | low           |
| ...        | ...              | ...           |

## Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 11

| Code point | Forwarding class | Loss priority |
|------------|------------------|---------------|
| 000        | best-effort      | low           |
| 001        | best-effort      | low           |
| 010        | best-effort      | low           |
| 011        | best-effort      | low           |
| 100        | best-effort      | low           |
| 101        | best-effort      | low           |
| 110        | network-control  | low           |
| 111        | network-control  | low           |

## Classifier: ipprec-default, Code point type: inet-precedence, Index: 12

| Code point | Forwarding class | Loss priority |
|------------|------------------|---------------|
| 000        | best-effort      | low           |
| 001        | best-effort      | low           |
| 010        | best-effort      | low           |
| 011        | best-effort      | low           |
| 100        | best-effort      | low           |
| 101        | best-effort      | low           |
| 110        | network-control  | low           |
| 111        | network-control  | low           |

## Classifier: ieee8021p-untrust, Code point type: ieee-802.1, Index: 16

| Code point | Forwarding class | Loss priority |
|------------|------------------|---------------|
| 000        | best-effort      | low           |
| 001        | best-effort      | low           |
| 010        | best-effort      | low           |
| 011        | best-effort      | low           |
| 100        | best-effort      | low           |
| 101        | best-effort      | low           |
| 110        | best-effort      | low           |
| 111        | best-effort      | low           |

## Rewrite rule: dscp-default, Code point type: dscp, Index: 27

| Forwarding class     | Loss priority | Code point |
|----------------------|---------------|------------|
| best-effort          | low           | 000000     |
| best-effort          | high          | 000000     |
| expedited-forwarding | low           | 101110     |

```

expedited-forwarding high 101110
assured-forwarding low 001010
assured-forwarding high 001100
network-control low 110000
network-control high 111000

Rewrite rule: ieee8021p-default, Code point type: ieee-802.1, Index: 30
Forwarding class Loss priority Code point
best-effort low 000
best-effort high 001
expedited-forwarding low 100
expedited-forwarding high 101
assured-forwarding low 010
assured-forwarding high 011
network-control low 110
network-control high 111

Rewrite rule: ipprec-default, Code point type: inet-precedence, Index: 31
Forwarding class Loss priority Code point
best-effort low 000
best-effort high 000
expedited-forwarding low 101
expedited-forwarding high 101
assured-forwarding low 001
assured-forwarding high 001
network-control low 110
network-control high 111

Drop profile:<default-drop-profile>, Type: discrete, Index: 1
Fill level
 100

Scheduler map: <default>, Index: 2

Scheduler: <default-be>, Forwarding class: best-effort, Index: 20
Transmit rate: 95 percent, Rate Limit: none, Buffer size: 95 percent,
Priority: low
Drop profiles:
 Loss priority Protocol Index Name
 High non-TCP 1 <default-drop-profile>
 High TCP 1 <default-drop-profile>

Scheduler: <default-nc>, Forwarding class: network-control, Index: 22
Transmit rate: 5 percent, Rate Limit: none, Buffer size: 5 percent,
Priority: low
Drop profiles:
 Loss priority Protocol Index Name
 High non-TCP 1 <default-drop-profile>
 High TCP 1 <default-drop-profile>

Physical interface: ge-0/0/0, Index: 129
Queues supported: 8, Queues in use: 4
Scheduler map: <default>, Index: 2

Physical interface: ge-0/0/1, Index: 130
Queues supported: 8, Queues in use: 4
Scheduler map: <default>, Index: 2

...

Fabric priority: low

```

Scheduler: <default-fabric>, Index: 23

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

Fabric priority: high

Scheduler: <default-fabric>, Index: 23

Drop profiles:

| Loss priority | Protocol | Index | Name                   |
|---------------|----------|-------|------------------------|
| High          | non-TCP  | 1     | <default-drop-profile> |
| High          | TCP      | 1     | <default-drop-profile> |

### show class-of-service rewrite-rule

user@switch> show class-of-service rewrite-rule

Rewrite rule: dscp-default, Code point type: dscp, Index: 31

| Forwarding class     | Loss priority | Code point |
|----------------------|---------------|------------|
| best-effort          | low           | 000000     |
| best-effort          | high          | 000000     |
| expedited-forwarding | low           | 101110     |
| expedited-forwarding | high          | 101110     |
| fw-class             | low           | 001010     |
| fw-class             | high          | 001100     |
| network-control      | low           | 110000     |
| network-control      | high          | 111000     |

Rewrite rule: exp-default, Code point type: exp, Index: 33

| Forwarding class     | Loss priority | Code point |
|----------------------|---------------|------------|
| best-effort          | low           | 000        |
| best-effort          | high          | 001        |
| expedited-forwarding | low           | 010        |
| expedited-forwarding | high          | 011        |
| fw-class             | low           | 100        |
| fw-class             | high          | 101        |
| network-control      | low           | 110        |
| network-control      | high          | 111        |

Rewrite rule: ieee8021p-default, Code point type: ieee-802.1, Index: 34

| Forwarding class     | Loss priority | Code point |
|----------------------|---------------|------------|
| best-effort          | low           | 000        |
| best-effort          | high          | 001        |
| expedited-forwarding | low           | 010        |
| expedited-forwarding | high          | 011        |
| fw-class             | low           | 100        |
| fw-class             | high          | 101        |
| network-control      | low           | 110        |
| network-control      | high          | 111        |

Rewrite rule: ipprec-default, Code point type: inet-precedence, Index: 35

| Forwarding class     | Loss priority | Code point |
|----------------------|---------------|------------|
| best-effort          | low           | 000        |
| best-effort          | high          | 000        |
| expedited-forwarding | low           | 101        |
| expedited-forwarding | high          | 101        |
| fw-class             | low           | 001        |
| fw-class             | high          | 001        |
| network-control      | low           | 110        |
| network-control      | high          | 111        |



## show class-of-service classifier

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service classifier<br><name <i>name</i> ><br><type dscp   type dscp-ipv6   type exp   type ieee-802.1   type inet-precedence>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | For each class-of-service (CoS) classifier, display the mapping of code point value to forwarding class and loss priority.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <p><b>none</b>—Display all classifiers.</p> <p><b>name <i>name</i></b>—(Optional) Display named classifier.</p> <p><b>type dscp</b>—(Optional) Display all classifiers of the Differentiated Services code point (DSCP) type.</p> <p><b>type dscp-ipv6</b>—(Optional) Display all classifiers of the DSCP for IPv6 type.</p> <p><b>type exp</b>—(Optional) Display all classifiers of the MPLS experimental (EXP) type.</p> <p><b>type ieee-802.1</b>—(Optional) Display all classifiers of the ieee-802.1 type.</p> <p><b>type inet-precedence</b>—(Optional) Display all classifiers of the inet-precedence type.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service classifier type ieee-802.1 on page 184</a><br><a href="#">show class-of-service classifier type ieee-802.1 (QFX Series) on page 184</a>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Output Fields</b>            | Table 35 on page 183 describes the output fields for the <b>show class-of-service classifier</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                       |

**Table 35: show class-of-service classifier Output Fields**

| Field Name              | Field Description                                                                                                                                                       |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Classifier</b>       | Name of the classifier.                                                                                                                                                 |
| <b>Code point type</b>  | Type of the classifier: <b>exp</b> (not on EX Series switch), <b>dscp</b> , <b>dscp-ipv6</b> (not on EX Series switch), <b>ieee-802.1</b> , or <b>inet-precedence</b> . |
| <b>Index</b>            | Internal index of the classifier.                                                                                                                                       |
| <b>Code point</b>       | Code point value used for classification                                                                                                                                |
| <b>Forwarding class</b> | Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.                                        |

Table 35: show class-of-service classifier Output Fields (*continued*)

| Field Name    | Field Description                                                                                                                                                                                                 |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Loss priority | Loss priority value used for classification. For most platforms, the value is <b>high</b> or <b>low</b> . For some platforms, the value is <b>high</b> , <b>medium-high</b> , <b>medium-low</b> , or <b>low</b> . |

## Sample Output

### show class-of-service classifier type ieee-802.1

```

user@host> show class-of-service classifier type ieee-802.1
Classifier: ieee802.1-default, Code point type: ieee-802.1, Index: 3
Code Point Forwarding Class Loss priority
000 best-effort low
001 best-effort high
010 expedited-forwarding low
011 expedited-forwarding high
100 assured-forwarding low
101 assured-forwarding medium-high
110 network-control low
111 network-control high

Classifier: users-ieee802.1, Code point type: ieee-802.1
Code point Forwarding class Loss priority
100 expedited-forwarding low

```

### show class-of-service classifier type ieee-802.1 (QFX Series)

```

user@switch> show class-of-service classifier type ieee-802.1
Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 11
Code point Forwarding class Loss priority
000 best-effort low
001 best-effort low
010 best-effort low
011 fcoe low
100 no-loss low
101 best-effort low
110 network-control low
111 network-control low

Classifier: ieee-mcast, Code point type: ieee-802.1, Index: 46
Code point Forwarding class Loss priority
000 mcast low
001 mcast low
010 mcast low
011 mcast low
100 mcast low
101 mcast low
110 mcast low
111 mcast low

```

## show class-of-service code-point-aliases

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show class-of-service code-point-aliases</code><br><code>&lt;dscp   dscp-ipv6   exp   ieee-802.1   inet-precedence&gt;</code>                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Display the mapping of class-of-service (CoS) code point aliases to corresponding bit patterns.                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b>none</b>—Display code point aliases of all code point types.</p> <p><b>dscp</b>—(Optional) Display Differentiated Services code point (DSCP) aliases.</p> <p><b>dscp-ipv6</b>—(Optional) Display IPv6 DSCP aliases.</p> <p><b>exp</b>—(Optional) Display MPLS EXP code point aliases.</p> <p><b>ieee-802.1</b>—(Optional) Display IEEE-802.1 code point aliases.</p> <p><b>inet-precedence</b>—(Optional) Display IPv4 precedence code point aliases.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service code-point-aliases exp on page 186</a>                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Output Fields</b>            | <a href="#">Table 36 on page 185</a> describes the output fields for the <b>show class-of-service code-point-aliases</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                       |

**Table 36: show class-of-service code-point-aliases Output Fields**

| Field Name             | Field Description                                                                                                                                                                                                           |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Code point type</b> | Type of the code points displayed: <b>dscp</b> , <b>dscp-ipv6</b> (not on EX Series switch), <b>exp</b> (not on EX Series switch or the QFX Series), <b>ieee-802.1</b> , or <b>inet-precedence</b> (not on the QFX Series). |
| <b>Alias</b>           | Alias for a bit pattern.                                                                                                                                                                                                    |
| <b>Bit pattern</b>     | Bit pattern for which the alias is displayed.                                                                                                                                                                               |

## Sample Output

show class-of-service code-point-aliases exp

```
user@host> show class-of-service code-point-aliases exp
Code point type: exp
Alias Bit pattern
af11 100
af12 101
be 000
be1 001
cs6 110
cs7 111
ef 010
ef1 011
nc1 110
nc2 111
```

## show class-of-service drop-profile

|                                 |                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service drop-profile<br><profile-name <i>profile-name</i> >                                                                                                                                                          |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                           |
| <b>Description</b>              | Display data points for each class-of-service (CoS) random early detection (RED) drop profile.                                                                                                                                     |
| <b>Options</b>                  | <b>none</b> —Display all drop profiles.<br><br><b>profile-name <i>profile-name</i></b> —(Optional) Display the specified profile only.                                                                                             |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service drop-profile on page 188</a><br><a href="#">show class-of-service drop-profile (EX4200 Switch) on page 188</a><br><a href="#">show class-of-service drop-profile (EX8200 Switch) on page 188</a> |
| <b>Output Fields</b>            | <a href="#">Table 37 on page 187</a> describes the output fields for the <b>show class-of-service drop-profile</b> command. Output fields are listed in the approximate order in which they appear.                                |

**Table 37: show class-of-service drop-profile Output Fields**

| Field Name              | Field Description                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Drop profile</b>     | Name of a drop profile.                                                                                                                                   |
| <b>Type</b>             | Type of drop profile: <ul style="list-style-type: none"> <li>• <b>discrete</b> (default)</li> <li>• <b>interpolated</b> (EX8200 switches only)</li> </ul> |
| <b>Index</b>            | Internal index of this drop profile.                                                                                                                      |
| <b>Fill Level</b>       | Percentage fullness of a queue.                                                                                                                           |
| <b>Drop probability</b> | Drop probability at this fill level.                                                                                                                      |

## Sample Output

### show class-of-service drop-profile

```
user@host> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: user-drop-profile, Type: interpolated, Index: 2989
 Fill level Drop probability
 0 0
 1 1
 2 2
 4 4
 5 5
 6 6
 8 8
 10 10
 12 15
 14 20
 15 23
... 64 entries total
 90 96
 92 96
 94 97
 95 98
 96 98
 98 99
 99 99
 100 100
```

### show class-of-service drop-profile (EX4200 Switch)

```
user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
 Fill level
 100
Drop profile: dp1, Type: discrete, Index: 40496
 Fill level
 10
```

### show class-of-service drop-profile (EX8200 Switch)

```
user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: dp1, Type: interpolated, Index: 40496
 Fill level Drop probability
 0 0
 1 80
 2 90
 4 90
 5 90
 6 90
 8 90
 10 90
 12 91
 14 91
 15 91
 16 91
```

|                                                 |                  |
|-------------------------------------------------|------------------|
| 18                                              | 91               |
| 20                                              | 91               |
| 22                                              | 92               |
| 24                                              | 92               |
| 25                                              | 92               |
| 26                                              | 92               |
| 28                                              | 92               |
| 30                                              | 92               |
| 32                                              | 93               |
| 34                                              | 93               |
| 35                                              | 93               |
| 36                                              | 93               |
| 38                                              | 93               |
| 40                                              | 93               |
| 42                                              | 94               |
| 44                                              | 94               |
| 45                                              | 94               |
| 46                                              | 94               |
| 48                                              | 94               |
| 49                                              | 94               |
| 51                                              | 95               |
| 52                                              | 95               |
| 54                                              | 95               |
| 55                                              | 95               |
| 56                                              | 95               |
| 58                                              | 95               |
| 60                                              | 95               |
| 62                                              | 96               |
| 64                                              | 96               |
| 65                                              | 96               |
| 66                                              | 96               |
| 68                                              | 96               |
| 70                                              | 96               |
| 72                                              | 97               |
| 74                                              | 97               |
| 75                                              | 97               |
| 76                                              | 97               |
| 78                                              | 97               |
| 80                                              | 97               |
| 82                                              | 98               |
| 84                                              | 98               |
| 85                                              | 98               |
| 86                                              | 98               |
| 88                                              | 98               |
| 90                                              | 98               |
| 92                                              | 99               |
| 94                                              | 99               |
| 95                                              | 99               |
| 96                                              | 99               |
| 98                                              | 99               |
| 99                                              | 99               |
| 100                                             | 100              |
| Drop profile: dp2, Type: discrete, Index: 40499 |                  |
| Fill level                                      | Drop probability |
| 10                                              | 5                |
| 50                                              | 50               |

## show class-of-service forwarding-class

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show class-of-service forwarding-class                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Command introduced in Junos OS Release 9.0 for EX Series switches.<br>Command introduced in Junos OS Release 11.1 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Display information about forwarding classes, including the mapping of forwarding classes to queue numbers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS on EX Series Switches on page 47</a></li> <li>• <a href="#">Example: Configuring Forwarding Classes</a></li> <li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS)</a></li> <li>• <a href="#">Monitoring CoS Forwarding Classes on page 168</a></li> <li>• <a href="#">Defining CoS Forwarding Classes (CLI Procedure) on page 91</a></li> <li>• <a href="#">Defining CoS Forwarding Class Sets</a></li> <li>• <a href="#">Configuring CoS Traffic Classification for Ingress Queuing on Oversubscribed Ports on EX8200 Line Cards (CLI Procedure) on page 115</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service forwarding-class on page 191</a><br><a href="#">show class-of-service forwarding-class (EX8200 Switch) on page 191</a><br><a href="#">show class-of-service forwarding-class (QFX Series) on page 191</a>                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>            | Table 38 on page 190 describes the output fields for the <b>show class-of-service forwarding-class</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

**Table 38: show class-of-service forwarding-class Output Fields**

| Field Name               | Field Description                                                                                                                                                  |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Forwarding class</b>  | Name of the forwarding class.                                                                                                                                      |
| <b>ID</b>                | Forwarding class identifier.                                                                                                                                       |
| <b>Queue</b>             | CoS queue mapped to the forwarding class.                                                                                                                          |
| <b>Policing priority</b> | Not supported on EX Series switches or the QFX Series and can be ignored.                                                                                          |
| <b>Fabric priority</b>   | (EX8200 switches only) Fabric priority for the forwarding class, either <b>high</b> or <b>low</b> . Determines the priority of packets entering the switch fabric. |



**Table 38: show class-of-service forwarding-class Output Fields (*continued*)**

| Field Name     | Field Description                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No-Loss</b> | <p>(QFX Series only) Packet loss attribute to differentiate lossless forwarding classes from lossy forwarding classes:</p> <ul style="list-style-type: none"> <li>Disabled—Lossless transport is not configured on the forwarding class (packet drop attribute is <b>drop</b>).</li> <li>Enabled—Lossless transport is configured on the forwarding class (packet drop attribute is <b>no-loss</b>).</li> </ul> |

## Sample Output

### show class-of-service forwarding-class

```

user@switch> show class-of-service forwarding-class
Forwarding class ID Queue Policing priority
best-effort 0 0 0 normal
expedited-forwarding 1 5 5 normal
assured-forwarding 2 1 1 normal
network-control 3 7 7 normal

```

## Sample Output

### show class-of-service forwarding-class (EX8200 Switch)

```

user@switch> show class-of-service forwarding-class
Forwarding class ID Queue Fabric priority
best-effort 0 0 low
expedited-forwarding 1 5 low
assured-forwarding 2 1 low
network-control 3 7 low
mcast-be 4 2 low
mcast-ef 5 4 low
mcast-af 6 6 low

```

## Sample Output

### show class-of-service forwarding-class (QFX Series)

```

user@switch> show class-of-service forwarding-class
Forwarding class ID Queue Policing priority No-Loss
best-effort 0 0 normal Disabled
fcoe 1 3 normal Enabled
no-loss 2 4 normal Enabled
network-control 3 7 normal Disabled
mcast 8 8 normal Disabled

```

## show class-of-service interface

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show class-of-service interface</code><br><code>&lt;comprehensive   detail&gt; &lt;interface-name&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Forwarding class map information added in Junos OS Release 9.4.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Routers.</p> <p>Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.</p> <p>Options <b>detail</b> and <b>comprehensive</b> introduced in Junos OS Release 11.4.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                  | <p><b>none</b>—Display CoS associations for all physical and logical interfaces.</p> <p><b>comprehensive</b>—(M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces.</p> <p><b>detail</b>—(M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.</p> <p>If the <b>interface</b> <i>interface-name</i> is a physical interface, the output includes:</p> <ul style="list-style-type: none"><li>• Brief QoS information about the physical interface</li><li>• Brief QoS information about the logical interface</li><li>• CoS information about the physical interface</li><li>• Brief information about filters or policers of the logical interface</li><li>• Brief CoS information about the logical interface</li></ul> <p>If the <b>interface</b> <i>interface-name</i> is a logical interface, the output includes:</p> <ul style="list-style-type: none"><li>• Brief QoS information about the logical interface</li><li>• Information about filters or policers for the logical interface</li><li>• CoS information about the logical interface</li></ul> <p><b>interface-name</b>—(Optional) Display class-of-service (CoS) associations for the specified interface.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | <a href="#">show class-of-service interface (Physical) on page 203</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

[show class-of-service interface \(Logical\) on page 204](#)  
[show class-of-service interface \(Gigabit Ethernet\) on page 204](#)  
[show class-of-service interface \(PPPoE Interface\) on page 204](#)  
[show class-of-service interface \(T4000 Routers with Type 5 FPCs\) on page 204](#)  
[show class-of-service interface detail on page 205](#)  
[show class-of-service interface comprehensive on page 205](#)  
[show class-of-service interface \(ACX Series Routers\) on page 216](#)

**Output Fields** Table 39 on page 193 describes the output fields for the **show class-of-service interface** command. Output fields are listed in the approximate order in which they appear.

**Table 39: show class-of-service interface Output Fields**

| Field Name                                 | Field Description                                                                                                                                                                                                                                                                             |
|--------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Physical interface</b>                  | Name of a physical interface.                                                                                                                                                                                                                                                                 |
| <b>Index</b>                               | Index of this interface or the internal index of this object.                                                                                                                                                                                                                                 |
| <b>Dedicated Queues</b>                    | Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.                                                                                                                                                                        |
| <b>Queues supported</b>                    | Number of queues you can configure on the interface.                                                                                                                                                                                                                                          |
| <b>Queues in use</b>                       | Number of queues currently configured.                                                                                                                                                                                                                                                        |
| <b>Total non-default queues created</b>    | Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.                                                                                                                                                                   |
| <b>Rewrite Input IEEE Code-point</b>       | (QFX Series only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value. |
| <b>Shaping rate</b>                        | Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the <b>Shaping rate</b> field is displayed for either the physical interface or the logical interface.            |
| <b>Scheduler map</b>                       | Name of the output scheduler map associated with this interface.                                                                                                                                                                                                                              |
| <b>Scheduler map forwarding class sets</b> | (QFX Series only) Name of the fabric forwarding class set scheduler map associated with a QFabric system Interconnect device interface.                                                                                                                                                       |
| <b>Input shaping rate</b>                  | For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.                                                                                                                                                                                                              |
| <b>Input scheduler map</b>                 | For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.                                                                                                                                                                                                |
| <b>Chassis scheduler map</b>               | Name of the scheduler map associated with the packet forwarding component queues.                                                                                                                                                                                                             |
| <b>Rewrite</b>                             | Name and type of the rewrite rules associated with this interface.                                                                                                                                                                                                                            |
| <b>Classifier</b>                          | Name and type of classifiers associated with this interface.                                                                                                                                                                                                                                  |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                   |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Forwarding-class-map</b>    | Name of the forwarding map associated with this interface.                                                                                                                                                                                          |
| <b>Congestion-notification</b> | (QFX Series only) Congestion notification state, <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                |
| <b>Logical interface</b>       | Name of a logical interface.                                                                                                                                                                                                                        |
| <b>Object</b>                  | Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , or <b>Translation Table</b> (for IQE PICs only).                                                             |
| <b>Name</b>                    | Name of an object.                                                                                                                                                                                                                                  |
| <b>Type</b>                    | Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , or <b>inet-precedence</b> .                                                                                                                        |
| <b>Link-level type</b>         | Encapsulation on the physical interface.                                                                                                                                                                                                            |
| <b>MTU</b>                     | MTU size on the physical interface.                                                                                                                                                                                                                 |
| <b>Speed</b>                   | Speed at which the interface is running.                                                                                                                                                                                                            |
| <b>Loopback</b>                | Whether loopback is enabled and the type of loopback.                                                                                                                                                                                               |
| <b>Source filtering</b>        | Whether source filtering is enabled or disabled.                                                                                                                                                                                                    |
| <b>Flow control</b>            | Whether flow control is enabled or disabled.                                                                                                                                                                                                        |
| <b>Auto-negotiation</b>        | (Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.                                                                                                                                                                       |
| <b>Remote-fault</b>            | (Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul> |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Device flags</b>    | <p>The <b>Device flags</b> field provides information about the physical device and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Down</b>—Device has been administratively disabled.</li> <li>• <b>Hear-Own-Xmit</b>—Device receives its own transmissions.</li> <li>• <b>Link-Layer-Down</b>—The link-layer protocol has failed to connect with the remote endpoint.</li> <li>• <b>Loopback</b>—Device is in physical loopback.</li> <li>• <b>Loop-Detected</b>—The link layer has received frames that it sent, thereby detecting a physical loopback.</li> <li>• <b>No-Carrier</b>—On media that support carrier recognition, no carrier is currently detected.</li> <li>• <b>No-Multicast</b>—Device does not support multicast traffic.</li> <li>• <b>Present</b>—Device is physically present and recognized.</li> <li>• <b>Promiscuous</b>—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.</li> <li>• <b>Quench</b>—Transmission on the device is quenched because the output buffer is overflowing.</li> <li>• <b>Recv-All-Multicasts</b>—Device is in multicast promiscuous mode and therefore provides no multicast filtering.</li> <li>• <b>Running</b>—Device is active and enabled.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Interface flags</b> | <p>The <b>Interface flags</b> field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Admin-Test</b>—Interface is in test mode and some sanity checking, such as loop detection, is disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Hardware-Down</b>—Interface is nonfunctional or incorrectly connected.</li> <li>• <b>Link-Layer-Down</b>—Interface keepalives have indicated that the link is incomplete.</li> <li>• <b>No-Multicast</b>—Interface does not support multicast traffic.</li> <li>• <b>No-receive No-transmit</b>—Passive monitor mode is configured on the interface.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>Pop all MPLS labels from packets of depth</b>—MPLS labels are removed as packets arrive on an interface that has the <b>pop-all-labels</b> statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> <li>• <b>1</b>—Takes effect for incoming packets with one label only.</li> <li>• <b>2</b>—Takes effect for incoming packets with two labels only.</li> <li>• <b>[ 1 2 ]</b>—Takes effect for incoming packets with either one or two labels.</li> </ul> </li> <li>• <b>Promiscuous</b>—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.</li> <li>• <b>Recv-All-Multicasts</b>—Interface is in multicast promiscuous mode and provides no multicast filtering.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul> |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Flags</b>         | <p>The <b>Logical interface flags</b> field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC Encapsulation</b>—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).</li> <li>• <b>Device-down</b>—Device has been administratively disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Clear-DF-Bit</b>—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.</li> <li>• <b>Hardware-Down</b>—Interface protocol initialization failed to complete successfully.</li> <li>• <b>PFC</b>—Protocol field compression is enabled for the PPP session.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>                                 |
| <b>Encapsulation</b> | Encapsulation on the logical interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Admin</b>         | Administrative state of the interface ( <b>Up</b> or <b>Down</b> )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Link</b>          | Status of physical link ( <b>Up</b> or <b>Down</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Proto</b>         | Protocol configured on the interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Input Filter</b>  | Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Output Filter</b> | Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Link flags</b>    | <p>Provides information about the physical link and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC</b>—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.</li> <li>• <b>Give-Up</b>—Link protocol does not continue connection attempts after repeated failures.</li> <li>• <b>Loose-LCP</b>—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-LMI</b>—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-NCP</b>—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.</li> <li>• <b>Keepalives</b>—Link protocol keepalives are enabled.</li> <li>• <b>No-Keepalives</b>—Link protocol keepalives are disabled.</li> <li>• <b>PFC</b>—Protocol field compression is configured. The PPP session negotiates the PFC option.</li> </ul> |
| <b>Hold-times</b>    | Current interface hold-time up and hold-time down, in milliseconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>CoS queues</b>    | Number of CoS queues configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Last flapped</b>            | Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Statistics last cleared</b> | Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>IPv6 transit statistics</b> | Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Input errors</b>            | Input errors on the interface. The labels are explained in the following list: <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul> |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name                                  | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Output errors</b>                        | <p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul> |
| <b>Egress queues</b>                        | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Queue counters</b>                       | <p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>SONET alarms</b><br><b>SONET defects</b> | <p>(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b>, <b>SONET section</b>, <b>SONET line</b>, and <b>SONET path</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>SONET PHY</b>                            | <p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET PHY</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |



Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SONET section</b> | <p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET section</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B1</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>SONET line</b>    | <p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET line</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul> |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name                                                              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>SONET path</b>                                                       | <p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET path</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul> |
| <b>Received SONET overhead</b><br><br><b>Transmitted SONET overhead</b> | <p>Values of the received and transmitted SONET overhead:</p> <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1</b> and <b>K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-<i>N</i> signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-<i>N</i> signal.</li> <li>• <b>Z3</b> and <b>Z4</b>—Allocated for future use.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Received path trace</b><br><br><b>Transmitted path trace</b>         | <p>SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>HDLC configuration</b>                                               | <p>Information about the HDLC configuration.</p> <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packet Forwarding Engine configuration | Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| CoS information                        | Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul> |
| Forwarding classes                     | Total number of forwarding classes supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Egress queues                          | Total number of egress queues supported on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Queue                                  | Queue number.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Forwarding classes                     | Forwarding class name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Queued Packets                         | Number of packets queued to this queue.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Queued Bytes                           | Number of bytes queued to this queue. The byte counts vary by PIC type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Transmitted Packets                    | Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Transmitted Bytes                      | Number of bytes transmitted by this queue. The byte counts vary by PIC type.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Tail-dropped packets                   | Number of packets dropped because of tail drop.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>RED-dropped packets</b> | <p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>(MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li><b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li><b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li><b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li><b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> |
| <b>RED-dropped bytes</b>   | <p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Transmit rate</b>       | Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Rate Limit</b>          | <p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> <li><b>None</b>—No rate limit.</li> <li><b>exact</b>—Queue transmits at the configured rate.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Buffer size</b>         | Delay buffer size in the queue.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Priority</b>            | Scheduling priority configured as <b>low</b> or <b>high</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Excess Priority</b>     | Priority of the excess bandwidth traffic on a scheduler: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

Table 39: show class-of-service interface Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Drop profiles          | <p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Excess Priority        | Priority of the excess bandwidth traffic on a scheduler.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Drop profiles          | <p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Adjustment information | <p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> <li>• <b>Adjusting application</b>—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> <li>• The adjusting application can appear as <b>anclp LS-0</b>, which is the Junos OS Access Node Control Profile process (<b>anclpd</b>) that performs shaping-rate adjustments on schedule nodes.</li> <li>• The adjusting application can also appear as <b>pppoe</b>, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).</li> </ul> </li> <li>• <b>Adjustment type</b>—Type of adjustment: <b>absolute</b> or <b>delta</b>.</li> <li>• <b>Configured shaping rate</b>—Shaping rate configured for the scheduler node or queue.</li> <li>• <b>Adjustment value</b>—Value of adjusted shaping rate.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment overhead-accounting mode</b>—Configured shaping mode: <b>frame</b> or <b>cell</b>.</li> </ul> |

## Sample Output

### show class-of-service interface (Physical)

```

user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4

```

```

Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000

```

| Object               | Name                 | Type | Index |
|----------------------|----------------------|------|-------|
| Scheduler-map        | <default>            |      | 27    |
| Rewrite              | exp-default          | exp  | 21    |
| Classifier           | exp-default          | exp  | 5     |
| Classifier           | ipprec-compatibility | ip   | 8     |
| Forwarding-class-map | exp-default          | exp  | 5     |

### show class-of-service interface (Logical)

```

user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000

```

| Object               | Name                 | Type | Index |
|----------------------|----------------------|------|-------|
| Scheduler-map        | <default>            |      | 27    |
| Rewrite              | exp-default          | exp  | 21    |
| Classifier           | exp-default          | exp  | 5     |
| Classifier           | ipprec-compatibility | ip   | 8     |
| Forwarding-class-map | exp-default          | exp  | 5     |

### show class-of-service interface (Gigabit Ethernet)

```

user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4

```

### show class-of-service interface (PPPoE Interface)

```

user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85

```

| Object                  | Name                 | Type   | Index      |
|-------------------------|----------------------|--------|------------|
| Traffic-control-profile | tcp-pppoe.o.pp0.1    | Output | 2726446535 |
| Classifier              | ipprec-compatibility | ip     | 13         |

```

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node

```

### show class-of-service interface (T4000 Routers with Type 5 FPCs)

```

user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
Queues supported: 8, Queues in use: 4
Shaping rate: 5000000000 bps
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

Logical interface: xe-4/0/0.0, Index: 77

```

| Index | Object     | Name                 | Type |
|-------|------------|----------------------|------|
| 13    | Classifier | ipprec-compatibility | ip   |

**show class-of-service interface detail**

```
user@host> show class-of-service interface ge-0/3/0 detail
```

```
Physical interface: ge-0/3/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
```

```
Device flags : Present Running
Interface flags: SNMP-Traps Internal: 0x4000
```

```
Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps
Scheduler map: interface-scheduler-map, Index: 58414
Input shaping rate: 10000 bps
878674 Input scheduler map: scheduler-map, Index: 15103
Chassis scheduler map: <default-chassis>, Index: 4
Congestion-notification: Disabled
```

```
Logical interface ge-0/3/0.0
```

```
Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.1] Encapsulation: ENET2
```

```
inet
```

```
mpls
```

| Interface  | Admin | Link | Proto | Input Filter  | Output Filter  |
|------------|-------|------|-------|---------------|----------------|
| ge-0/3/0.0 | up    | up   | inet  |               |                |
|            |       |      | mpls  |               |                |
| Interface  | Admin | Link | Proto | Input Policer | Output Policer |
| ge-0/3/0.0 | up    | up   | inet  |               |                |
|            |       |      | mpls  |               |                |

```
Logical interface: ge-0/3/0.0, Index: 68
```

| Object     | Name                 | Type           | Index |
|------------|----------------------|----------------|-------|
| Rewrite    | exp-default          | exp (mpls-any) | 33    |
| Classifier | exp-default          | exp            | 10    |
| Classifier | ipprec-compatibility | ip             | 13    |

```
Logical interface ge-0/3/0.1
```

```
Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.2] Encapsulation: ENET2
```

```
inet
```

| Interface  | Admin | Link | Proto | Input Filter  | Output Filter  |
|------------|-------|------|-------|---------------|----------------|
| ge-0/3/0.1 | up    | up   | inet  |               |                |
| Interface  | Admin | Link | Proto | Input Policer | Output Policer |
| ge-0/3/0.1 | up    | up   | inet  |               |                |

```
Logical interface: ge-0/3/0.1, Index: 69
```

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

**show class-of-service interface comprehensive**

```
user@host> show class-of-service interface ge-0/3/0 comprehensive
```

```
Physical interface: ge-0/3/0, Enabled, Physical link is Up
```

```
Interface index: 138, SNMP ifIndex: 601, Generation: 141
```

```
Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None,
MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
control: Enabled,
```

```
Auto-negotiation: Enabled, Remote fault: Online
```

```
Device flags : Present Running
```

```
Interface flags: SNMP-Traps Internal: 0x4000
```

```

CoS queues : 4 supported, 4 maximum usable queues
Schedulers : 256
Hold-times : Up 0 ms, Down 0 ms
Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
Last flapped : 2010-09-07 06:35:22 PDT (15:14:42 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
IPv6 total statistics:
Input bytes : 0
Output bytes : 0
Input packets: 0
Output packets: 0
Ingress traffic statistics at Packet Forwarding Engine:
Input bytes : 0 0 bps
Input packets: 0 0 pps
Drop bytes : 0 0 bps
Drop packets: 0 0 pps
Label-switched interface (LSI) traffic statistics:
Input bytes : 0 0 bps
Input packets: 0 0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
Resource errors: 0
Output errors:
Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 5 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 af3 0 0 0
1 af2 0 0 0
2 ef2 0 0 0
3 ef1 0 0 0

Egress queues: 4 supported, 5 in use
Queue counters: Queued packets Transmitted packets Dropped packets

0 af3 0 0 0
1 af2 0 0 0
2 ef2 0 0 0
3 ef1 0 0 0

Active alarms : None
Active defects : None
MAC statistics:
Total octets Receive Transmit
Total packets 0 0
Unicast packets 0 0
Broadcast packets 0 0
Multicast packets 0 0

```



```

CRC/Align errors 0 0
FIFO errors 0 0
MAC control frames 0 0
MAC pause frames 0 0
Oversized frames 0
Jabber frames 0
Fragment frames 0
VLAN tagged frames 0
Code violations 0
Filter statistics:
 Input packet count 0
 Input packet rejects 0
 Input DA rejects 0
 Input SA rejects 0
 Output packet count 0 0
 Output packet pad count 0 0
 Output packet error count 0 0
 CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
 Negotiation status: Complete
 Link partner:
 Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
 Local resolution:
 Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
 Destination slot: 0
CoS information:
 Direction : Output
 CoS transmit queue Bandwidth Buffer Priority
Limit % bps % usec
 2 ef2 39 19500 0 120 high
none
 Direction : Input
 CoS transmit queue Bandwidth Buffer Priority
Limit % bps % usec
 0 af3 30 3000 45 0 low
none

Physical interface: ge-0/3/0, Enabled, Physical link is Up
 Interface index: 138, SNMP ifIndex: 601
Forwarding classes: 16 supported, 5 in use
Ingress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : Not Available
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps

```

```

Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : Not Available
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : Not Available
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : Not Available
 RL-dropped packets : 0 0 pps
 RL-dropped bytes : 0 0 bps
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : Not Available
 RL-dropped packets : 0 0 pps
 RL-dropped bytes : 0 0 bps
 RED-dropped packets : 0 0 pps
 RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
 Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : Not Available
 RL-dropped packets : 0 0 pps
 RL-dropped bytes : 0 0 bps
 RED-dropped packets : 0 0 pps

```

```

 RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Tail-dropped packets : Not Available
RL-dropped packets : 0 0 pps
RL-dropped bytes : 0 0 bps
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available
Queue: 1, Forwarding classes: af2
Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available
Queue: 2, Forwarding classes: ef2
Queued:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Transmitted:
 Packets : 0 0 pps
 Bytes : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available
Queue: 3, Forwarding classes: ef1
Queued:
 Packets : 108546 0 pps
 Bytes : 12754752 376 bps
Transmitted:
 Packets : 108546 0 pps
 Bytes : 12754752 376 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps

```

Scheduler map: interface-scheduler-map, Index: 58414

Scheduler: ef2, Forwarding class: ef2, Index: 39155

Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer Limit: none, Priority: high

Excess Priority: unspecified

Drop profiles:

| Loss priority | Protocol | Index | Name                    |
|---------------|----------|-------|-------------------------|
| Low           | any      | 1     | < default-drop-profile> |
| Medium low    | any      | 1     | < default-drop-profile> |
| Medium high   | any      | 1     | < default-drop-profile> |
| High          | any      | 1     | < default-drop-profile> |

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

| Fill level | Drop probability |
|------------|------------------|
| 100        | 100              |

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

| Fill level | Drop probability |
|------------|------------------|
| 100        | 100              |

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

| Fill level | Drop probability |
|------------|------------------|
| 100        | 100              |

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

| Fill level | Drop probability |
|------------|------------------|
| 100        | 100              |

Input shaping rate: 10000 bps

Input scheduler map: scheduler-map

Scheduler map: scheduler-map, Index: 15103

Scheduler: af3, Forwarding class: af3, Index: 35058

Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer Limit: none, Priority: low

Excess Priority: unspecified

Drop profiles:

| Loss priority | Protocol | Index | Name                    |
|---------------|----------|-------|-------------------------|
| Low           | any      | 40582 | green                   |
| Medium low    | any      | 1     | < default-drop-profile> |
| Medium high   | any      | 1     | < default-drop-profile> |
| High          | any      | 18928 | yellow                  |

Drop profile: green, Type: discrete, Index: 40582

| Fill level | Drop probability |
|------------|------------------|
| 50         | 0                |
| 100        | 100              |

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

| Fill level | Drop probability |
|------------|------------------|
| 100        | 100              |

Drop profile: < default-drop-profile>, Type: discrete, Index: 1

| Fill level | Drop probability |
|------------|------------------|
| 100        | 100              |

Drop profile: yellow, Type: discrete, Index: 18928

| Fill level | Drop probability |
|------------|------------------|
| 50         | 0                |
| 100        | 100              |

Chassis scheduler map: < default-drop-profile>

Scheduler map: < default-drop-profile>, Index: 4

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25

Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer Limit: none, Priority: low

Excess Priority: low

Drop profiles:

```

 Loss priority Protocol Index Name
 Low any 1 < default-drop-profile>
 Medium low any 1 < default-drop-profile>
 Medium high any 1 < default-drop-profile>
 High any 1 < default-drop-profile>
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
 Excess Priority: low
 Drop profiles:
 Loss priority Protocol Index Name
 Low any 1 < default-drop-profile>
 Medium low any 1 < default-drop-profile>
 Medium high any 1 < default-drop-profile>
 High any 1 < default-drop-profile>
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
 Excess Priority: low
 Drop profiles:
 Loss priority Protocol Index Name
 Low any 1 < default-drop-profile>
 Medium low any 1 < default-drop-profile>
 Medium high any 1 < default-drop-profile>
 High any 1 < default-drop-profile>
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100

```

```

Fill level Drop probability
 100 100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
 Excess Priority: low
 Drop profiles:
 Loss priority Protocol Index Name
 Low any 1 < default-drop-profile>
 Medium low any 1 < default-drop-profile>
 Medium high any 1 < default-drop-profile>
 High any 1 < default-drop-profile>
 Drop profile: , Type: discrete, Index: 1
 Fill level Drop probability
 100 100
 Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
 Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
 Drop profile: < default-drop-profile>, Type: discrete, Index: 1
 Fill level Drop probability
 100 100
 Congestion-notification: Disabled
Forwarding class
priority Policing priority
af3 normal
af2 normal
ef2 normal
ef1 normal
af1 normal

ID Queue Restricted queue Fabric
0 0 0 low
1 1 1 low
2 2 2 high
3 3 3 high
4 4 0 low

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)
 Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.1] Encapsulation: ENET2
 Traffic statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
 Local statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
 Transit statistics:
 Input bytes : 0
 Output bytes : 0
 Input packets: 0
 Output packets: 0
 Protocol inet, MTU: 1500, Generation: 172, Route table: 0
 Flags: Sendbcst-pkt-to-re
 Input Filters: filter-in-ge-0/3/0.0-i,
 Policar: Input: p1-ge-0/3/0.0-inet-i
 Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0

```

Flags: Is-Primary  
 Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

| Forwarding class ID | Queue | Restricted queue | Fabric priority | Policing priority |
|---------------------|-------|------------------|-----------------|-------------------|
| SPU priority        |       |                  |                 |                   |
| best-effort         | 0     | 0                | low             | normal            |
| low                 |       |                  |                 |                   |

Aggregate Forwarding-class statistics per forwarding-class

Aggregate Forwarding-class statistics:

Forwarding-class statistics:

Forwarding-class best-effort statistics:

Input unicast bytes: 0  
 Output unicast bytes: 0  
 Input unicast packets: 0  
 Output unicast packets: 0

Input multicast bytes: 0  
 Output multicast bytes: 0  
 Input multicast packets: 0  
 Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:

Input unicast bytes: 0  
 Output unicast bytes: 0  
 Input unicast packets: 0  
 Output unicast packets: 0

Input multicast bytes: 0  
 Output multicast bytes: 0  
 Input multicast packets: 0  
 Output multicast packets: 0

IPv4 protocol forwarding-class statistics:

Forwarding-class statistics:

Forwarding-class best-effort statistics:

Input unicast bytes: 0  
 Output unicast bytes: 0  
 Input unicast packets: 0  
 Output unicast packets: 0

Input multicast bytes: 0  
 Output multicast bytes: 0  
 Input multicast packets: 0  
 Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:

Input unicast bytes: 0  
 Output unicast bytes: 0  
 Input unicast packets: 0  
 Output unicast packets: 0

Input multicast bytes: 0  
 Output multicast bytes: 0  
 Input multicast packets: 0  
 Output multicast packets: 0

```

IPv6 protocol forwarding-class statistics:
Forwarding-class statistics:
 Forwarding-class best-effort statistics:

```

```

Input unicast bytes: 0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0

```

```

Input multicast bytes: 0
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0

```

```
Forwarding-class expedited-forwarding statistics:
```

```

Input unicast bytes: 0
Output unicast bytes: 0
Input unicast packets: 0
Output unicast packets: 0

```

```

Input multicast bytes: 0
Output multicast bytes: 0
Input multicast packets: 0
Output multicast packets: 0

```

```
Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
```

```
Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.1] Encapsulation: ENET2
```

```
Input packets : 0
```

```
Output packets: 0
```

| Interface  | Admin | Link | Proto | Input Filter           | Output Filter  |
|------------|-------|------|-------|------------------------|----------------|
| ge-0/3/0.0 | up    | up   | inet  | filter-in-ge-0/3/0.0-i |                |
|            |       |      | mpls  |                        | exp-filter     |
| Interface  | Admin | Link | Proto | Input Policer          | Output Policer |
| ge-0/3/0.0 | up    | up   | inet  | p1-ge-0/3/0.0-inet-i   |                |
|            |       |      | mpls  |                        |                |

```
Filter: filter-in-ge-0/3/0.0-i
```

```
Counters:
```

| Name                         | Bytes | Packets |
|------------------------------|-------|---------|
| count-filter-in-ge-0/3/0.0-i | 0     | 0       |

```
Filter: exp-filter
```

```
Counters:
```

| Name                  | Bytes | Packets |
|-----------------------|-------|---------|
| count-exp-seven-match | 0     | 0       |
| count-exp-zero-match  | 0     | 0       |

```
Policers:
```

| Name                 | Packets |
|----------------------|---------|
| p1-ge-0/3/0.0-inet-i | 0       |

```
Logical interface: ge-0/3/0.0, Index: 68
```

| Object  | Name        | Type           | Index |
|---------|-------------|----------------|-------|
| Rewrite | exp-default | exp (mpls-any) | 33    |

```
Rewrite rule: exp-default, Code point type: exp, Index: 33
```



| Forwarding class | Loss priority | Code point |       |
|------------------|---------------|------------|-------|
| af3              | low           | 000        |       |
| af3              | high          | 001        |       |
| af2              | low           | 010        |       |
| af2              | high          | 011        |       |
| ef2              | low           | 100        |       |
| ef2              | high          | 101        |       |
| ef1              | low           | 110        |       |
| ef1              | high          | 111        |       |
| Object           | Name          | Type       | Index |
| Classifier       | exp-default   | exp        | 10    |

Classifier: exp-default, Code point type: exp, Index: 10

| Code point | Forwarding class     | Loss priority |       |
|------------|----------------------|---------------|-------|
| 000        | af3                  | low           |       |
| 001        | af3                  | high          |       |
| 010        | af2                  | low           |       |
| 011        | af2                  | high          |       |
| 100        | ef2                  | low           |       |
| 101        | ef2                  | high          |       |
| 110        | ef1                  | low           |       |
| 111        | ef1                  | high          |       |
| Object     | Name                 | Type          | Index |
| Classifier | ipprec-compatibility | ip            | 13    |

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

| Code point                 | Forwarding class | Loss priority |                  |        |
|----------------------------|------------------|---------------|------------------|--------|
| 000                        | af3              | low           |                  |        |
| 001                        | af3              | high          |                  |        |
| 010                        | af3              | low           |                  |        |
| 011                        | af3              | high          |                  |        |
| 100                        | af3              | low           |                  |        |
| 101                        | af3              | high          |                  |        |
| 110                        | ef1              | low           |                  |        |
| 111                        | ef1              | high          |                  |        |
| Forwarding class           | ID               | Queue         | Restricted queue | Fabric |
| priority Policing priority |                  |               |                  |        |
| af3                        | 0                | 0             | 0                | low    |
| af2                        | 1                | 1             | 1                | low    |
| ef2                        | 2                | 2             | 2                | high   |
| ef1                        | 3                | 3             | 3                | high   |
| af1                        | 4                | 4             | 0                | low    |

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2

Traffic statistics:

|                 |   |
|-----------------|---|
| Input bytes :   | 0 |
| Output bytes :  | 0 |
| Input packets:  | 0 |
| Output packets: | 0 |

Local statistics:

|                |   |
|----------------|---|
| Input bytes :  | 0 |
| Output bytes : | 0 |
| Input packets: | 0 |

```

Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 174, Route table: 0
Flags: Sendbcst-pkt-to-re

```

```

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)
Flags: SNMP-Traps 0x4000 VLAN-Tag [0x8100.2] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

```

Interface Admin Link Proto Input Filter Output Filter
ge-0/3/0.1 up up mpls
Interface Admin Link Proto Input Policer Output Policer
ge-0/3/0.1 up up

```

```

Logical interface: ge-0/3/0.1, Index: 69
Object Name Type Index
Classifier ipprec-compatibility ip 13

```

```
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
```

```

Code point Forwarding class Loss priority
000 af3 low
001 af3 high
010 af3 low
011 af3 high
100 af3 low
101 af3 high
110 ef1 low
111 ef1 high

```

```

Forwarding class ID Queue Restricted queue Fabric
priority Policing priority
af3 0 0 0 low
normal
af2 1 1 1 low
normal
ef2 2 2 2 high
normal
ef1 3 3 3 high
normal
af1 4 4 0 low
normal

```

### show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

```

```
Logical interface: at-0/0/0.0, Index: 69
```

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Queues supported: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name         | Type      | Index |
|------------|--------------|-----------|-------|
| Rewrite    | dscp-default | dscp      | 31    |
| Classifier | d1           | dscp      | 11331 |
| Classifier | ci           | ieee8021p | 583   |

Logical interface: ge-0/1/0.0, Index: 73

| Object  | Name       | Type           | Index |
|---------|------------|----------------|-------|
| Rewrite | custom-exp | exp (mpls-any) | 46413 |

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name | Type              | Index |
|------------|------|-------------------|-------|
| Rewrite    | ri   | ieee8021p (outer) | 35392 |
| Classifier | ci   | ieee8021p         | 583   |

Physical interface: ge-0/1/3, Index: 149

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object     | Name                 | Type | Index |
|------------|----------------------|------|-------|
| Classifier | ipprec-compatibility | ip   | 13    |

Logical interface: ge-0/1/3.0, Index: 77

| Object  | Name        | Type           | Index |
|---------|-------------|----------------|-------|
| Rewrite | custom-exp2 | exp (mpls-any) | 53581 |

Physical interface: ge-0/1/4, Index: 150

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

| Object | Name | Type | Index |
|--------|------|------|-------|
|--------|------|------|-------|

```

Classifier ipprec-compatibility ip 13

Physical interface: ge-0/1/5, Index: 151
Queues supported: 8, Queues in use: 5
 Scheduler map: <default>, Index: 2
 Congestion-notification: Disabled
Object Name Type Index
Classifier ipprec-compatibility ip 13

Physical interface: ge-0/1/6, Index: 152
Queues supported: 8, Queues in use: 5
 Scheduler map: <default>, Index: 2
 Congestion-notification: Disabled
Object Name Type Index
Classifier ipprec-compatibility ip 13

Physical interface: ge-0/1/7, Index: 153
Queues supported: 8, Queues in use: 5
 Scheduler map: <default>, Index: 2
 Congestion-notification: Disabled
Object Name Type Index
Classifier d1 dscp 11331

Physical interface: ge-0/2/0, Index: 154
Queues supported: 8, Queues in use: 5
 Scheduler map: <default>, Index: 2
 Congestion-notification: Disabled
Object Name Type Index
Classifier ipprec-compatibility ip 13

Physical interface: ge-0/2/1, Index: 155
Queues supported: 8, Queues in use: 5
 Scheduler map: <default>, Index: 2
 Congestion-notification: Disabled
Object Name Type Index
Classifier ipprec-compatibility ip 13

Logical interface: ge-0/2/1.0, Index: 78

Logical interface: ge-0/2/1.32767, Index: 79

Physical interface: xe-0/3/0, Index: 156
Queues supported: 8, Queues in use: 5
 Scheduler map: <default>, Index: 2
 Congestion-notification: Disabled
Object Name Type Index
Classifier ipprec-compatibility ip 13

Logical interface: xe-0/3/0.0, Index: 80

Physical interface: xe-0/3/1, Index: 157
Queues supported: 8, Queues in use: 5
 Scheduler map: <default>, Index: 2
 Congestion-notification: Disabled
Object Name Type Index
Classifier ipprec-compatibility ip 13

Logical interface: xe-0/3/1.0, Index: 81

[edit]
user@host-g11#

```



## show pfe statistics traffic cpu

**Syntax** `show pfe statistics traffic cpu <fpc fpc-slot>`

**Release Information** Command introduced in Junos OS Release 9.5 for EX Series switches.

**Description** (On EX8200 switches only) Display count of multidestination packets ingressing from the physical interface to the CPU.



**NOTE:** Multidestination packets include unknown unicast, broadcast, and multicast packets.

**Options** **none**—Displays the count of packets ingressing from all the physical interfaces (line cards) to the CPU.

**fpc fpc-slot**—(Optional) Displays the count of packets ingressing from the physical interface, referred to by the slot number, to the CPU.

On an EX8200 switch, the FPC slot number is the slot number for the line card. Possible values are **0** through **7** on the EX8208 switch and **0** through **15** on the EX8216 switch.

**Required Privilege Level** view

- Related Documentation**
- [show pfe statistics traffic multicast on page 226](#)
  - [show pfe statistics traffic egress-queues on page 224](#)
  - [show interfaces queue](#)
  - [Monitoring Interface Status and Traffic](#)
  - [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)

**List of Sample Output** [show pfe statistics traffic cpu \(EX8208 Switch\) on page 221](#)

**Output Fields** [Table 40 on page 220](#) lists the output fields for the **show pfe statistics traffic cpu** command. Output fields are listed in the approximate order in which they appear.

**Table 40: show pfe statistics traffic cpu Output Fields**

| Field Name         | Field Description                       |
|--------------------|-----------------------------------------|
| Queue              | CoS queue number.                       |
| Forwarding classes | Forwarding class name.                  |
| Queued Packets     | Number of packets queued to this queue. |

Table 40: show pfe statistics traffic cpu Output Fields (*continued*)

| Field Name           | Field Description                                                                                                                                                                                                                                                               |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Queued Bytes         | Number of bytes queued to this queue.                                                                                                                                                                                                                                           |
| Packets              | Number of packets transmitted by this queue.                                                                                                                                                                                                                                    |
| Bytes                | Number of bytes transmitted by this queue.                                                                                                                                                                                                                                      |
| Tail-dropped packets | Count of packets dropped at the tail end of the queue because of lack of buffer space.                                                                                                                                                                                          |
| RED-dropped packets  | Number of packets dropped because of Random Early Discard (RED): <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> |
| RED-dropped bytes    | Number of bytes dropped because of Random Early Discard (RED): <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority bytes dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority bytes dropped because of RED.</li> </ul>       |

## Sample Output

### show pfe statistics traffic cpu (EX8208 Switch)

```

user@switch> show pfe statistics traffic cpu

Queue: 0, Forwarding classes: best-effort
 Queued:
 Packets : Not Available
 Bytes : Not Available
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 1, Forwarding classes: expedited-forwarding
 Queued:
 Packets : Not Available
 Bytes : Not Available
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 2, Forwarding classes: assured-forwarding
 Queued:
 Packets : Not Available

```

```

Bytes : Not Available
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 3, Forwarding classes: network-control
Queued:
Packets : Not Available
Bytes : Not Available
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 4
Packets : Not Available
Bytes : Not Available
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 5
Packets : Not Available
Bytes : Not Available
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 6
Packets : Not Available
Bytes : Not Available
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 7
Packets : Not Available

```



|                      |   |               |       |
|----------------------|---|---------------|-------|
| Bytes                | : | Not Available |       |
| Packets              | : | 0             | 0 pps |
| Bytes                | : | 0             | 0 bps |
| Tail-dropped packets | : | 0             |       |
| RED-dropped bytes    | : | 0             | 0 bps |
| Low                  | : | 0             | 0 bps |
| High                 | : | 0             | 0 bps |
| RED-dropped packets  | : | 0             | 0 pps |
| Low                  | : | 0             | 0 pps |
| High                 | : | 0             | 0 pps |

## show pfe statistics traffic egress-queues

**Syntax** `show pfe statistics traffic egress-queues <fpc fpc-slot>`

**Release Information** Command introduced in Junos OS Release 9.5 for EX Series switches.

**Description** (On EX8200 switches only) Display count of multidestination packets dropped on egress ports when the egress queues are oversubscribed due to multidestination traffic.



**NOTE:** Multidestination packets include unknown unicast, broadcast, and multicast packets.

**Options** **none**—Displays count of packets dropped on egress ports of all physical interfaces (line cards) when egress queues are oversubscribed due to multidestination traffic.

**fpc fpc-slot**—(Optional) Displays count of packets dropped on egress ports of the physical interface (line card) referred to by the slot number.



**NOTE:** On an EX8200 switch, the FPC slot number is the slot number for the line card. Possible values are 0 through 7 on the EX8208 switch and 0 through 15 on the EX8216 switch.

**Required Privilege Level** view

- Related Documentation**
- [show pfe statistics traffic cpu on page 220](#)
  - [show pfe statistics traffic multicast on page 226](#)
  - [show interfaces queue](#)
  - [Monitoring Interface Status and Traffic](#)
  - [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)

**List of Sample Output** [show pfe statistics traffic egress-queues fpc 4 \(EX8208 Switch\) on page 225](#)

**Output Fields** [Table 41 on page 224](#) lists the output fields for the **show pfe statistics traffic egress-queues** command. Output fields are listed in the approximate order in which they appear.

**Table 41: show pfe statistics traffic egress-queues Output Fields**

| Field Name           | Field Description                                                             |
|----------------------|-------------------------------------------------------------------------------|
| Tail-dropped packets | Number of arriving packets dropped because the output queue buffers are full. |

## Sample Output

### show pfe statistics traffic egress-queues fpc 4 (EX8208 Switch)

```
user@switch> show pfe statistics traffic egress-queues fpc 4
Tail-dropped packets : 0
```

## show pfe statistics traffic multicast

---

**Syntax** `show pfe statistics traffic multicast <fpc fpc-slot dev-number>`

**Release Information** Command introduced in Junos OS Release 9.5 for EX Series switches.

**Description** (On EX8200 switches only) Display class-of-service (CoS) queue information for multidestination traffic on a physical interface (line card).



**NOTE:** Multidestination packets include unknown unicast, broadcast, and multicast packets.



**NOTE:** To view statistical information for unicast traffic, use the `show interfaces queue` command.

**Options** `fpc fpc-slot dev-number`—(Optional) Displays class-of-service (CoS) queue information for multidestination traffic on the physical interface (line card) referred to by the slot number and device number.



**NOTE:** On an EX8200 switch, the FPC slot number is the slot number for the line card. Possible values for the FPC slot number are 0 through 7 on the EX8208 switch and 0 through 15 on the EX8216 switch. The value for the device number ranges from 0–5, where 0–4 values correspond to the statistics only from that specific device and the value 5 corresponds to the combined statistics from all the devices in the FPC.

**Required Privilege Level** view

**Related Documentation**

- [show pfe statistics traffic cpu on page 220](#)
- [show pfe statistics traffic egress-queues on page 224](#)
- [show interfaces queue](#)
- [Monitoring Interface Status and Traffic](#)
- [Understanding Junos OS CoS Components for EX Series Switches on page 6](#)

**List of Sample Output** [show pfe statistics traffic multicast fpc 0 2 \(EX8208 Switch\) on page 227](#)

**Output Fields** [Table 42 on page 227](#) lists the output fields for the `show pfe statistics traffic multicast` command. Output fields are listed in the approximate order in which they appear.

Table 42: show pfe statistics traffic multicast Output Fields

| Field Name           | Field Description                                                                                                                                                                                                                                                               |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Queue                | CoS queue number.                                                                                                                                                                                                                                                               |
| Forwarding classes   | Forwarding class name.                                                                                                                                                                                                                                                          |
| Queued Packets       | Number of packets queued to this queue.                                                                                                                                                                                                                                         |
| Queued Bytes         | Number of bytes queued to this queue.                                                                                                                                                                                                                                           |
| Packets              | Number of packets transmitted by this queue.                                                                                                                                                                                                                                    |
| Bytes                | Number of bytes transmitted by this queue.                                                                                                                                                                                                                                      |
| Tail-dropped packets | Count of packets dropped at the tail end of the queue because of lack of buffer space.                                                                                                                                                                                          |
| RED-dropped packets  | Number of packets dropped because of Random Early Discard (RED): <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> |
| RED-dropped bytes    | Number of bytes dropped because of Random Early Discard (RED): <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority bytes dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority bytes dropped because of RED.</li> </ul>       |

## Sample Output

### show pfe statistics traffic multicast fpc 0 2(EX8208 Switch)

```
user@switch> show pfe statistics traffic multicast fpc 0 2
```

```
Queue: 0, Forwarding classes: best-effort
```

```
Queued:
```

```

Packets : Not Available
Bytes : Not Available
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
```

```
Queue: 1, Forwarding classes: expedited-forwarding
```

```
Queued:
```

```

Packets : Not Available
Bytes : Not Available
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0
RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
```

```

 High : 0 0 bps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
 Packets : Not Available
 Bytes : Not Available
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 3, Forwarding classes: network-control
Queued:
 Packets : Not Available
 Bytes : Not Available
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 4
 Packets : Not Available
 Bytes : Not Available
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 5
 Packets : Not Available
 Bytes : Not Available
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0
 RED-dropped bytes : 0 0 bps
 Low : 0 0 bps
 High : 0 0 bps
 RED-dropped packets : 0 0 pps
 Low : 0 0 pps
 High : 0 0 pps
Queue: 6
 Packets : Not Available
 Bytes : Not Available
 Packets : 0 0 pps
 Bytes : 0 0 bps
 Tail-dropped packets : 0
 RED-dropped bytes : 0 0 bps

```

|                      |   |               |       |
|----------------------|---|---------------|-------|
| Low                  | : | 0             | 0 bps |
| High                 | : | 0             | 0 bps |
| RED-dropped packets  | : | 0             | 0 pps |
| Low                  | : | 0             | 0 pps |
| High                 | : | 0             | 0 pps |
| Queue: 7             |   |               |       |
| Packets              | : | Not Available |       |
| Bytes                | : | Not Available |       |
| Packets              | : | 0             | 0 pps |
| Bytes                | : | 0             | 0 bps |
| Tail-dropped packets | : | 0             |       |
| RED-dropped bytes    | : | 0             | 0 bps |
| Low                  | : | 0             | 0 bps |
| High                 | : | 0             | 0 bps |
| RED-dropped packets  | : | 0             | 0 pps |
| Low                  | : | 0             | 0 pps |
| High                 | : | 0             | 0 pps |





## PART 4

# Troubleshooting

- [Troubleshooting Procedures on page 233](#)



## CHAPTER 7

# Troubleshooting Procedures

- [Troubleshooting CoS Schedulers on a 40-port SFP+ Line Card in an EX8200 Switch on page 233](#)
- [Troubleshooting a CoS Classifier Configuration for a TCAM Space Error on page 234](#)

### Troubleshooting CoS Schedulers on a 40-port SFP+ Line Card in an EX8200 Switch

- Problem** **Description:** After you configure a scheduler map on an interface on the 40-port SFP+ line card, you notice one or both of the following:
- All packets are being dropped on a class-of-service queue configured on the interface.
  - A message in the system log states that the interface is using the default scheduler map, not the scheduler map you configured. For example:
- ```
Sep 19 21:26:50 hostname cosd[907]: COSD_SCHED_MAP_GROUP_CONFLICT:  
Interface xe-5/0/15 cannot be bound to scheduler-map m1. It will be bound to  
default scheduler-map
```
- Cause** The ports in a 40-port SFP+ line card are divided into eight groups, each group comprising five ports. The ports in a port group share 10 gigabits of bandwidth. Because the port groups share bandwidth, only one scheduler map can be active at a time in a port group. If you configure different scheduler maps for different interfaces in a port group, you do not receive an error when you commit the configuration. Instead, default scheduler map becomes the active scheduler map for all interfaces in the port group, and messages in the system log report that the default scheduler map is in use for the affected interfaces. If the default scheduler map does not define a queue, all traffic is dropped on that queue.
- Solution** Check your CoS configuration for the interfaces in the port group. If you have different scheduler maps assigned to different interfaces in the port group:
1. Delete the scheduler map configuration for all interfaces in the port group.
 2. Determine the scheduler map that you want all interfaces in the port group to use.
 3. Assign that scheduler map to at least one interface in the port group. The remaining interfaces in the port group will adopt this scheduler map.



BEST PRACTICE: To prevent confusion and future configuration conflicts, explicitly assign the scheduler map to each interface in the port group.

4. After you commit the configuration, verify that the scheduler map is the active scheduler map for the interfaces in the port group by using the **show class-of-service forwarding-table scheduler-map** command.

Related Documentation

- *40-port SFP+ Line Card in an EX8200 Switch*
- [Defining CoS Schedulers and Scheduler Maps \(CLI Procedure\) on page 93](#)
- [Understanding CoS Queues on EX8200 Line Cards That Include Oversubscribed Ports on page 34](#)

Troubleshooting a CoS Classifier Configuration for a TCAM Space Error

Problem **Description:** When a CoS classifier configuration exceeds the amount of available ternary content addressable memory (TCAM) space, the switch returns the following system log message:

```
<number_of_rules_being_added> rules for <filter_name> class <filter_class> will not be installed, key: <bind_point>. no space in tcam db(<shared_pool_information>)
```

The switch returns this message during the commit operation if the number of classifiers defined in the CoS configuration or the number of bind points (interfaces) to which classifiers are bound causes the CoS configuration to exceed the amount of available TCAM space. However, the commit operation for the CoS configuration is completed in the CLI module.

Solution When a CoS configuration exceeds the amount of available TCAM table space, you must either define fewer classifiers or bind them to fewer interfaces, or both, so that the space requirements for the CoS configuration do not exceed the available space in TCAM.

To delete classifier definitions and bind points in a CoS configuration, and to apply a new CoS classifier definition to fewer bind points:

1. Delete either the CoS classifier definition or the bind points:

- To delete the CoS classifier definition:

- For behavioral classifiers:

```
[edit class-of-service]
user@switch# delete classifier dscp d1
```

- For multifield classifiers:

```
[edit]
user@switch# delete interfaces ge-3/0/2 unit 0 family ethernet-switching filter input
ipacl
```

This command deletes a multifield classifier defined for a port. Similarly, you can delete a multifield classifier defined for a VLAN or router.

You can also delete terms defined in a single multifield classifier:

```
[edit]
user@switch# delete firewall family inet filter f1 term t1
```

In both these examples (for behavioral and multifield classifiers), the assumption is that too many classifier definitions resulted in the error message.

- To delete the bind points:

```
[edit class-of-service]
user@switch# delete class-of-service interfaces ge-0/0/0
user@switch# delete class-of-service interfaces ge-0/0/1
user@switch# delete class-of-service interfaces ge-0/0/2
user@switch# delete class-of-service interfaces ge-0/0/3
user@switch# delete class-of-service interfaces ge-0/0/4
user@switch# delete class-of-service interfaces ge-0/0/5
user@switch# delete class-of-service interfaces ge-0/0/6
user@switch# delete class-of-service interfaces ge-0/0/7
user@switch# delete class-of-service interfaces ge-0/0/8
```

Here the assumption is that too many bind points (nine) in the configuration resulted in the error message.

2. Commit the operation:

```
[edit]
user@switch# commit
```

3. Define fewer classifiers in the CoS configuration or bind classifiers to fewer interfaces, or both, so that the CoS classifier configuration does not exceed the amount of available TCAM space on the switch:

- To define CoS classifiers:

- For behavioral classifiers:

```
[edit]
user@switch# set class-of-service classifiers dscp d2 forwarding-class fc1 loss-priority
low code-points 000001
user@switch# set class-of-service classifiers dscp d2 forwarding-class fc2 loss-priority
low code-points 000010
user@switch# set class-of-service classifiers dscp d2 forwarding-class fc3 loss-priority
low code-points 000011
```

```
user@switch# set class-of-service classifiers dscp d2 forwarding-class fc4 loss-priority
low code-points 000100
user@switch# set class-of-service classifiers dscp d2 forwarding-class fc5 loss-priority
low code-points 000101
user@switch# set class-of-service classifiers dscp d2 forwarding-class fc6 loss-priority
low code-points 000110
user@switch# set class-of-service classifiers dscp d2 forwarding-class fc7 loss-priority
low code-points 000111
```

- For multifield Classifiers:

```
[edit]
user@switch# set firewall family inet filter f1 term t1 from protocol tcp
user@switch# set firewall family inet filter f1 term t1 then loss-priority high
user@switch# set firewall family inet filter f1 term t1 then forwarding-class best-effort
user@switch# set firewall family inet filter f1 term t2 from protocol udp
user@switch# set firewall family inet filter f1 term t2 then loss-priority high
user@switch# set firewall family inet filter f1 term t2 then forwarding-class
assured-forwarding
user@switch# set firewall family inet filter f1 term t3 from source-port ssh
user@switch# set firewall family inet filter f1 term t3 then loss-priority low
user@switch# set firewall family inet filter f1 term t3 then forwarding-class fc8
user@switch# set class-of-service forwarding-classes best-effort, assured-forwarding,
fc8
```

- To bind classifiers to fewer interfaces:

```
[edit]
user@switch# set class-of-service interfaces ge-0/0/0 unit 0 classifiers dscp d2
user@switch# set class-of-service interfaces ge-0/0/1 unit 0 classifiers dscp d2
user@switch# set class-of-service interfaces ge-0/0/2 unit 0 forwarding-class best-effort
user@switch# set class-of-service interfaces ge-0/0/3 unit 0 forwarding-class
assured-forwarding
user@switch# set class-of-service interfaces ge-0/0/4 unit 0 forwarding-class fc8
```

4. Commit the operation:

```
[edit]
user@switch# commit
```

5. Check system log for an error message. If an error message is not logged, then your classifier configuration has not exceeded the TCAM space limit.

If an error message is logged, then repeat this procedure by defining fewer classifiers or binding classifiers to fewer bind points.

**Related
Documentation**

- [Understanding CoS Classifiers on page 11](#)
- [Defining CoS Classifiers \(CLI Procedure\) on page 87](#)