



**E-series™ Routing Platforms**

## **E120 and E320 Hardware Guide**

*Release 9.1.x*

**Juniper Networks, Inc.**

1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA

408-745-2000

**[www.juniper.net](http://www.juniper.net)**

Part Number: 162-01957-00, Revision A00

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, the Juniper Networks logo, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. JUNOS and JUNOSe are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

*JUNOSe™ E-series™ Routing Platforms E120 and E320 Hardware Guide, Release 9.1.x*

Copyright © 2008, Juniper Networks, Inc.

All rights reserved. Printed in USA.

Writing: John Borelli

Editing: Ben Mann

Illustration: John Borelli

Cover Design: Edmonds Design

Revision History

18 April 2008—Revision 1

The information in this document is current as of the date listed in the revision history.

## SOFTWARE LICENSE

The terms and conditions for using this software are described in the software license contained in the acknowledgment to your purchase order or, to the extent applicable, to any reseller agreement or end-user purchase agreement executed between you and Juniper Networks. By using this software, you indicate that you understand and agree to be bound by those terms and conditions.

Generally speaking, the software license restricts the manner in which you are permitted to use the software and may contain prohibitions against certain uses. The software license may state conditions under which the license is automatically terminated. You should consult the license for further details.

For complete product documentation, please see the Juniper Networks Web site at [www.juniper.net/techpubs](http://www.juniper.net/techpubs).

## End User License Agreement

READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are Juniper Networks, Inc. and its subsidiaries (collectively "Juniper"), and the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").
2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, and updates and releases of such software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller. "Embedded Software" means Software which Juniper has embedded in the Juniper equipment.
3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:
  - a. Customer shall use the Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
  - b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius software on multiple computers requires multiple licenses, regardless of whether such computers are physically contained on a single chassis.
  - c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
  - d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
  - e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use the Embedded Software on non-Juniper equipment; (j) use the Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.
5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.
6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees for the Software are exclusive of taxes, withholdings, duties, or levies (collectively "Taxes"). Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14(ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

# Table of Contents

## About This Guide xi

---

|                                      |      |
|--------------------------------------|------|
| Objectives .....                     | xi   |
| Audience .....                       | xi   |
| E-series Routers .....               | xi   |
| Documentation Conventions .....      | xii  |
| List of Technical Publications ..... | xiii |
| Obtaining Documentation .....        | xvii |
| Documentation Feedback .....         | xvii |
| Requesting Technical Support .....   | xvii |

## Part 1

## Product Overview

---

### Chapter 1

### E120 and E320 Overview 3

---

|                                |    |
|--------------------------------|----|
| System Description .....       | 3  |
| Chassis Overview .....         | 3  |
| E320 Model .....               | 4  |
| E120 Model .....               | 6  |
| E120 and E320 Modules .....    | 7  |
| SRP Module .....               | 7  |
| Module Details .....           | 8  |
| Nonvolatile Storage .....      | 9  |
| SFM Module .....               | 9  |
| Fabric Slices .....            | 10 |
| SRP IOA .....                  | 10 |
| Module Details .....           | 10 |
| Line Modules .....             | 10 |
| Packet Classification .....    | 11 |
| I/O Adapters .....             | 11 |
| Network Management Tools ..... | 12 |
| CLI Management .....           | 12 |
| SNMP MIB Management .....      | 12 |
| Redundancy Features .....      | 13 |
| SRP Modules .....              | 13 |
| NVS Cards .....                | 13 |
| Power .....                    | 13 |
| Fans .....                     | 13 |

**Part 2****Initial Installation**

---

**Chapter 2****Unpacking and Inspecting the Router****17**

|  |    |
|--|----|
| Before You Begin .....                             | 17 |
| Unpacking the Router .....                         | 17 |
| Inspecting Router Components and Accessories ..... | 18 |
| If You Detect or Suspect Damage .....              | 19 |
| Contacting Juniper Networks .....                  | 19 |
| The Next Step .....                                | 19 |

**Chapter 3****Installing the Router****21**

|                                     |    |
|-------------------------------------|----|
| Before You Begin .....              | 21 |
| Freestanding Installation .....     | 21 |
| Rack-Mounted Installation .....     | 23 |
| Installation Guidelines .....       | 23 |
| Preparing the Equipment Racks ..... | 24 |
| Installing the Router .....         | 24 |
| The Next Step .....                 | 24 |

**Chapter 4****Installing Modules****25**

|  |    |
|--|----|
| Overview .....                               | 25 |
| Slot Numbering .....                         | 28 |
| IOA Slot Combinations .....                  | 30 |
| Module Combinations .....                    | 32 |
| IOAs Requiring SFPs .....                    | 33 |
| Proper Handling of ES2 4G LMs .....          | 33 |
| ES2 10G Uplink Line Modules .....            | 34 |
| Managing Modules Using the Software .....    | 34 |
| Order of Installation .....                  | 34 |
| Hot-Swapping Modules .....                   | 35 |
| Protecting Modules and Slots .....           | 35 |
| Required Tools and Safety Items .....        | 36 |
| Safety Guidelines .....                      | 36 |
| Installing an SRP Module or SFM Module ..... | 36 |
| Installing an IOA Shelf .....                | 38 |
| Installing a Line Module or an IOA .....     | 39 |
| Removing Modules and IOAs .....              | 40 |
| Installing and Removing SFPs .....           | 41 |
| Installing SFPs .....                        | 42 |
| Removing SFPs .....                          | 43 |
| The Next Step .....                          | 44 |

|                  |  |           |
|------------------|--|-----------|
| <b>Chapter 5</b> | <b>Cabling the Router</b>  | <b>45</b> |
|                  | Cabling Overview .....   | 45        |
|                  | Required Tools, Wires, and Cables .....                                  | 46        |
|                  | Cabling the SRP IOA .....  | 47        |
|                  | Network Timing Ports .....   | 48        |
|                  | Management Ports .....   | 49        |
|                  | Connecting to the Network .....  | 49        |
|                  | Connecting to a Console Terminal .....                                   | 49        |
|                  | Cabling IOAs .....   | 49        |
|                  | LC Duplex Connectors .....   | 49        |
|                  | SFPs .....   | 50        |
|                  | Cabling the Router for Power .....                                       | 50        |
|                  | Task 1: Turn Off All Router Power .....                                  | 52        |
|                  | Task 2: Connect the Grounding Cables .....                               | 52        |
|                  | Task 3: Connect the Power Cables .....                                   | 52        |
|                  | The Next Step .....  | 53        |
| <b>Chapter 6</b> | <b>Powering Up the Router</b>  | <b>55</b> |
|                  | Before You Power Up the System .....                                     | 55        |
|                  | Powering Up .....  | 55        |
|                  | Initialization Sequence .....  | 56        |
|                  | Status LEDs .....  | 56        |
|                  | Powering Down .....  | 57        |
|                  | The Next Step .....  | 57        |
| <b>Chapter 7</b> | <b>Accessing E-series Routers</b>  | <b>59</b> |
|                  | Setting Up Management Access .....                                       | 59        |
|                  | Console Port Setup .....   | 59        |
|                  | Using HyperTerminal .....  | 60        |
|                  | Connecting Directly to the Router .....                                  | 60        |
|                  | Assigning an IP Address .....  | 61        |
|                  | Telnet Setup .....   | 62        |
|                  | SNMP .....   | 63        |
|                  | The Next Step .....  | 64        |
| <b>Part 3</b>    | <b>Hardware Maintenance, Replacement, and Troubleshooting Procedures</b> |           |
| <b>Chapter 8</b> | <b>Maintaining the Router</b>  | <b>67</b> |
|                  | Required Tools and Items .....   | 67        |
|                  | Storing Modules and Components .....                                     | 67        |
|                  | Cleaning the System .....  | 68        |

|  |    |
|--|----|
| Upgrading NVS Cards on SRP Modules .....               | 68 |
| Upgrading a System That Contains One SRP Module .....  | 69 |
| Upgrading a System That Contains Two SRP Modules ..... | 69 |
| Replacing an NVS Card .....                            | 70 |
| Replacing Fan Trays .....                              | 71 |
| Removing an E320 Fan Tray .....                        | 72 |
| Installing an E320 Fan Tray .....                      | 72 |
| Installing an Air Filter .....                         | 73 |
| Replacing a Power Distribution Unit .....              | 74 |

## **Chapter 9                      Troubleshooting                      77**

---

|   |    |
|---|----|
| Diagnosing Problems .....                       | 77 |
| Initialization Sequence .....                   | 77 |
| Troubleshooting Power Failures .....            | 78 |
| Understanding Status LEDs to Troubleshoot ..... | 78 |
| LED Identification .....                        | 78 |
| LED Activity .....                              | 81 |
| Monitoring Temperatures of Modules .....        | 83 |
| Resetting Line Modules and SRP Modules .....    | 84 |
| Double-Bit Errors on SRP Modules .....          | 84 |
| Detecting Double-Bit Errors .....               | 84 |
| Fixing Double-Bit Errors .....                  | 85 |

## **Part 4                      Appendixes**

---

### **Appendix A                      System Specifications                      89**

---

|                                  |    |
|----------------------------------|----|
| E120 Router Specifications ..... | 89 |
| E320 Router Specifications ..... | 91 |

### **Appendix B                      Installation Guidelines and Requirements                      93**

---

|   |     |
|---|-----|
| Your Preinstallation Responsibilities .....             | 93  |
| Environmental Requirements .....                        | 93  |
| Regulatory Compliances .....                            | 94  |
| Safety Guidelines .....                                 | 94  |
| Equipment Rack Requirements .....                       | 95  |
| Mechanical Requirements .....                           | 95  |
| Space Requirements .....                                | 96  |
| Proper Rack Installation .....                          | 96  |
| Cabling Recommendations .....                           | 97  |
| Product Reclamation and Recycling Program .....         | 98  |
| Hardware Compliance .....                               | 99  |
| Federal Communications Commission (FCC) Statement ..... | 99  |
| FCC Requirements for Consumer Products .....            | 100 |



|                   |  |            |
|-------------------|--|------------|
|                   | Food and Drug Administration, Center for Devices and Radiological Health .....           | 100        |
|                   | Canadian Department of Communications Radio Interference Regulations .....               | 100        |
|                   | Réglement sur le brouillage radioélectrique du ministère des communications .....        | 100        |
|                   | Industry Canada Notice CS-03 .....   | 100        |
|                   | Avis CS-03 d'Industrie Canada .....  | 101        |
|                   | D.O.C. Explanatory Notes: Equipment Attachment Limitations .....                         | 102        |
|                   | Notes explicatives du ministère des Communications: limites visant les accessoires ..... | 102        |
|                   | EC Declaration of Conformity .....   | 103        |
|                   | Voluntary Control Council for Interference (VCCI) Statement for Japan .....              | 103        |
| <b>Appendix C</b> | <b>Cable Pinouts</b>   | <b>105</b> |
|                   | SRP IOA .....  | 105        |
| <b>Appendix D</b> | <b>Contacting Customer Support and Returning Hardware</b>                                | <b>109</b> |
|                   | Contacting Customer Support .....  | 109        |
|                   | Return Procedure .....   | 109        |
|                   | Locating Component Serial Numbers .....  | 110        |
|                   | Information You Might Need to Supply to JTAC .....                                       | 111        |
|                   | Tools and Parts Required .....   | 112        |
|                   | Returning Products for Repair or Replacement .....                                       | 112        |
|                   | Packing Instructions for Returning a Chassis .....                                       | 112        |
| <b>Appendix E</b> | <b>Declaration of Conformity</b>   | <b>115</b> |
|                   | Declaration of Conformity – E120 Router .....  | 115        |
|                   | Declaration of Conformity – E320 Router .....  | 116        |
| <b>Part 5</b>     | <b>Index</b>   |            |
|                   | Index .....  | 119        |



# About This Guide

This preface provides the following guidelines for using the *E-series™ Routing Platforms E120 and E320 Hardware Guide*:

- Objectives on page xi
- Audience on page xi
- E-series Routers on page xi
- Documentation Conventions on page xii
- List of Technical Publications on page xiii
- Obtaining Documentation on page xvii
- Documentation Feedback on page xvii
- Requesting Technical Support on page xvii

## Objectives

---

This guide provides the information you need to install, start, maintain, and troubleshoot E120 routers and E320 routers.

An E-series router is shipped with the latest system software installed. To install a future release or reinstall the system software, see *JUNOS System Basics Configuration Guide, Chapter 3, Installing JUNOS Software*.



**NOTE:** If the information in the latest *JUNOS Release Notes* differs from the information in this guide, follow the *JUNOS Release Notes*.

---

## Audience

---

This guide is intended for experienced system and network specialists working with E-series routers in an Internet access environment.

## E-series Routers

---

Two models of E-series routers are available:

- E120 router
- E320 router

Both models use the same software.

## Documentation Conventions

Table 1 on page xii defines the notice icons used in this guide.

**Table 1: Notice Icons**





| Icon  | Meaning            | Description   |
|---|--------------------|---|
|  | Informational note | Indicates important features or instructions.                               |
|  | Caution            | Indicates a situation that might result in loss of data or hardware damage. |
|  | Warning            | Alerts you to the risk of personal injury or death.                         |
|  | Laser warning      | Alerts you to the risk of personal injury from a laser.                     |

Table 2 on page xii defines text conventions used in this guide and the command syntax conventions used primarily in the *JUNOS Command Reference Guide*. For more information about command syntax, see the *JUNOS System Basics Configuration Guide, Chapter 2, Command Line Interface*.

**Table 2: Text and Syntax Conventions**

| Convention                      | Description   | Examples   |
|---------------------------------|---|--|
| <b>Text Conventions</b>         |   |  |
| <b>Bold text like this</b>      | Represents names of commands and keywords in text.  | <ul style="list-style-type: none"> <li>Issue the <b>clock source</b> command.</li> <li>Specify the keyword <b>exp-msg</b>.</li> </ul>  |
| <b>Bold text like this</b>      | Represents text that you must type.   | <code>host1(config)#<b>traffic class low-loss1</b></code>  |
| Fixed-width text like this      | Represents output on the terminal screen.   | <pre>host1#show ip community list Community standard list 1 permit 0:100 0:200 0:300</pre>   |
| <i>Italic text like this</i>    | <ul style="list-style-type: none"> <li>Emphasizes words.</li> <li>Identifies variables.</li> <li>Identifies chapter, appendix, and book names.</li> </ul> | <ul style="list-style-type: none"> <li>There are two levels of access, <i>user</i> and <i>privileged</i>.</li> <li><i>clusterId</i>, <i>ipAddress</i>.</li> <li><i>Appendix A, System Specifications</i>.</li> </ul> |
| + (plus sign) linking key names | Indicates that you must press two or more keys simultaneously.  | Press Ctrl + b.  |

**Table 2: Text and Syntax Conventions** (*continued*)

| Convention   | Description  | Examples  |
|--|--|---|
| <b>Syntax Conventions in the Command Reference Guide</b> |  |   |
| Plain text like this                                     | Represents keywords.   | terminal length   |
| <i>Italic text like this</i>                             | Represents variables.  | <i>mask, accessListName</i>   |
| (pipe symbol)  | Indicates a choice between the keywords or variables on either side of the symbol. (Specifying a choice can be either optional or required.) | diagnostic   line   |
| [ ] (square brackets)                                    | Enclose an optional choice of a single keyword or variable.  | [ internal   external ]   |
| [ ]* (square brackets and the asterisk)                  | Enclose an optional choice of one or more keywords or variables.   | [ level1   level2   l1 ]*   |
| { } (braces)   | Enclose a required choice of a single keyword or variable.   | { permit   deny } { in   out }<br><br>{ <i>clusterId</i>   <i>ipAddress</i> } |

## List of Technical Publications

The E-series and JUNOS<sup>e</sup> documentation set consists of several hardware and software guides, which are available in electronic and printed formats.

Table 3 on page xiii lists and describes the E-series and JUNOS<sup>e</sup> document set. For a complete list of abbreviations used in this document set, along with their spelled-out terms, see *JUNOS<sup>e</sup> System Basics Configuration Guide, Appendix A, Abbreviations and Acronyms*.

**Table 3: Juniper Networks E-series and JUNOS<sup>e</sup> Technical Publications**

| Document                               | Description  |
|--|--|
| <b>E-series Hardware Documentation</b> |  |
| <i>E120 and E320 Quick Start Guide</i> | Shipped in the box with all new E120 and E320 routers. Provides the basic procedures to help you get the routers up and running quickly.   |
| <i>E120 and E320 Hardware Guide</i>    | <p>Provides the necessary procedures for getting the E120 routers and E320 routers operational, including information about:</p> <ul style="list-style-type: none"> <li>■ Installing the chassis and modules</li> <li>■ Connecting cables</li> <li>■ Powering up the routers</li> <li>■ Configuring the routers for management access</li> <li>■ Troubleshooting common issues</li> </ul> <p>Describes switch router processor (SRP) modules, line modules, and I/O adapters (IOAs) available for the E120 and E320 routers.</p> |

**Table 3: Juniper Networks E-series and JUNOS<sup>e</sup> Technical Publications** *(continued)*

| Document   | Description   |
|--|---|
| <i>E120 and E320 Module Guide</i>  | <p>Provides detailed specifications for line modules and IOAs in E120 and E320 routers, and information about the compatibility of these modules with JUNOS<sup>e</sup> software releases.</p> <p>Lists the layer 2 protocols, layer 3 protocols, and applications that line modules and their corresponding IOAs modules support.</p> <p>Provides module LED information.</p>  |
| <i>E-series Installation Quick Start poster or ERX Quick Start Guide</i> | Shipped in the box with all new ERX routers. Provides the basic procedures to help you get an ERX router up and running quickly.  |
| <i>ERX Hardware Guide</i>  | <p>Provides the necessary procedures for getting ERX-14xx models, ERX-7xx models, and ERX-310 routers operational, including information about:</p> <ul style="list-style-type: none"> <li>■ Installing the chassis and modules</li> <li>■ Connecting cables</li> <li>■ Powering up the routers</li> <li>■ Configuring the routers for management access</li> <li>■ Troubleshooting common issues</li> </ul> <p>Describes switch router processor (SRP) modules, line modules, and I/O modules available for the ERX routers.</p> |
| <i>ERX Module Guide</i>  | <p>Provides detailed specifications for line modules and I/O modules in ERX-14xx models, ERX-7xx models, and ERX-310 routers, and information about the compatibility of these modules with JUNOS<sup>e</sup> software releases.</p> <p>Lists the layer 2 protocols, layer 3 protocols, and applications that line modules and their corresponding I/O modules support.</p> <p>Provides module LED information.</p>   |
| <i>ERX End-of-Life Module Guide</i>                                      | <p>Provides an overview and description of ERX modules that are end-of-life (EOL) and can no longer be ordered for the following routers:</p> <ul style="list-style-type: none"> <li>■ ERX-7xx models</li> <li>■ ERX-14xx models</li> <li>■ ERX-310 router</li> </ul>   |
| <b>JUNOS<sup>e</sup> Software Guides</b>                                 |   |

**Table 3: Juniper Networks E-series and JUNOS Technical Publications** *(continued)*

| Document   | Description  |
|--|--|
| <i>JUNOS System Basics Configuration Guide</i>     | <p>Provides information about:</p> <ul style="list-style-type: none"> <li>■ Planning and configuring your network</li> <li>■ Using the command-line interface (CLI)</li> <li>■ Installing JUNOS software</li> <li>■ Configuring the Simple Network Management Protocol (SNMP)</li> <li>■ Managing the router and its modules, including the use of high availability (HA) for SRP redundancy</li> <li>■ Configuring and running a unified in-service software upgrade (ISSU)</li> <li>■ Configuring passwords and security</li> <li>■ Configuring the router clock</li> <li>■ Configuring virtual routers</li> </ul> |
| <i>JUNOS Physical Layer Configuration Guide</i>    | Explains how to configure, test, and monitor physical layer interfaces.  |
| <i>JUNOS Link Layer Configuration Guide</i>        | Explains how to configure and monitor static and dynamic link layer interfaces.  |
| <i>JUNOS IP, IPv6, and IGP Configuration Guide</i> | Explains how to configure and monitor IP, IPv6 and Neighbor Discovery, and interior gateway protocols (RIP, OSPF, and IS-IS).  |
| <i>JUNOS IP Services Configuration Guide</i>       | <p>Explains how to configure and monitor IP routing services. Topics include:</p> <ul style="list-style-type: none"> <li>■ Routing policies</li> <li>■ Firewalls</li> <li>■ Network Address Translation (NAT)</li> <li>■ J-Flow statistics</li> <li>■ Bidirectional forwarding detection (BFD)</li> <li>■ Internet Protocol Security (IPSec)</li> <li>■ Access Node Control Protocol (ANCP), also known as Layer 2 Control (L2C)</li> <li>■ Digital certificates</li> <li>■ IP tunnels</li> <li>■ Virtual Router Redundancy Protocol (VRRP)</li> <li>■ Mobile IP home agent</li> </ul>                               |
| <i>JUNOS Multicast Routing Configuration Guide</i> | <p>Explains how to configure and monitor IP multicast routing and IPv6 multicast routing. Topics include:</p> <ul style="list-style-type: none"> <li>■ Internet Group Management Protocol (IGMP)</li> <li>■ Protocol Independent Multicast (PIM)</li> <li>■ Distance Vector Multicast Routing Protocol (DVMRP)</li> <li>■ Multicast Listener Discovery (MLD)</li> </ul>  |

**Table 3: Juniper Networks E-series and JUNOS Technical Publications** *(continued)*

| Document  | Description   |
|---|---|
| <i>JUNOS BGP and MPLS Configuration Guide</i>       | Explains how to configure and monitor: <ul style="list-style-type: none"> <li>■ Border Gateway Protocol (BGP) routing</li> <li>■ Multiprotocol Label Switching (MPLS) and related applications</li> <li>■ Layer 2 services over MPLS</li> <li>■ Virtual private LAN service (VPLS)</li> <li>■ Layer 2 virtual private networks (L2VPNs)</li> </ul>  |
| <i>JUNOS Policy Management Configuration Guide</i>  | Explains how to configure, manage, and monitor customized policy rules for packet classification, forwarding, filtering, and flow rates. Also describes the packet mirroring feature, which uses secure policies.   |
| <i>JUNOS Quality of Service Configuration Guide</i> | Explains how to configure quality of service (QoS) features to queue, schedule, and monitor traffic flow. These features include: <ul style="list-style-type: none"> <li>■ Traffic classes and traffic-class groups</li> <li>■ Drop, queue, QoS, and scheduler profiles</li> <li>■ QoS parameters</li> <li>■ Statistics</li> </ul>  |
| <i>JUNOS Broadband Access Configuration Guide</i>   | Explains how to configure and monitor a remote access environment, which can include the following features: <ul style="list-style-type: none"> <li>■ Authentication, authorization, and accounting (AAA)</li> <li>■ Dynamic Host Configuration Protocol (DHCP)</li> <li>■ Remote Authentication Dial-In User Service (RADIUS)</li> <li>■ Terminal Access Controller Access Control System (TACACS +)</li> <li>■ Layer 2 Tunneling Protocol (L2TP)</li> <li>■ Subscriber management</li> </ul>                        |
| <i>JUNOS System Event Logging Reference Guide</i>   | Describes the JUNOS system logging feature and describes how to use the CLI to monitor your system's log configuration and system events.   |
| <i>JUNOS Command Reference Guide<br/>A to M</i>     | Together constitute the <i>JUNOS Command Reference Guide</i> . Contain important information about commands implemented in the system software. Use to look up: <ul style="list-style-type: none"> <li>■ Descriptions of commands and command parameters</li> <li>■ Command syntax</li> <li>■ A command's related mode</li> <li>■ Starting with JUNOS Release 7.1.0, a history of when a command, its keywords, and its variables were introduced or added</li> </ul> <p>Use with the JUNOS configuration guides.</p> |
| <i>JUNOS Command Reference Guide N to Z</i>         |   |
| <i>JUNOS Comprehensive Index</i>                    | Provides a complete index of the JUNOS software documentation set.  |
| <i>JUNOS Glossary</i>                               | Provides definitions for terms used in JUNOS technical documentation.   |
| <b>Release Notes</b>                                |   |



**Table 3: Juniper Networks E-series and JUNOS Release Technical Publications** *(continued)*

| Document                   | Description  |
|----------------------------|--|
| <i>JUNOS Release Notes</i> | <p>Provide the latest information about features, changes, known problems, resolved problems, and system maximum values. If the information in the <i>Release Notes</i> differs from the information found in the documentation set, follow the <i>Release Notes</i>.</p> <p>Release notes are included on the corresponding software CD and are available on the Web.</p> |

## Obtaining Documentation

To obtain the most current version of all Juniper Networks technical documentation, see the products documentation page on the Juniper Networks Web site at <http://www.juniper.net/>.

To order a documentation CD, which contains this guide, contact your sales representative.

Copies of the Management Information Bases (MIBs) available in a software release are included on the documentation CDs and at <http://www.juniper.net/>.

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net), or fill out the documentation feedback form at <http://www.juniper.net/techpubs/docbug/docbugreport.html>. If you are using e-mail, be sure to include the following information with your comments:

- Document name
- Document part number
- Page number
- Software release version (not required for *Network Operations Guides [NOGs]*)

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or JNASC support contract, or are covered under warranty, and need postsales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the JTAC User Guide located at <http://www.juniper.net/customers/support/downloads/710059.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.

- JTAC Hours of Operation —The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

### Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://www.juniper.net/alerts/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Manager: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool located at <https://tools.juniper.net/SerialNumberEntitlementSearch/>.

### Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Manager tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, visit us at <http://www.juniper.net/support/requesting-support.html>.

## **Part 1**

# **Product Overview**

- E120 and E320 Overview on page 3



## Chapter 1

# E120 and E320 Overview

This chapter provides introductory information about the E120 router and E320 router. It contains the following sections:

- System Description on page 3
- Chassis Overview on page 3
- E120 and E320 Modules on page 7
- Network Management Tools on page 12
- Redundancy Features on page 13

## System Description

---

E-series routers are modular, carrier-class networking devices that deliver performance, reliability, and service differentiation to both enterprise and residential Internet users. The E120 router and E320 router are next-generation, high-capacity additions to the E-series product family offering high-port density and high bandwidth in a fully redundant system, supporting evolving IP-based broadband services. The E120 router supports the same services as the E320 router, but with smaller capacity and scaling capabilities for smaller configurations.

The routers utilize the same JUNOS<sup>™</sup> software architecture and provide a single IP entry point into the service provider network with the same IP-based protocols and services that are available on existing E-series products. They address a wide range of edge applications, including subscriber management (including 802.11 hotspots), video on demand, Voice over IP (VoIP), Metro Ethernet, customer circuit aggregation, virtual private networks (VPNs), and wholesale services.

E-series routers offer the complete edge solution for IP-optimized carriers.

## Chassis Overview

---

Two models are available:

- E120 router
- E320 router

Both models use the same software and share a system architecture and common components:

- Switch route processors (SRPs)—Perform system management, routing table calculations maintenance, forwarding table computations, and other control plane functions
- Switch fabric modules (SFMs)—Create a distributed shared memory switching fabric
- Line modules (LMs)—Are frame processing and forwarding engines for IOAs
- Input/output adapter (IOA)—Provide the physical connection to the network via 10-Gigabit Ethernet, Ethernet, ATM, and Packet over SONET (PoS) interfaces
- Power modules—Distribute redundant power feeds through the system to all components

## **E320 Model**



A fully configured E320 router consists of 2 switch route processors (SRPs), 3 switch fabric modules (SFMs), 12 line modules, and up to 2 I/O adapters (IOAs) per line module. See Figure 1 on page 5 and Figure 2 on page 5.

An IOA shelf (bracket) can be installed on a slot-by-slot basis to create an upper IOA bay and lower IOA bay, enabling you to use up to two IOAs in the same slot. This architecture enables you to combine different IOA types in the same slot and to support oversubscribed configurations.



**NOTE:** The routers illustrated in this book might look different than your router due to configuration variations.

---

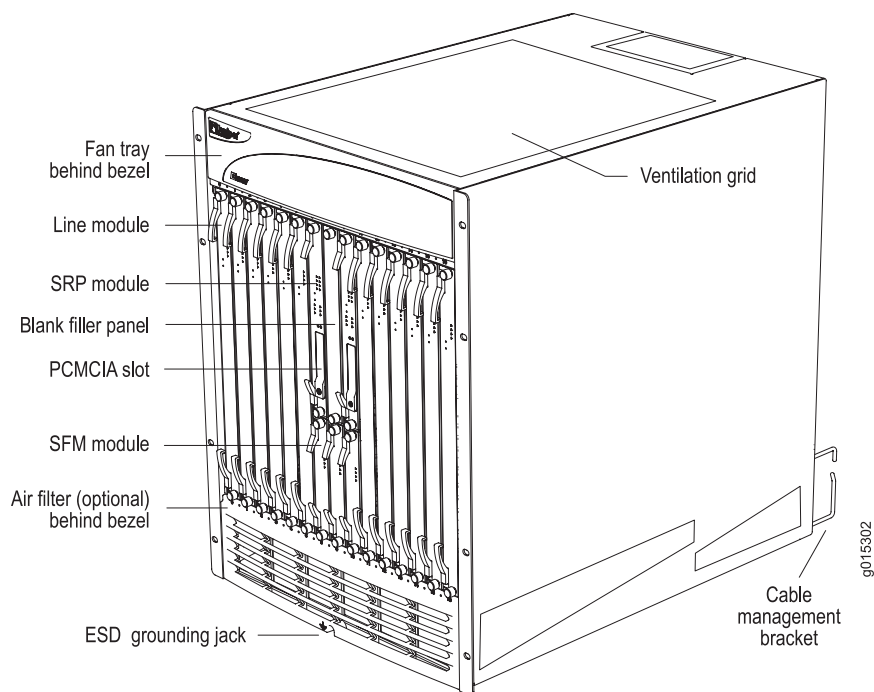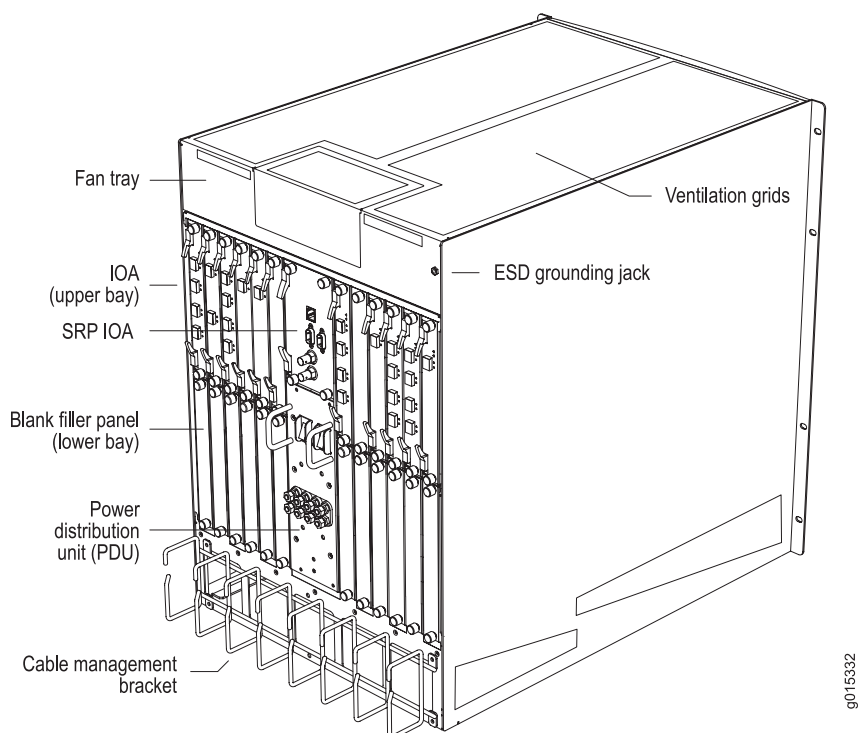**Figure 1: E320 Router, Front View****Figure 2: E320 Router, Rear View**

## E120 Model


A fully configured E120 router consists of 2 switch route processors (SRPs), 3 switch fabric modules (SFMs), 6 line modules, and up to 2 I/O adapters (IOAs) per line module. See Figure 3 on page 6 and Figure 4 on page 7.

An IOA shelf (bracket) can be installed on a slot-by-slot basis to create a left and right IOA bay, enabling you to use up to two IOAs in the same slot. This architecture enables you to combine different IOA types in the same slot and to support oversubscribed configurations. Air is pulled in from the right of the router by the fan tray and is exhausted out the left side.




**NOTE:** The routers illustrated in this book might look different than your router due to configuration variations.

**Figure 3: E120 Router, Front View**

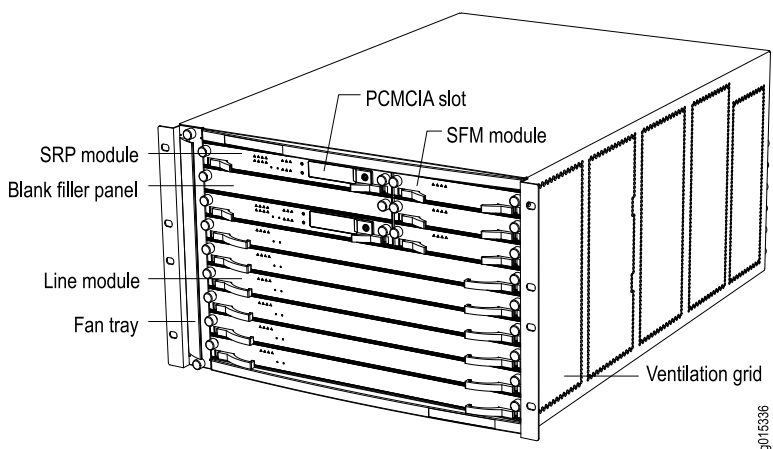

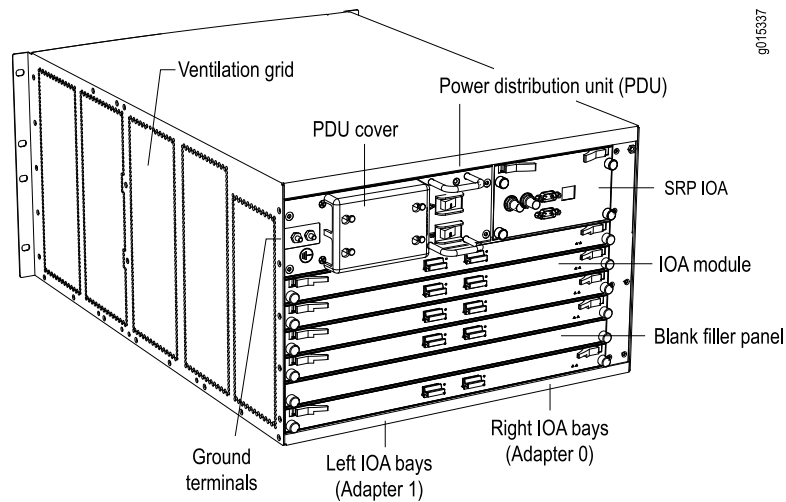

**Figure 4: E120 Router, Rear View**

## E120 and E320 Modules

The routers support SRP modules, SFM modules, line modules, and IOAs. You can use a line module for *access* or *uplink*. Access line modules receive traffic from low-speed circuits, and the system routes the traffic onto higher-speed uplink line modules and then to the core of the network. Line modules act as frame forwarding engines for the physical interfaces (the IOAs) via a passive midplane.

Most line modules, IOAs, SFMs, and SRP modules can be installed in either router. There are a few exceptions, however:

- Similar-capacity modules must be used in the same router. For example, you cannot install an SRP-100 in a router that contains an SFM-320. You can only use a SRP-100 module with a SFM-100 module.
- Higher-capacity SRP modules can be used in lower-capacity routers, but lower-capacity SRP modules cannot be used in high-capacity routers. For example, an SRP-320 can be used in an E120 router, but an SRP-120 cannot be used in an E320 router.
- The SRP-100 module and the SFM-100 module are not supported in the E120 router.

See the *E120 and E320 Module Guide* for module and chassis compatibility.

The front panel of each module contains a collection of status LEDs (light-emitting diodes). For information about how to interpret the LEDs, see “Troubleshooting” on page 77. For complete module specifications, see the *E120 and E320 Module Guide*.

### SRP Module

Switch route processor (SRP) modules perform system management, routing table calculations and maintenance, forwarding table computations, statistics processing,


configuration storage, and other control plane functions. The SRP module identifies which line modules are physically present in the chassis and monitors and controls vital functions on the line modules.

Each SRP module (Figure 5 on page 8) is a PowerPC-based system with its own memory, nonvolatile storage (NVS), and power converter. The SRP module works with the SFM modules and contains a switch fabric *slice* common to both modules. See “Fabric Slices” on page 10 for more information.



**NOTE:** Because of different physical dimensions and switch fabric capabilities, SRP modules are not interchangeable between all routers. For example, the SRP-100 used in the E320 router cannot be used in other E-series routers, and vice versa. See the *E120 and E320 Module Guide* for SRP module compatibility.

**Figure 5: Representative SRP Module**

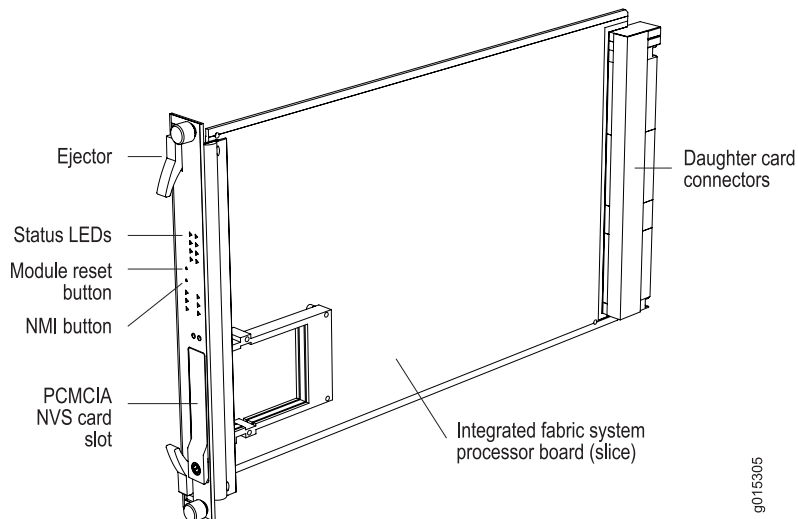

### Module Details

An SRP module must be present for the router to boot. The routers support up to two redundant SRP modules operating in an active/standby configuration. The redundant SRP module takes control when a failover occurs. See “Redundancy Features” on page 13 and the *E120 and E320 Module Guide* for more SRP module information.



**CAUTION:** Do not remove the SRP module while the system is running, unless you have properly issued the **halt** command. See *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules* for information about the **halt** commands.



**NOTE:** You cannot use SRP modules of different capacities in the same configuration. For example, you cannot install a SRP-100 module and a SRP-320 module in the same router.

For details about installing SRP modules, see “Installing Modules” on page 25.

### Nonvolatile Storage

Depending on the model, each SRP module has either two Type II PCMCIA nonvolatile storage (NVS) cards or two ATA flash cards (0, 1). (See Figure 5 on page 8.) One card is loaded with the system's software and configuration files while the other card holds core dumps. The NVS cards in the active SRP module are designated disk0 and disk1. The NVS cards in the redundant SRP module are designated standby-disk0 and standby-disk1. The PCMCIA card is factory installed.



**CAUTION:** Before you insert or remove flash cards from a running router, we strongly recommend that you halt the SRP module or shut down the router. Failure to do this can result in file corruption in one or both cards. See “Replacing an NVS Card” on page 70 for more information.


### SFM Module

The switch fabric modules (SFMs) work with the SRP module to create a shared memory fabric for the router. Each SFM module (Figure 6 on page 9) has its own memory and power converter. Like the SRP module, the SFM module contains a fabric system processor board (slice). See “Fabric Slices” on page 10.



**NOTE:** You must use a SRP module that corresponds with the fabric type (SFM module) that is installed. For example, you can only use a SRP-100 module with a SFM-100 module. You cannot use a SRP-100 module with a SFM-320 module.

**Figure 6: SFM Module**

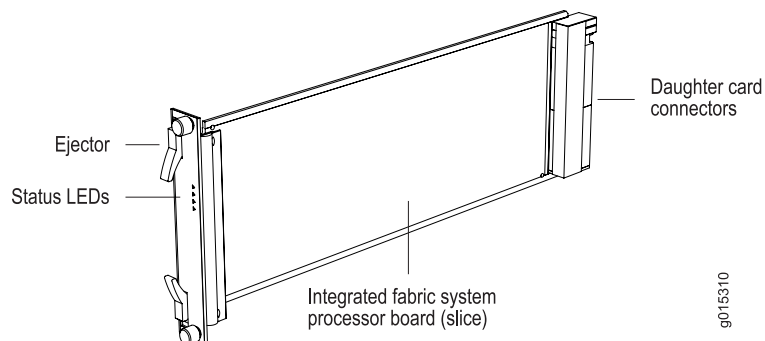

## Fabric Slices

The router's switch fabric is distributed across two SRP modules and three SFM modules. Each module has a fabric *slice* on it. For the router to operate, at least four of the five slices must be operational.

When all five modules are installed, the second SRP module acts as a redundant module. For example, the router can operate with:

- Two SRP modules (the second of which is redundant) and three SFM modules
- One SRP module (non-redundant) and three SFM modules



**NOTE:** You cannot use SFM modules of different capacities in the same configuration. For example, you cannot install a SFM-100 module and a SFM-320 module in the same router.

---

## SRP IOA

The SRP I/O adapter (IOA) is a single input/output adapter that interfaces with the SRP modules through the system's midplane. See Figure 2 on page 5 and Figure 4 on page 7 for its location.

### Module Details

The SRP IOA provides standard management interfaces, including:

- 10/100Base-T—The port enables access to the router for Ethernet management functions through Telnet, Secure Shell Server (SSH), command-line interface (CLI), or Simple Network Management Protocol (SNMP), for example.
- RS-232—One port (console) provides a serial connection for monitoring the system's hardware configuration through a PC (running terminal emulation software) or ASCII terminal and enables direct CLI access. The second port (auxiliary) provides access to debug ports on specific processors (SRP module, line module). Juniper Networks customer support engineers use the auxiliary port. We recommend that users do not use the auxiliary port.
- External timing inputs—The BNC connectors provide a method of ensuring that the clock timing used by the router remains synchronized with the network's system clock.


For details about installing the SRP IOA, see “Installing Modules” on page 25.

## Line Modules

Line modules (LMs) act as frame forwarding engines for the physical interfaces (the IOAs) and process data from different types of network connections. For information about available line modules, and which SRP modules support specific line modules, see the *E120 and E320 Module Guide*.

Figure 7 on page 11 shows a representative line module. For details about installing line modules, see “Installing Modules” on page 25.

**Figure 7: Representative Line Module**

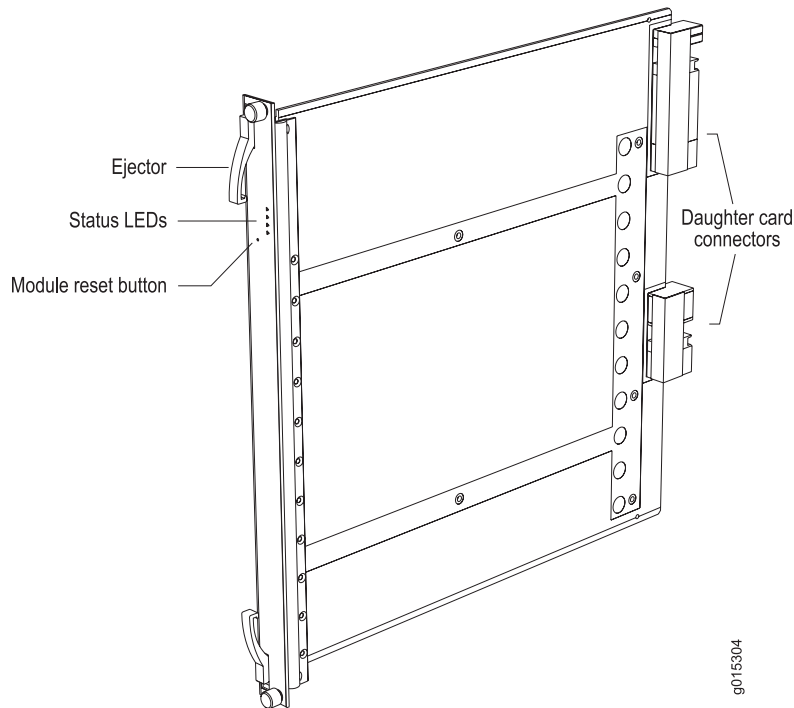


### Packet Classification

The line module supports packet classification on ingress. A classification engine on the line module matches specific fields (such as source and destination IP address, source and destination port, and protocol), the ingress IP interface, layer 2 fields, or some combination of these against user-configured filters at wire speed.

### I/O Adapters

Most input/output adapters (IOA) provide the physical interconnection to the network via small form-factor pluggable transceivers (SFPs). You insert each IOA into the passive midplane in the rear of the chassis, directly behind a line module. See Figure 2 on page 5 for IOA location in the router and Figure 8 on page 12 for a representative IOA model. See “Installing and Removing SFPs” on page 41 and the *E120 and E320 Module Guide* for information on SFPs.

For a list of hot-swappable IOAs, see Table 5 on page 30.

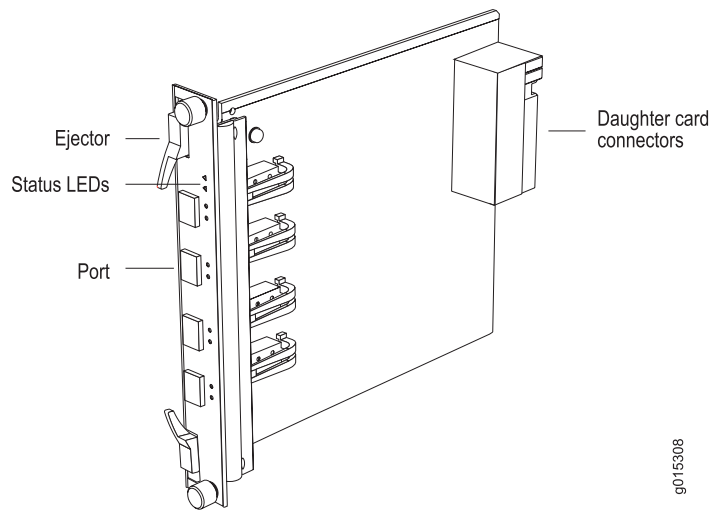**Figure 8: Representative IOA**

An IOA bracket can be installed to create upper and lower IOA bays (E320 router) or left and right IOA bays (E120 router), enabling you to use two IOAs in the same slot. This architecture enables you to combine different IOA types in the same slot and to support oversubscribed configurations.

Restrictions exist concerning which IOAs can be combined in the same slot and which bay (upper or lower, left or right) they may be installed in. See “IOA Slot Combinations” on page 30 and the *E120 and E320 Module Guide* for information. For details about installing IOAs, see “Installing Modules” on page 25.

## Network Management Tools

You can use different management tools to configure the system to meet the specific networking requirements.

### CLI Management

The command-line interface (CLI) provides fully developed and automated configuration and status functionality through a local RS-232 port, Telnet, or SSH over any reachable network. For a full discussion of the CLI, see *JUNOS System Basics Configuration Guide, Chapter 2, Command-Line Interface*.

### SNMP MIB Management

The system offers a complete SNMP interface for configuration, status, and alarm reporting. The system supports both Standard and Enterprise MIBs (Management Information Bases). The Juniper Networks E-series Enterprise MIB is ASN.1 notated for easy importing into third-party SNMP management applications. For more information, see *JUNOS System Basics Configuration Guide, Chapter 4, Configuring SNMP*.

## Redundancy Features

---

This section describes system redundancy features.

### SRP Modules

The router uses a 1:1 redundancy scheme for the SRP module. When two SRP modules are installed in the router, one acts as the primary (active) and the second as a redundant (standby) module. Both SRP modules share a single SRP IOA located in the rear of the chassis. After you install two SRP modules, the modules negotiate for the primary role. A number of factors determine which module becomes the primary; however, preference is given to the module in the lower-numbered slot. The SRP modules record their latest roles and retain them the next time you power up the system.

If the standby SRP module detects that the primary SRP module is not active (and high-availability mode is not enabled), it reboots the system and takes control. If high-availability mode has been enabled, automatic switchover occurs with near hitless failover. For information about configuring and managing SRP module redundancy, see *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules*.

### NVS Cards

Each SRP module has two NVS cards (0, 1). The NVS cards in the active SRP module are designated disk0 and disk1. The NVS cards in the redundant SRP module are designated standby-disk0 and standby-disk1. After you install new NVS cards or SRP modules, you must issue the **synchronize** command to match the file system of the NVS card on the redundant SRP module with the file system of the NVS card on the active SRP module. See “Replacing an NVS Card” on page 70 for more information.

### Power

The routers provide a power architecture that distributes redundant –48 VDC feeds through the router to each line module, IOA, SRP module, SFM module, and fan module where DC-to-DC converters provide local conversion to the required secondary voltages.

### Fans

The E320 router employs a bottom-to-top cooling system to keep the temperature of the modules and components within normal operating limits. Eight cooling fans are located in a tray at the top of the router. (See Figure 1 on page 5 and Figure 2 on page 5.) Air is pulled in from the front of the router at the bottom and is exhausted out the top.

The E120 router employs a right-to-left cooling system. Nine cooling fans are located in a tray at the left of the router. (See Figure 3 on page 6.) Air is pulled in from the right of the router and is exhausted out the left.

The system monitors the temperature of each module. If the temperature of a module exceeds the maximum limit, the system immediately goes into thermal protection mode and the LMs and SFM modules are powered off. The system controllers remain active and respond on all management interfaces. All other modules remain in a power-off condition. The failure of any two components (fan or converter), or the absence of the fan tray, causes the chassis to enter thermal protection mode to prevent hardware damage. For information about troubleshooting high operating temperatures, see “Troubleshooting” on page 77.

The E320 fan tray has two primary converters that power four fans each. If a primary converter fails, a third redundant converter takes over. The E120 fan tray has dual converters that load share for redundancy. If one converter fails, the other redundant converter takes over. The system software reports an alarm if any of the fans or converters fail.



## **Part 2**

# **Initial Installation**

- Unpacking and Inspecting the Router on page 17
- Installing the Router on page 21
- Installing Modules on page 25
- Cabling the Router on page 45
- Powering Up the Router on page 55
- Accessing E-series Routers on page 59



## Chapter 2

# Unpacking and Inspecting the Router

This chapter reviews shipping contents and unpacking procedures for the router. It contains the following sections:

- Before You Begin on page 17
- Unpacking the Router on page 17
- Inspecting Router Components and Accessories on page 18
- If You Detect or Suspect Damage on page 19
- Contacting Juniper Networks on page 19
- The Next Step on page 19

### Before You Begin

---

Before you begin unpacking the router, be sure you have the following tools:

- A No. 2 Phillips screwdriver
- A utility knife
- A mechanical lift, or at least two people to assist in lifting

### Unpacking the Router

---

The router is delivered boxed, bolted, and strapped to a skid. For your convenience, we recommend that you unpack the router in the location where you want to install it.




**WARNING:** Three people are required to install the router in a rack: two to lift the system into position and one to screw it to the rack.

---

To unpack the router:

1. Cut the two straps that secure the carton to the skid, open the carton from the top, and remove the box of accessories that sits on top of the router.
2. Unlock the four plastic clips that hold the box to the skid by squeezing them in their center and pulling out, and then lift the carton off the router.
3. Remove the three screws that attach each of the two L-brackets to the router.
4. To avoid scratching the router when removing it from the skid, detach one of the L-brackets from the skid by removing the three screws. See Figure 9 on page 18.

**Figure 9: Removing an L-bracket**

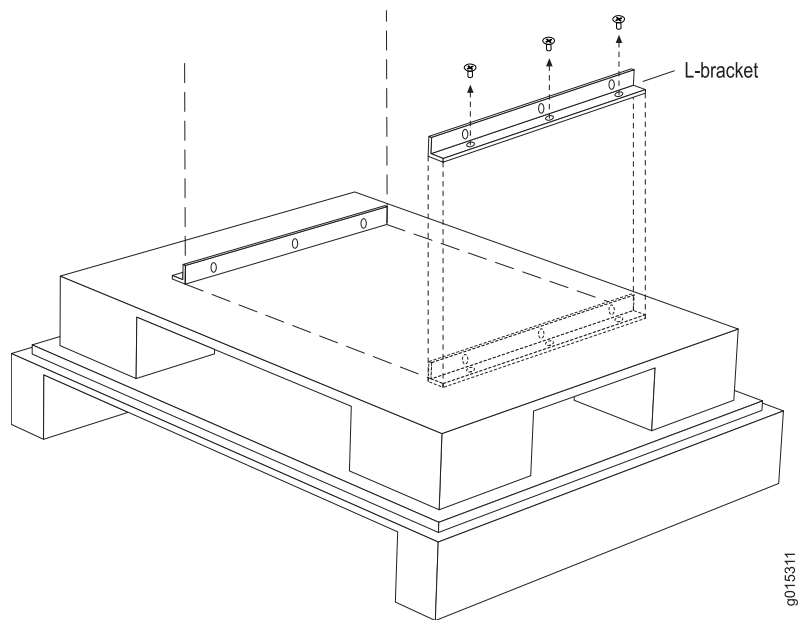

## Inspecting Router Components and Accessories

After you remove the equipment from the shipping containers:

- Confirm the contents of each container.
- Inspect all external surfaces and external connectors for visible signs of damage.
- Inspect all accessories shipped with each unit.
- Document any damage noted during your inspection.
- Confirm that the router has the correct number and type of modules for your ordered configuration.

## If You Detect or Suspect Damage

---

If you detect or suspect damage to any equipment:

- Contact the shipper responsible for delivery, and formally report the damage.
- Contact your Juniper Networks sales representative or reseller.

## Contacting Juniper Networks

---

Please contact Juniper Networks at 1-888-314-JTAC (from the United States, Canada, or Mexico) or 1-408-745-9500 (from elsewhere), or contact your sales representative if you have any questions or concerns. See “Contacting Customer Support and Returning Hardware” on page 109 for complete contact information.

## The Next Step

---

- To familiarize yourself with the electrical, environmental, and other guidelines and requirements for installing the router, see “Installation Guidelines and Requirements” on page 93.
- If you are familiar with these guidelines and requirements, see “Installing the Router” on page 21.



## Chapter 3

# Installing the Router

This chapter describes how to install the router. It contains the following sections:

- Before You Begin on page 21
- Freestanding Installation on page 21
- Rack-Mounted Installation on page 23
- The Next Step on page 24

### Before You Begin

---

Before installing the router, be sure you:

- Have a plan for installing the router that takes into consideration future expansion of your system.
- Have the tools and accessories needed to complete the installation.
- Read and understand the clearance requirements for the front and back of the chassis for cable routing and other unit access. See “Environmental Requirements” on page 93 for more information.
- Read and understand the clearance requirements for the top and bottom of the chassis to ensure adequate ventilation.
- Prepare the equipment racks by measuring and marking space for each router and plenum you plan to install.

### Freestanding Installation

---

When installing the system on a table top or in any other freestanding mode, be sure to leave enough space around the system for adequate ventilation. Position the router with easy access to the connections that it needs for power, local communications, and remote communications.

See “Installation Guidelines and Requirements” on page 93, and “System Specifications” on page 89, for more information.



**WARNING:** Two people are required to lift the router.


---




**CAUTION:** To prevent electrostatic damage to the system and its components, make sure persons handling the router wear an antistatic device.

Connectors are located on the IOAs, SRP IOA, and the power distribution unit (PDU). These modules are installed from the rear of the router (Figure 10 on page 22 and Figure 11 on page 23). See “Cabling the Router” on page 45 for cabling installation procedures.

**Figure 10: E320 Router, Rear View**

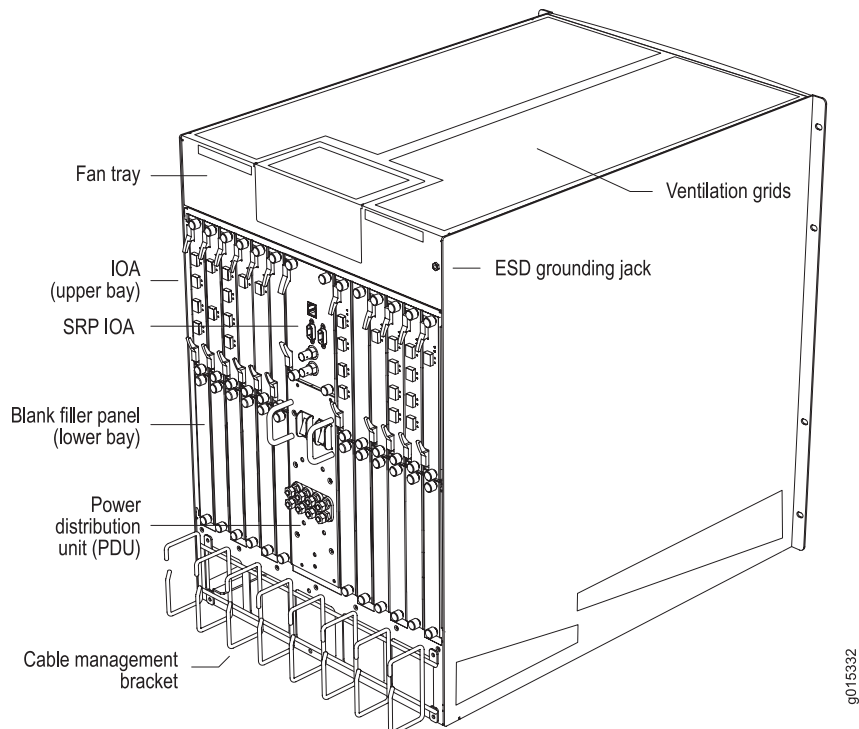

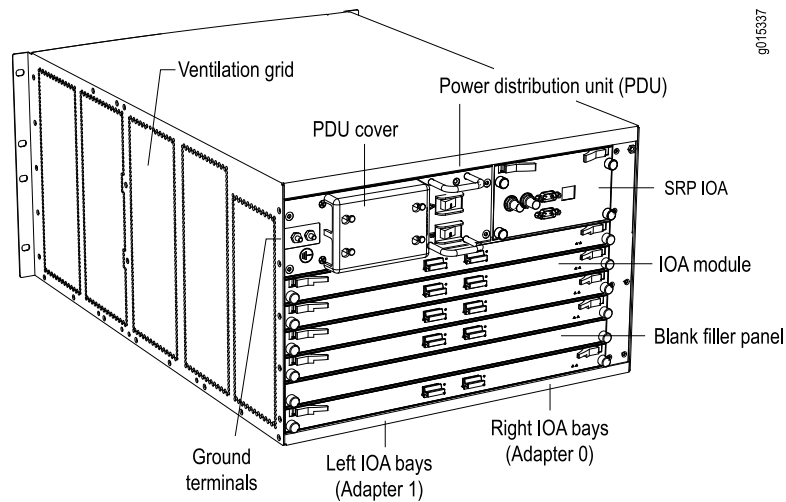

**Figure 11: E120 Router, Rear View**

## Rack-Mounted Installation

We recommend that you use a standard EIA distribution rack. See “Equipment Rack Requirements” on page 95 for rack information.

### Installation Guidelines

Before installing the systems in a rack, consider the following guidelines:

- You can install up to three E320 routers or six E120 routers in a single 7-ft. (2.1-m) rack. Installing multiple systems in a single rack enables you to maximize your available space.



**CAUTION:** To maintain airflow requirements, a plenum must be installed above the E320 router before any piece of equipment (other than an E320 router) is installed above the router. This plenum is available from Juniper Networks. Plenums are not required when E320 routers are installed above one another because the router has a built-in plenum at the bottom. See “Installation Guidelines and Requirements” on page 93 and Figure 34 on page 97.

- Install heavier systems, such as an E320 router, on the bottom of the rack. Mount lighter systems higher in the rack.



**NOTE:** An optional mounting kit is available for mid-chassis mounting. Contact your Juniper Networks sales representative for more information.

## Preparing the Equipment Racks

Following your installation plan, use a tape measure and marking pen to measure and mark space on each equipment rack for each router component. For horizontal spacing follow Network Equipment Building System (NEBS) requirements. To maintain airflow requirements, a plenum must be installed above the E320 router before any piece of equipment (other than an E320 router) is installed above the router. If you choose not to install a plenum, be sure to include 2 U of space between the E320 router and the other component for proper exhaust. A plenum, however, is highly recommended.

## Installing the Router

To complete the installation of the router in a rack, you need:

- A Phillips screwdriver
- Eight 10-32 x 3/8 Phillips screws (provided with the router) for each router to be installed



**WARNING:** Do not use the cable management bracket as a handle to lift the E320 router.

---

To install the router in the rack:

1. With one person standing on the left side of the router and another standing on the right side, lift the router into the rack.
2. Position the router in its designated location in the equipment rack. Make sure the holes of the mounting brackets align evenly with the holes of the equipment rack on both sides.
3. Starting at the bottom of the router, have the third person secure the router in the equipment rack by using the 10-32 x 3/8 Phillips screws.
4. Connect the necessary cables. (See “Cabling the Router” on page 45 for instructions on installing the cables.)

## The Next Step

---

After you finish installing the router:

- If you need to install any modules, see “Installing Modules” on page 25.
- If the router was delivered with the modules already installed, see “Cabling the Router” on page 45, for instructions on connecting cables.

## Chapter 4

# Installing Modules

This chapter describes how to install and remove modules. For information about managing installed modules, see *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules*.

This chapter contains the following sections:

- Overview on page 25
- Safety Guidelines on page 36
- Installing an SRP Module or SFM Module on page 36
- Installing an IOA Shelf on page 38
- Installing a Line Module or an IOA on page 39
- Removing Modules and IOAs on page 40
- Installing and Removing SFPs on page 41
- The Next Step on page 44


## Overview


---

Slots for line modules, switch route processor (SRP) modules, and switch fabric module (SFM) modules are located in the front of the router, while slots for input/output adapters (IOAs) and SRP IOAs are located in the rear.


- In the E320 router, modules mount vertically in a 15-slot chassis, numbered left to right (0–16). See Figure 12 on page 26 and Figure 13 on page 27 for front and rear views of the router.


Figure 12: E320 Router, Front View

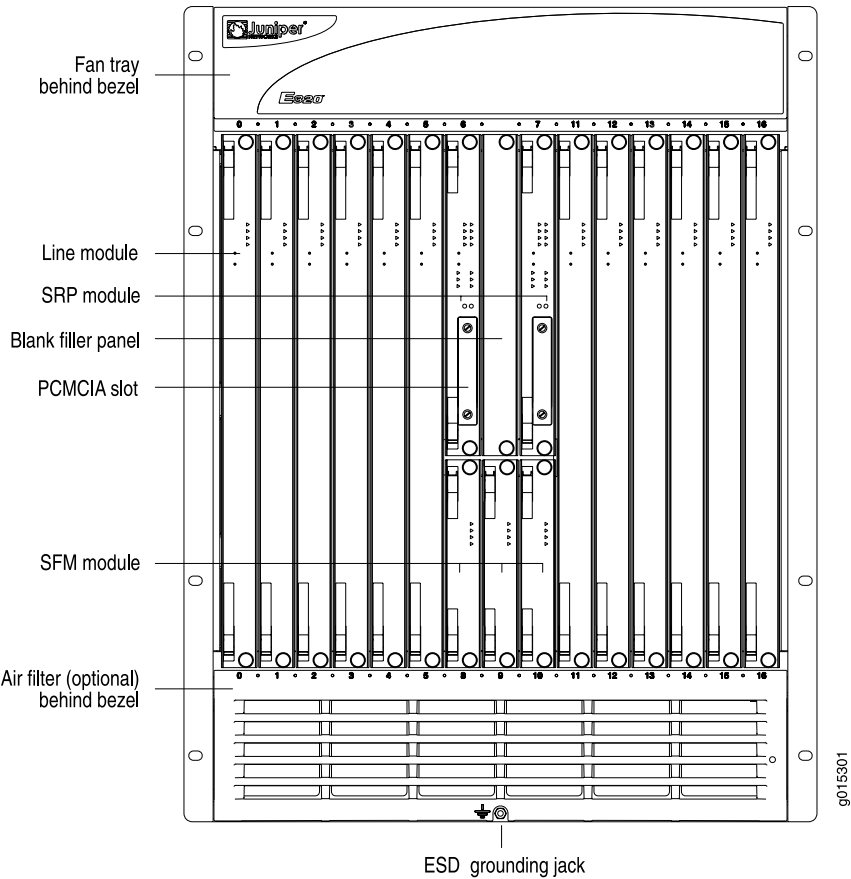

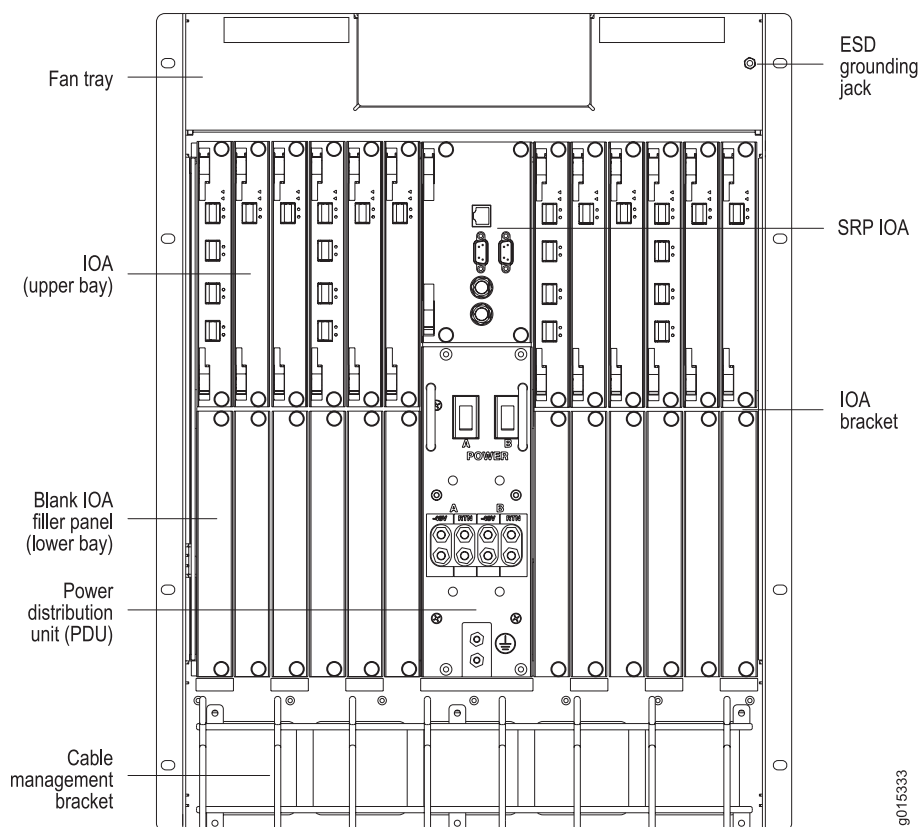**Figure 13: E320 Router, Rear View**

- In the E120 router, modules mount horizontally in a 9-slot chassis, numbered bottom to top (0–10). See Figure 14 on page 27 and Figure 15 on page 28 for front and rear views of the router.

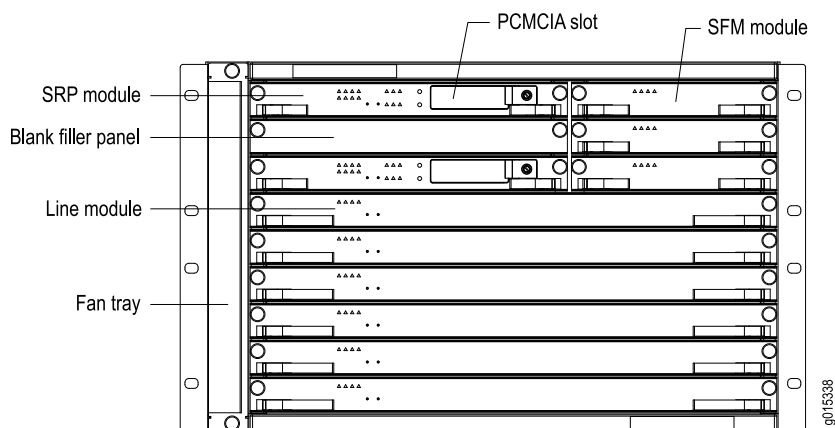**Figure 14: E120 Router, Front View**

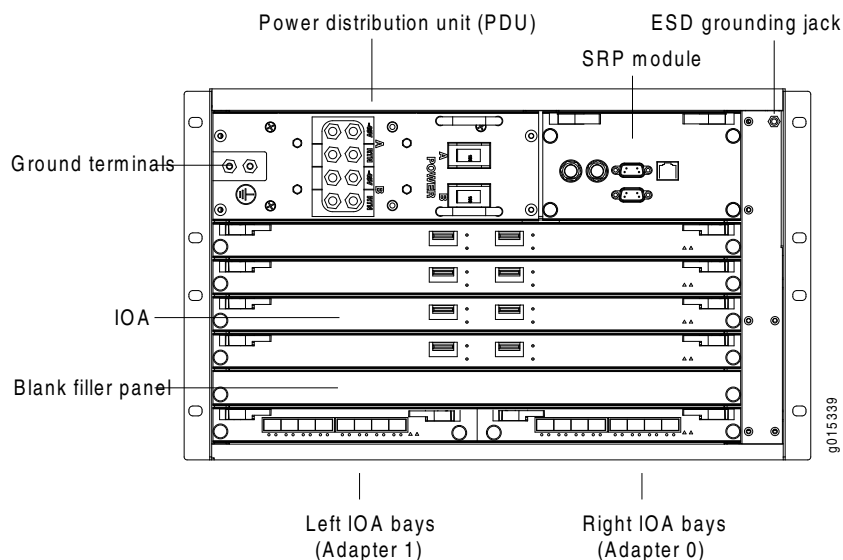**Figure 15: E120 Router, Rear View**


For details about available line modules, IOAs, and compatibility between line modules and SRP modules, see the *E120 and E320 Module Guide*.

## Slot Numbering

Slot numbering for the routers is similar.

- In the E320 router, modules mount vertically in a 15-slot chassis, numbered left to right (0–16). See Figure 16 on page 29 and Table 4 on page 29 for slot locations. Because two half-height IOAs can be installed in a slot, the upper bay is designated *Adapter 0* and the lower bay is designated *Adapter 1*. The router does not have slot groups.

Figure 16: E320 Slot Numbering

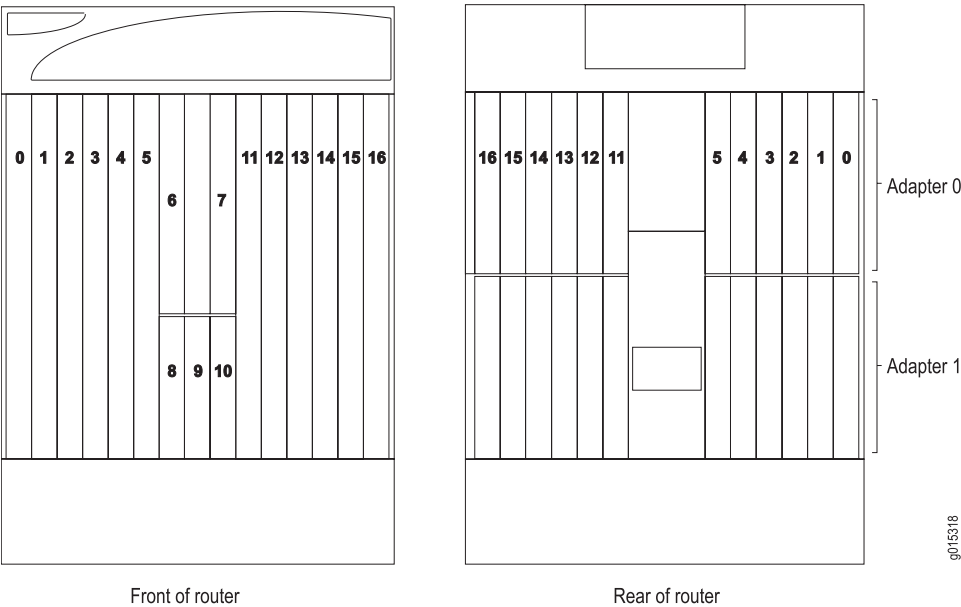

- In the E120 router, modules mount horizontally in a 9-slot chassis, numbered bottom to top (0–10). See Figure 17 on page 29 and Table 4 on page 29 for slot locations. Because two half-height IOAs can be installed in a slot, the right bay is designated *Adapter 0* and the left bay is designated *Adapter 1*. The router does not have slot groups.

Figure 17: E120 Slot Numbering

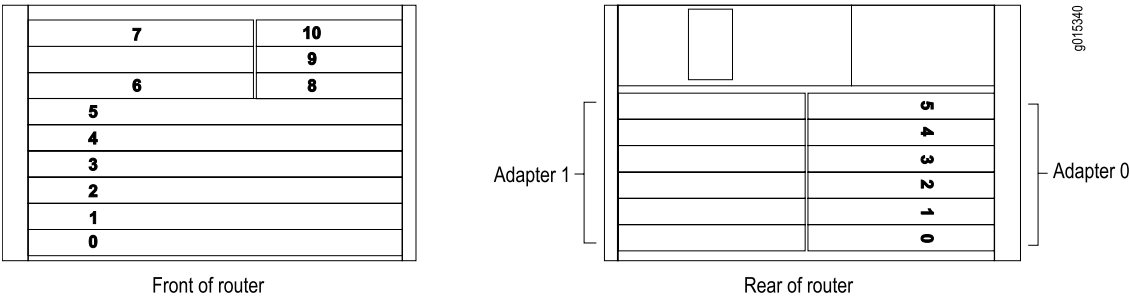


Table 4: Module Slot Locations

| Component          | Chassis Location | Slot  |
|--------------------|------------------|---|
| LM (line module)   | Front            | ■ E320 router—0–5, 11–16<br>■ E120 router—0–5 |
| SRP module         | Front            | 6, 7  |
| Blank filler panel | Front            | Non-numbered empty slot between 6 and 7       |

**Table 4: Module Slot Locations** *(continued)*

| Component  | Chassis Location | Slot   |
|------------|------------------|--|
| SFM module | Front            | 8, 9, 10   |
| IOA        | Rear             | <ul style="list-style-type: none"> <li>■ E320 router—0–5, 11–16               <ul style="list-style-type: none"> <li>■ Upper bay: Adapter 0</li> <li>■ Lower bay: Adapter 1</li> </ul> </li> <li>E120 router—0–5               <ul style="list-style-type: none"> <li>■ Right bay: Adapter 0</li> <li>■ Left bay: Adapter 1</li> </ul> </li> </ul> |

## IOA Slot Combinations

Depending on the software release and IOA type, you must install IOAs in certain slots and bays combined with other IOAs in the same slot:

- You must insert some IOAs only in the upper bay or right bay (Adapter 0) of each IOA module slot. If you insert one of these IOAs into a lower bay or left bay (Adapter 1) slot, the line module diagnostics fail, an error message states that the bottom slot is not supported for the currently installed software release, and the slot is disabled.
- If you insert an unrecognized IOA, such as an IOA that is not supported by a particular software release, the line module diagnostics fail, an error is generated, and the slot is disabled.
- If you remove an IOA and replace it with a different IOA in the same slot, an error message states the mismatch and the slot is disabled.
- Full-height IOAs take up the entire slot (both Adapter 0 and Adapter 1).

For information about working with modules and IOAs, see *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules*. See Table 5 on page 30 for currently available IOAs and the bays in which you may insert them.

**Table 5: IOA Locations and Combinations**

| IOA         | Upper/Right Bay (Adapter 0) | Lower/Left Bay (Adapter 1) | Both Bays Concurrently | Combined with Other IOAs in Same Slot | Hot-Swapping Support |
|-------------|-----------------------------|----------------------------|------------------------|---------------------------------------|----------------------|
| ES2-S1 GE-4 | Yes                         | Yes                        | No                     | No                                    | Yes                  |



**Table 5: IOA Locations and Combinations** *(continued)*

| IOA                    | Upper/Right Bay<br>(Adapter 0)                | Lower/Left Bay<br>(Adapter 1) | Both Bays<br>Concurrently | Combined with<br>Other IOAs in<br>Same Slot  | Hot-Swapping<br>Support |
|------------------------|---|-------------------------------|---------------------------|--|-------------------------|
| ES2-S1 GE-8            | Yes   | Yes                           | Yes                       | Yes (GE-8 when paired with ES2 4G LM or ES2 10G LM; GE-8, OC3/STM1, and OC12/STM4 IOAs when paired with ES2 4G LM) | Yes                     |
| ES2-S3 GE-20           | Yes<br>(Full-height IOA)                      | Not applicable                | Not applicable            | Not applicable   | No                      |
| ES2-S1 10GE            | Yes<br>(Full-height IOA)                      | Not applicable                | Not applicable            | Not applicable   | No                      |
| ES2-S2 10GE PR         | Yes<br>(Full-height IOA)                      | Not applicable                | Not applicable            | Not applicable   | No                      |
| ES2-S1 OC3-8 STM1 ATM  | Yes   | Yes                           | Yes                       | Yes (GE-8, OC3/STM1, and OC12/STM4 IOAs only)  | Yes                     |
| ES2-S1 OC12-2 STM4 ATM | Yes   | Yes                           | Yes                       | Yes (GE-8, OC3/STM1, and OC12/STM4 IOAs only)  | Yes                     |
| ES2-S1 OC12-2 STM4 POS | Yes   | Yes                           | Yes                       | Yes (GE-8, OC3/STM1, and OC12/STM4 IOAs only)  | Yes                     |
| ES2-S1 OC48 STM16 POS  | Yes   | Yes                           | No                        | No   | Yes                     |
| ES2-S1 SERVICE         | Yes<br>(Full-height IOA)                      | Not applicable                | Not applicable            | Not applicable   | No                      |
| ES2-S1 REDUND          | Yes<br>(Full-height IOA; slots 0 and 11 only) | Not applicable                | Not applicable            | Not applicable   | No                      |

## Module Combinations

Line modules can only be paired with specific IOA, SFM, and SRP modules. See Table 6 on page 32 for valid combinations.

**Table 6: Module Combinations**

| Modules   | ES2 4G LM | ES2 10G UPLINK LM | ES2 10G LM |
|---|-----------|-------------------|------------|
| <b>SRP Modules</b>                                |           |                   |            |
| SRP-100   | √         | √                 | √          |
| This module is only supported in the E320 router. |           |                   |            |
| SRP-120   | √         | √                 | √          |
| This module is only supported in the E120 router. |           |                   |            |
| SRP-320   | √         | √                 | √          |
| <b>SFM Modules</b>                                |           |                   |            |
| SFM-100   | √         | √                 | √          |
| This module is only supported in the E320 router. |           |                   |            |
| SFM-120   | √         | √                 | √          |
| This module is only supported in the E120 router. |           |                   |            |
| SFM-320   | √         | √                 | √          |
| <b>IOA Modules</b>                                |           |                   |            |
| ES2-S1 GE-4                                       | √         | –                 | –          |
| ES2-S1 GE-8                                       | √         | –                 | √          |
| ES2-S3 GE-20                                      | –         | –                 | √          |
| ES2-S1 10GE                                       | √         | –                 | –          |
| ES2-S2 10GE PR                                    | –         | √                 | √          |
| ES2-S1 OC3-8 STM1 ATM                             | √         | –                 | –          |
| ES2-S1 OC12-2 STM4 ATM                            | √         | –                 | –          |
| ES2-S1 OC12-2 STM4 POS                            | √         | –                 | –          |
| ES2-S1 OC48 STM16 POS                             | √         | –                 | –          |
| ES2-S1 REDUND                                     | √         | √                 | √          |

**Table 6: Module Combinations** *(continued)*

| Modules        | ES2 4G LM | ES2 10G UPLINK LM | ES2 10G LM |
|----------------|-----------|-------------------|------------|
| ES2-S1 SERVICE | √         | –                 | –          |

## IOAs Requiring SFPs

Small form-factor pluggable transceivers (SFPs) are used on most IOAs. A range of SFPs that support different optical modes (multimode and single mode) and cabling distances are available. You can replace SFPs without disabling the interface or removing the module from the system. See “Installing and Removing SFPs” on page 41 for more information and the *E120 and E320 Module Guide* for IOAs that use SFPs.



**NOTE:** Because SFPs are the same shape and size, you are able to insert an SFP that is not compatible with the IOA. Be sure the SFP you are installing is appropriate for the interface you are plugging it into. If you insert the wrong SFP, software diagnostics detect the error.


## Proper Handling of ES2 4G LMs

Use extra caution when handling an ES2 4G LM so that you do not damage module components or dislodge the heat sinks.



**NOTE:** When lifting, carrying, or holding the module, do not grasp it near the six heat sinks along the top and bottom edge of the module. Instead, hold the module along the faceplate and the edges, keeping your fingers and thumbs away from all components.

Do not use either row of heat sinks as a handle when carrying the module. You might dislodge or damage them.

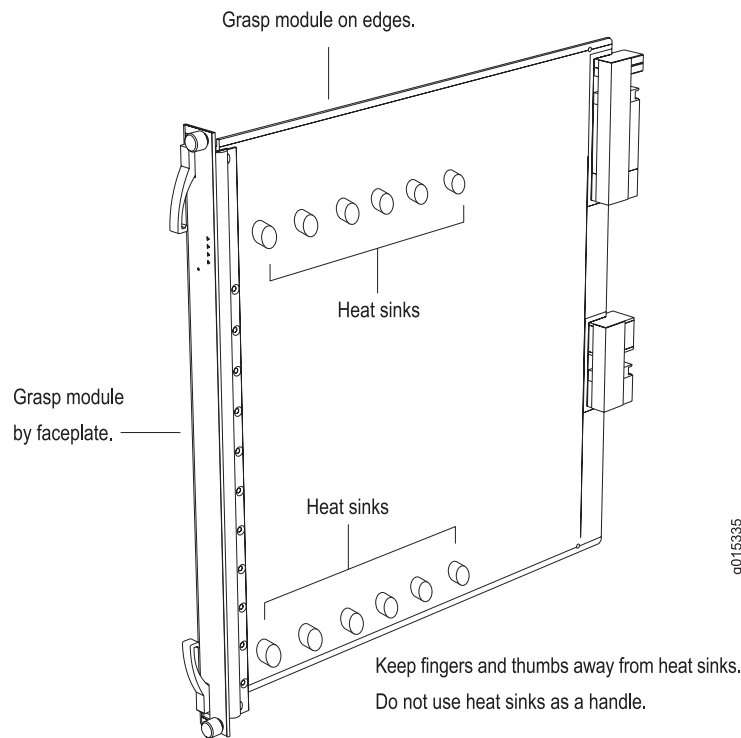**Figure 18: LM4 Heat Sink Locations**

## ES2 10G Uplink Line Modules

In a 100 Gbps fabric configuration, you must install the ES2 10G Uplink line module in slot 2 or slot 4 only.

- If you install the line module in a slot other than slot 2 or slot 4, it will be disabled.
- If you install the module next to a configured line module that is already installed in slot 3 or slot 5, the ES2 10G Uplink line module will be disabled.

Conversely, if you install a line module in slot 3 or slot 5 next to a previously installed ES2 10G Uplink module, the non-ES2 10G Uplink module will be disabled. For example, if you install an ES2 10G Uplink line module in both slot 2 and slot 4 in an E320 router, you can install the ES2 4G line module in the following locations: 0-1 and 6-11.

## Managing Modules Using the Software

For information about software procedures associated with replacing and managing modules and IOAs, see *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules*.

## Order of Installation

Before you attempt to install or replace a line module (inserted in the front of the chassis), make sure a compatible IOA (inserted in the rear of the chassis) is already

in place. The slot diagnostics run when a line module is installed in a chassis slot. If a compatible IOA module is not present, the diagnostics fail, and you need to remove and reinsert the line module.

## Hot-Swapping Modules

The router supports hot-swapping of line modules and IOAs. Hot-swapping enables you to add or remove a line module without powering down the system. IOAs that support hot-swapping enable you to add or remove an IOA without rebooting the line module. See Table 5 on page 30 for a list of hot-swappable IOAs.

## Protecting Modules and Slots

The E320 router has two ESD (electrostatic discharge) grounding jacks. The front jack is located below the air filter bezel in the center of the router. The rear jack is located in the upper-right corner of the chassis. The E120 router has one ESD grounding jack located in the upper-right corner of the chassis in the rear. To prevent damage from electrostatic discharge, wear an antistatic wrist strap and connect it to one of the jacks when handling components.

To protect the modules, IOAs, and slots when installing components, observe the following guidelines:



**CAUTION:** When handling components, use an antistatic wrist strap connected to one of the router's ESD grounding jacks. This action helps to protect the module from damage by electrostatic discharge.

---



**CAUTION:** Always handle a module by its edges. Do not touch the components, pins, leads, or solder connections.

---



**CAUTION:** If you meet strong resistance when attempting to seat a module using the ejectors, remove it from the chassis and confirm that the slot is designed to hold the module. Also, be sure that you have aligned the top and bottom edges in the correct matching card guides.

---



**CAUTION:** Be sure to cover every empty slot with a blank filler panel to protect the system from dust or other foreign substances and to ensure proper system cooling.

---



**CAUTION:** Do not discard the antistatic bag. When a module is not in use, store it in an antistatic bag.

---

## Required Tools and Safety Items

You need the following tools to install a line module:

- A Phillips screwdriver
- A flathead screwdriver
- An ESD wrist strap or other grounding device

## Safety Guidelines

---

Before and during the installation process, observe the following precautions:



**WARNING:** Do not work on the system or connect or disconnect cables during lightning activity.

---



**WARNING:** Be sure circuit breakers for the power source are in the OFF position before attaching power cables.

---



**WARNING:** Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. Metal objects heat up when connected to power and ground and can cause serious burns or become welded to the terminals.

---



**WARNING:** Do not insert any metal object, such as a screwdriver, into an open slot or the midplane. Doing so can cause electric shock and serious burns.

---



**WARNING:** Never attempt to repair parts of modules yourself. Only trained customer service personnel are authorized to service parts. Call Juniper Networks Customer Service to make arrangements to return defective modules for repair.

---

## Installing an SRP Module or SFM Module

---

You must install SRP modules in slot 6 or slot 7, and SFM modules in slots 8, 9, or 10. Four of the five fabric slots (SRP and SFM modules) must have a module installed for the router to function. A minimum system configuration requires all three SFMs and at least one SRP module to be installed. See “Fabric Slices” on page 10 for more information.

To install an SRP module or SFM module:

1. Ground yourself by using an antistatic wrist strap or other device and connect it to one of the ESD grounding jacks on the chassis.
2. Choose the slot in which you want to install the module.
  - SRP module – slot 6 or 7
  - SFM module – slot 8, 9, or 10



See Figure 12 on page 26 and Figure 14 on page 27 for module locations.



**NOTE:** Four of the five fabric slots (SRP and SFM modules) must have a module installed for the router to function. A minimum system configuration requires all three SFMs and at least one SRP module to be installed.

3. With a Phillips screwdriver, loosen the captive screws that secure the blank filler panel covering the empty chassis slot, if present, and remove the filler panel.
4. Remove the module from its antistatic bag, being careful not to touch module components, pins, leads, or solder connections.
5. Verify that the ejectors are in the open position, as shown in Figure 19 on page 37.

**Figure 19: Closing Ejectors from the Open Position**

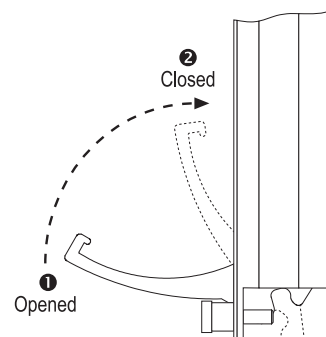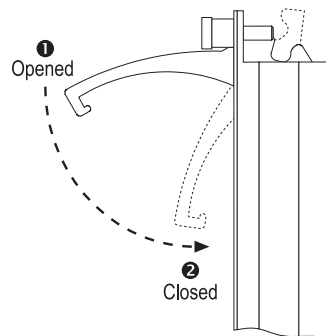

9015316

6. Slide the module into the chassis by placing it between the guides of the selected slot and pushing the module until it stops.

The module stops sliding when the ejectors make contact with the front of the chassis.



**CAUTION:** If you meet strong resistance when attempting to seat the module using the ejectors, remove it from the chassis and confirm that the slot is designed to hold the module. Also, be sure that you have aligned the top and bottom edges in the correct matching tracks.

7. Insert the module into the backplane by simultaneously depressing both ejectors (as shown in Figure 19 on page 37), exerting forward pressure on the module.
8. Tighten the module's captive screws using the Phillips screwdriver.




**NOTE:** Tighten the captive screws completely before installing an adjacent module so that proper EMI gasket compression occurs. Failure to do this can make it difficult to install adjacent modules.

---

## Installing an IOA Shelf

Use an IOA shelf (also called an IOA bracket) when installing half-height IOAs in the router. IOA shelves screw into the midplane between the upper/right bay (Adapter 0) and lower/left bay (Adapter 1). For example, in an E320 router, IOAs in the upper bay rest on the shelf, while IOAs in the lower bay use the guides on the bottom of the shelf to remain vertical. See Figure 20 on page 38.

**Figure 20: IOA Shelf**

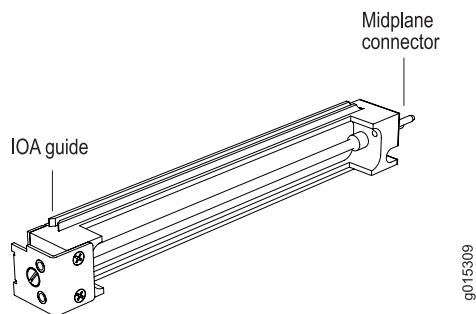

**CAUTION:** We recommend that you power down the router before removing or installing an IOA shelf between two slots that have modules installed in them already. Otherwise, you might short-circuit the installed modules if you accidentally touch the shelf to a module. An IOA shelf installation guide is available to ensure safe installation. Contact your account representative for more information.

---



To install an IOA shelf:

1. Ground yourself by using an antistatic wrist strap or other device and connect it to one of the ESD grounding jacks.
2. Remove the blank IOA filler panel from the slot.
3. Align the shelf's guide pins with the corresponding holes in the midplane and insert the threaded shaft into the hole in the midplane between the upper/right bay and lower/left bay. Be sure the threaded shaft is visible from the right side. (See Figure 20 on page 38.)
4. Using a flathead screwdriver, tighten the screw snugly to secure the shelf.

## Installing a Line Module or an IOA

---

This section describes the procedures for installing line modules and IOAs.



**NOTE:** Install the IOA module before you install the corresponding line module; otherwise, the diagnostics fail and the line module's status is listed as inactive when you issue the **show version** command. If this occurs, remove and reinsert the line module.

The router supports hot-swapping of line modules and IOAs. Hot-swapping enables you to add or remove a line module without powering down the system. IOAs that support hot-swapping enable you to add or remove an IOA without rebooting the line module. See Table 5 on page 30 for a list of hot-swappable IOAs.

To install a line module or IOA:

1. Ground yourself by using an antistatic wrist strap or other device and connect it to one of the ESD grounding jacks.
2. Choose the slot where you want to insert the line module or IOA.



**NOTE:** Line modules are in the front of the system and IOAs are in the back of the system. See Table 5 on page 30 for IOA slot locations and combinations.

3. With a Phillips screwdriver, loosen the screws that secure the blank filler panel covering the empty chassis slot, if present, and remove the filler panel.
4. Remove the line module or IOA from its antistatic bag, being careful not to touch module components, pins, leads, or solder connections.
5. Verify that the ejectors are in the open position, as shown in Figure 19 on page 37.
6. Guide the line module or IOA into the chassis by placing it between the guides of the selected slot and pushing the module until it stops.

The module or IOA stops sliding when the ejectors make contact with the chassis.



**CAUTION:** If you meet strong resistance when attempting to seat the line module or IOA using the ejectors, remove it from the chassis and confirm that the slot is designed to hold the component. Also, be sure that you have aligned the top and bottom edges in the correct matching tracks.

7. Insert the line module or IOA into the midplane by simultaneously depressing both ejectors (as shown in Figure 19 on page 37) and exerting forward pressure on the module.
8. Tighten the module's captive screws using a Phillips screwdriver.



**NOTE:** Tighten the captive screws completely before installing an adjacent module so that proper EMI gasket compression occurs. Failure to do this can make it difficult to install adjacent modules.

## Removing Modules and IOAs

This section describes the procedures for removing modules and IOAs. For a list of hot-swappable IOAs, see Table 5 on page 30.



**NOTE:** We recommend that you issue the **slot disable** command from the CLI before removing a line module or IOA.




**CAUTION:** If you do not use the **halt** command before removing or powering down an SRP module, the system's NVS card can become corrupted.

To remove a module or an IOA:

1. For SRP modules and SRP IOAs, issue the appropriate halt command (**halt**, **halt primary-srp**, or **halt standby-srp**).

See *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules* for information about the **halt** commands.

2. Ground yourself by using an antistatic wrist strap or other device and connect it to an ESD grounding jack.
3. Use a Philips screwdriver to loosen the captive screws located at the top and bottom of the module panel.
4. If the module has ejector handles, pull them to the open position, as shown in Figure 21 on page 41.

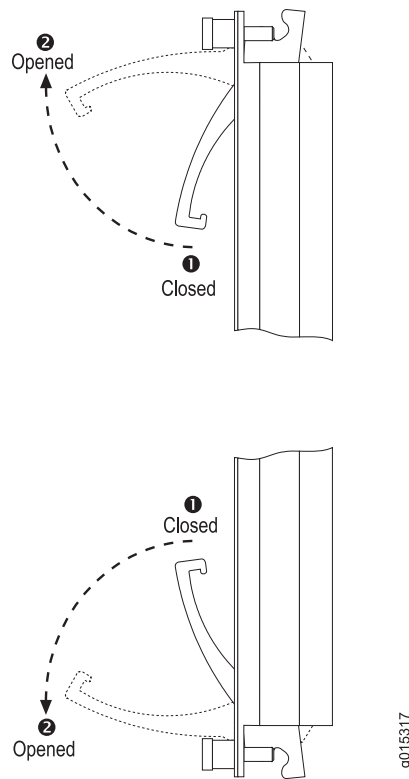**Figure 21: Opening Ejectors from the Closed Position**

5. Carefully slide the module out of the chassis.
6. Place the module in its antistatic bag, being careful not to touch module components, pins, leads or solder connections.
7. Cover the empty chassis slot with a blank filler panel, and tighten the filler panel's captive screws using a Phillips screwdriver. Turn both screws several times before tightening them completely.

If you remove an IOA and not the corresponding line module, the line module reboots. Its status becomes inactive when you issue the **show version** command.

If you remove a line module and do not delete the corresponding configuration, the status of the line module is listed as not present when you issue the **show version** command.

## Installing and Removing SFPs


This section describes how to replace small form-factor pluggable transceivers (SFPs) on IOAs that support these devices. A range of SFPs that support different optical modes (multimode, single mode, and so forth) and cabling distances is available. You can replace the SFPs without disabling the interfaces or removing the module from the system.

## Installing SFPs

To install SFPs:

1. Ground yourself by using an antistatic wrist strap or other device and connect it to an ESD grounding jack.
2. Identify the following items on the SFP (Figure 22 on page 42):
  - The connection circuitry on the base
  - The cable connectors on the front (which are protected by a dust cover)


**Figure 22: Representative SFP**

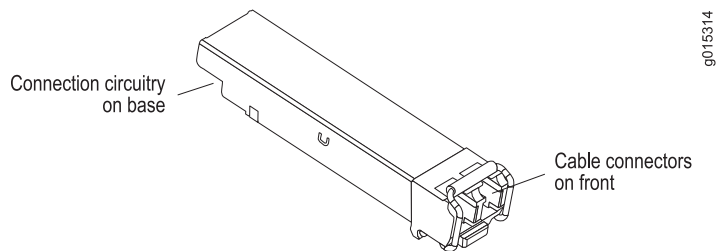

**CAUTION:** Be sure to position the SFP correctly before you install it.

3. Hold the SFP so that:
  - The connection circuitry is adjacent to the LK and ACT markings on the IOA's faceplate.
  - The cable connectors will be visible when you install the SFP.

For the correct orientation, see Figure 23 on page 43.

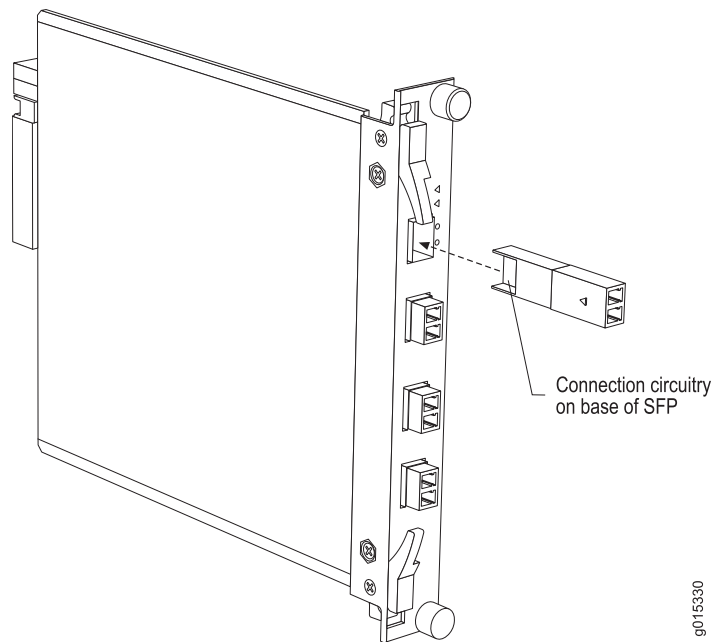**Figure 23: Installing an SFP on an IOA**

4. Slide the SFP as far as you can into the IOA until the SFP clicks into place.  
If the SFP does not slide smoothly into the IOA, make sure that the orientation of the SFP is correct.
5. Gently pull the SFP to confirm that it is inserted correctly.  
If the SFP comes out of the slot when you pull it, repeat Step 4.
6. Remove the dust cover that protects the cable connectors.
7. Connect the new cables to the SFP.

## Removing SFPs


To remove an SFP:

1. Obtain an antistatic container for the SFP you plan to remove. (See “Storing Modules and Components” on page 67.)
2. Ground yourself by using an antistatic wrist strap or other device and connect it to an ESD grounding jack.
3. Disconnect the cable from the SFP on the IOA.
4. Identify the release mechanism for the SFP.

Different SFPs use different release mechanisms. See Figure 24 on page 44 for possible release mechanisms, which include:

- A button that you press inward
- A ring that you press inward
- A bar that you pull sideways, then outward
- A tab that you pull sideways, then outward

**Figure 24: Possible Release Mechanisms on the SFP**

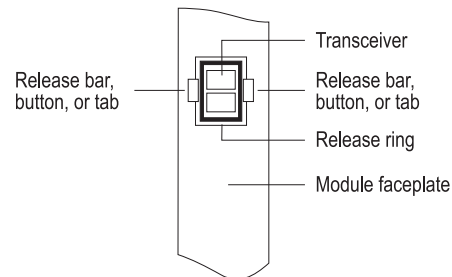

g015313

5. Release the SFP and pull it out of the slot.
6. Place the SFP in an antistatic bag.

When you have replaced the SFPs and connected the cables, issue the appropriate **show interface** command for each interface to verify that the interface is operational (up).

## The Next Step

---

After you install the modules, you can connect cables to the system. See “Cabling the Router” on page 45.

## Chapter 5

# Cabling the Router

This chapter describes how to cable the router. Before you cable the router, ensure that you have completed all installation instructions identified in previous chapters.

This chapter contains the following sections:


- Cabling Overview on page 45
- Required Tools, Wires, and Cables on page 46
- Cabling the SRP IOA on page 47
- Cabling IOAs on page 49
- Cabling the Router for Power on page 50
- The Next Step on page 53

### Cabling Overview

---

Cabling the router requires the following main tasks:

1. Familiarize yourself with the module ports, and ensure that you have the cables and wires needed to complete each cabling procedure. (See Figure 25 on page 46.)
2. Read and understand all safety warnings. (See “Installation Guidelines and Requirements” on page 93.)
3. *(Optional)* Connect timing ports.
4. Connect the SRP IOA to the network and to a management console.
5. Connect grounding wires to the router chassis.
6. Connect the power cables from the power source to the power distribution unit (PDU).
7. Connect the IOAs to their appropriate network interface.

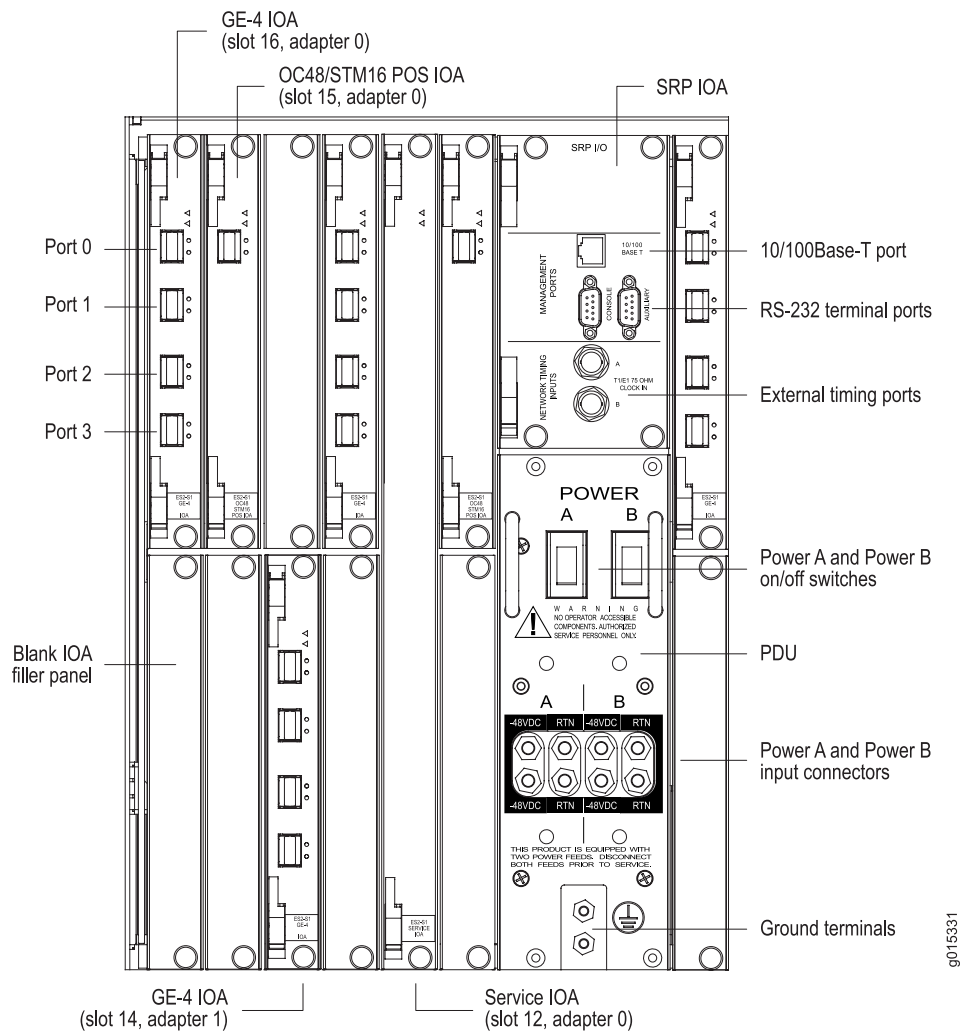**Figure 25: E320 Router Rear Ports and Connectors**

## Required Tools, Wires, and Cables

Cabling your system takes only a few minutes. You need the following items and those listed in Table 7 on page 47 for proper installation:

- 1/8-inch flathead screwdriver
- 3/8-inch wrench or 3/8-inch nut-driver
- No. 2 Phillips screwdriver
- Ground wires—We recommend a minimum of 6-AWG ground wire.
- Two #10 keps (supplied) to connect the ground (earth) wire to the ground terminal.
- PDU wiring—We recommend a minimum of 4-AWG wire for the router with a dual stud terminal lug with 5/8-inch spacing.



Consider the distance from the connection point and the configuration of the system when determining the size of wire used.

See “System Specifications” on page 89 for more information on router specifications.

**Table 7: Required Cables**

| Connection   | Port and Cable Used  |
|--|--|
| Management connection between SRP IOA and the LAN              | One 10/100Base-T Ethernet management port with an RJ-45 connector                |
| Management connection between SRP IOA and a management console | One RS-232 port with a DB-9 connector for VT100 management access                |
| Direct connections to IOAs                                     | See the <i>E120 and E320 Module Guide</i> for specific IOA connector information |

## Cabling the SRP IOA

Before powering up the router, you must set up a management console. The console enables you to communicate with your system during the power-up process and to manage your system using the command-line interface (CLI).

When connecting a console directly to the SRP IOA, use a cable appropriate for your terminal connector. The cable must have a female DB-9 connector to attach to the RS-232 port on the SRP IOA. See Figure 26 on page 48.

The console port is considered a data terminal equipment interface (DTE). Direct connection to a terminal or PC (which also have DTE interfaces) requires a crossover cable.

The router has network timing ports and management ports located on the SRP IOA. See Figure 26 on page 48 and Table 8 on page 47 for details on each component.

**Table 8: SRP IOA Ports**

| Port                 | Description   |
|----------------------|---|
| Network timing ports | <ul style="list-style-type: none"> <li>■ Two dual-purpose BNC connectors for BITS timing clock sources (E1 or T1)</li> <li>■ User-configurable through the CLI</li> <li>■ Primary (A) and secondary (B)</li> <li>■ 75-ohm E1 2.048-Mbps/T1 1.544-Mbps inputs terminating with a 120/75 ohm or 100/75 ohm balun</li> </ul> |
| Management ports     | <ul style="list-style-type: none"> <li>■ One 10/100Base-T Ethernet management port with an RJ-45 connector</li> <li>■ Two RS-232 ports with a DB-9 connector for direct CLI (Console) and debug (Auxiliary) access.<br/>The Auxiliary port is used to debug ports on a specific processor (SRP module, LM).</li> </ul>    |


## Network Timing Ports

The SRP IOA has two input ports for external network clock sources (75-ohm E1 2.048-Mbps/T1 1.544-Mbps inputs with BNC connectors). These ports provide a way to ensure that the router system clock remains synchronized with the network's system clock. The primary clock is labeled A; the secondary, redundant clock, is labeled B. See Figure 26 on page 48.



**NOTE:** We recommend you use shielded cables to connect the external clock sources to the clock source input ports. Shielded cables are not required for the operation of the system and do not need to be grounded at both ends.

**Figure 26: SRP IOA**

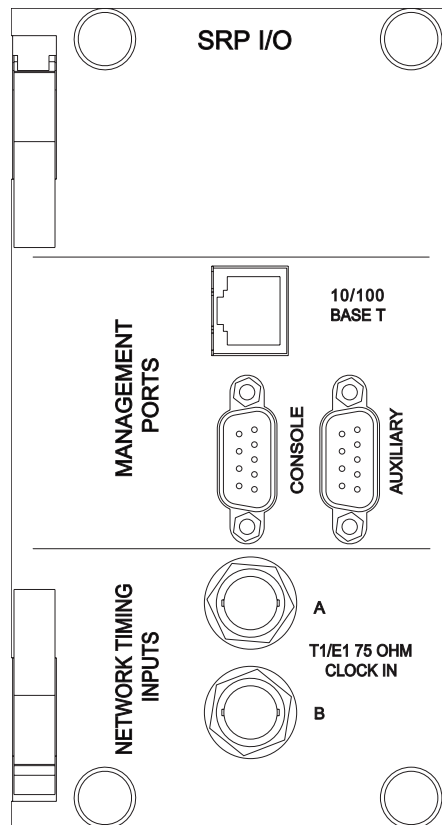

To connect the clock source input ports:

1. Attach the BNC connector to Clock A's network timing port.
2. Attach the opposite end of the network timing cable to your network's clock source A.
3. Repeat steps 1 and 2 for the Clock B connections.

## Management Ports

The Management section of the SRP IOA has three ports (Figure 26 on page 48) for management access:

- One 10/100Base-T Ethernet port—Accepts an RJ-45 (male) connector, providing an out-of-band connection for LAN access through a Telnet session or SNMP.
- Two RS-232 management ports—Accept a DB-9 (female) connector. One port provides direct CLI access from a console terminal; the other Auxiliary port provides debug access from a console terminal.

The management port is considered a data terminal equipment interface (DTE). Direct connection to a terminal or PC (which also have DTE interfaces) requires a crossover cable.

See “Accessing E-series Routers” on page 59 for more information about management access.

## Connecting to the Network

To connect the router to the network:

1. Insert an Ethernet cable (RJ-45) connector into the 10/100Base-T (RJ-45) port on the SRP IOA until it clicks into place.
2. Connect the other end of the cable to the appropriate Ethernet network for an out-of-band connection.

## Connecting to a Console Terminal

When you connect a console directly to the SRP IOA, use a cable appropriate for your terminal connector. The cable must have a female DB-9 connector to attach to the RS-232 port on the SRP IOA.

To connect the console to the SRP IOA:

1. Insert the female DB-9 connector into the RS-232 port, and tighten the screws.
2. Connect the other end of the cable to your terminal's serial port (VT100/ANSI).

## Cabling IOAs

---

This section describes the common connector types used with IOAs.

### LC Duplex Connectors

In accordance with EN60825-1, Safety of Laser Products - Part 1: Equipment Class, Requirements, and User's Guide (2001), multimode IOAs with LC connectors are defined as follows:

CLASS 1 LED PRODUCT.

In accordance with EN60825-1, Safety of Laser Products - Part 1: Equipment Class, Requirements, and User's Guide (2001), single-mode IOAs with LC connectors are defined as follows:

CLASS 1 LASER PRODUCT.



**WARNING:** Do not look directly into LC-style fiber connectors. The fiber-optic laser used in single-mode fiber (SMF) meets the regulatory requirements for casual exposure to the eye; however, looking directly into a laser can cause eye damage.

---



**WARNING:** EN60825-1, Class 1 laser fiber connectors are for connection only to Class 1 laser devices.

---

## SFPs

See “IOAs Requiring SFPs” on page 33 and the *E120 and E320 Module Guide* for information on small form-factor pluggable transceivers (SFPs) used on IOAs.

## Cabling the Router for Power

---

After you have correctly cabled the SRP IOA, you must attach grounding and electrical wires before you attempt system power-up. See Figure 27 on page 51.

Three main tasks are involved:

1. Switch all router power switches to OFF.



**CAUTION:** Switches may have inadvertently flipped to ON during shipping and installation.

---

2. Connect the grounding wires to the chassis.



**WARNING:** Always connect the grounding wires first (before connecting the power cables) and disconnect them last when installing or servicing the router.

---


3. Connect the power cables to the PDUs.

See “System Specifications” on page 89 for the power requirements for the router. Table 9 on page 51 identifies the cabling requirements.

**Table 9: E320 Router PDU Cables and Wires Needed**

| Cable/Wire            | From                              | To                                     |
|-----------------------|-----------------------------------|--|
| One 6-AWG ground wire | PDU ground terminal               | Termination ground                     |
| Two 4-AWG wire leads  | PDU Power A –48 VDC and RTN leads | Appropriate leads on power source No.1 |
| Two 4-AWG wire leads  | PDU Power B –48 VDC and RTN leads | Appropriate leads on power source No.2 |

Figure 27 on page 51 shows the main components of a PDU.

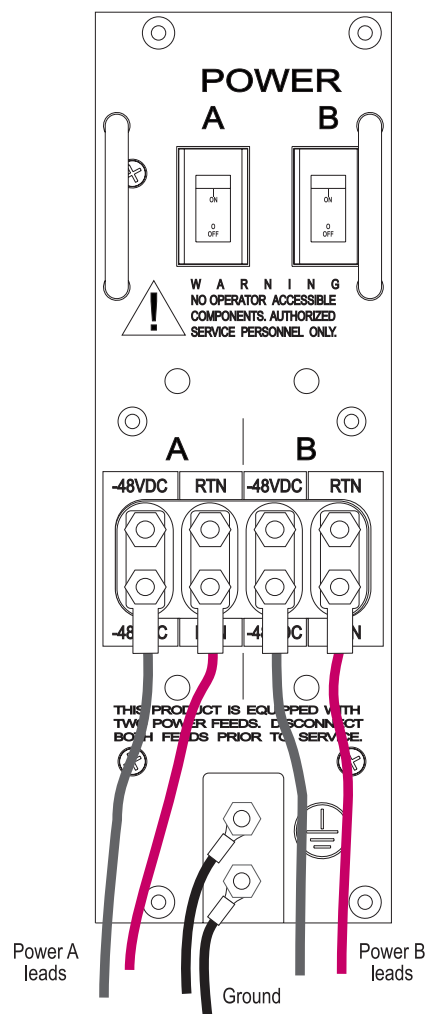**Figure 27: PDU**

### Task 1: Turn Off All Router Power

Before starting to cable the router, push all router power switches to OFF to turn off the router.

### Task 2: Connect the Grounding Cables

The router has two grounding studs located in the rear of the chassis, near the power inputs. Each stud provides grounding for a single power unit.

To ground each power unit:

1. Locate the grounding studs on the router (Figure 27 on page 51).
2. Remove the nuts and locking washers from the grounding studs.



**NOTE:** We recommend a minimum of 6-AWG ground wire with a ring-style terminal.

---

3. Place the grounding cable lead on one of the grounding studs and tighten the nuts to secure the connection.
4. Connect the other end of the ground cable to the appropriate ground termination lead.
5. Repeat Steps 3–4 for the remaining grounding stud.



**NOTE:** When grounding the router, leave a service loop in the grounding cable to ensure that the grounding cable is the last cable to disconnect from the shelf if strain is placed on the electrical cables.

---

### Task 3: Connect the Power Cables

To connect power cables to the router, follow these steps. See Figure 27 on page 51 as needed.



**NOTE:** Juniper Networks has qualified an AC power supply unit for use with the router. Contact your account representative for more information.

---



**WARNING:** Before you begin this procedure, be sure the power source is turned off, the router is turned off, and proper grounding wires are attached.

---

1. Be sure you have completed “Task 1: Turn Off All Router Power” on page 52 and “Task 2: Connect the Grounding Cables” on page 52.
2. If applicable, loosen the screws from the clear power input module cover and remove it.



**WARNING:** The wiring color code of the power cables depends on the color coding of the DC power source installed at your site. Color code standards for DC wiring do not exist. To ensure that the correct polarity is connected to the router power units, confirm the connection of the power cables to the + (positive) and – (negative) leads at the power source.

---

3. Remove the nuts and locking washers from the posts for the power input (A or B) using a small insulated adjustable wrench.
  4. Place one negative (neutral) cable lead on the post labeled –48 VDC.
  5. Replace the locking washers and nuts, and tighten the nuts to secure the connection.
  6. Place the other cable lead on the post labeled RTN.
  7. Replace the locking washer and nut, and firmly tighten the nut to secure the connection.
  8. Attach the opposite end of Power A's wire leads to the appropriate leads on your power source.
- 



**NOTE:** To provide redundancy, do not use the same power source for Power A and Power B leads.

---

9. Place the clear plastic guard over the terminal posts, and secure it in place by tightening the four screws.
  10. Repeat Steps 1–9 for each power input module in your configuration.
- 

## The Next Step

---

See “Powering Up the Router” on page 55.





## Chapter 6

# Powering Up the Router

This chapter describes how to power up the router and determine whether it has booted properly. It contains the following sections:

- Before You Power Up the System on page 55
- Powering Up on page 55
- Status LEDs on page 56
- Powering Down on page 57
- The Next Step on page 57

## Before You Power Up the System

---

Before powering up the system, make sure you complete the following tasks. See the appropriate chapters in this guide for information about these tasks.



**WARNING:** Be sure the power source is turned off and the system is turned off before you perform the installation tasks.

---

- Installing an SRP Module or SFM Module on page 36
- Installing a Line Module or an IOA on page 39
- Cabling the SRP IOA on page 47
- Cabling IOAs on page 49
- Cabling the Router for Power on page 50

## Powering Up

---



**NOTE:** In this procedure we assume that the system is already connected to a power source. See “Cabling the Router” on page 45.

---



**NOTE:** Juniper Networks has qualified an AC power supply unit for use with the router. Contact your account representative for more information.

---

For specifications on the electrical requirements for the system, see “System Specifications” on page 89. For details on the power consumed by the different modules, see the *E120 and E320 Module Guide*.



**CAUTION:** Evaluate the overall loading of the branch circuit before you install any equipment into a rack.

---

To power up the system:

1. Verify that the power source is operational and turned on.
2. Inspect all grounding and power connections to the router chassis.
3. Confirm that all connections are secure.
4. Switch the power switches to ON.
5. Monitor the LEDs on the SRP modules and SFM modules to verify that the system is booting properly. See Table 12 on page 81 for LED status explanations.

When the prompt appears on the system console, the system is in User Exec mode and is ready to be configured:

```
host1>
```

6. Enter the **enable** command to access Privileged Exec mode:

```
host1>enable
host1#
```

In Privileged Exec mode you can begin to configure the system. See *JUNOS System Basics Configuration Guide, Chapter 2, Command-Line Interface* for more information.

## Initialization Sequence

Each line module is initialized independently. As a result, the CLI on the SRP module can become available before the line modules have completed initialization. Commands relating to a line module might fail if the module has not completed initialization. You can use the **show version** command to display line module status, but do not enter commands for a line module until its state is online.

## Status LEDs

---

Upon initial power-up, the components of the router run boot code, go through a series of self diagnostic tests, and synchronize with each other.

When the tests are complete, use the LEDs on each module to determine the status of the router. Observe the module LEDs on the front and rear components.

See “Troubleshooting” on page 77 for information on the system's LEDs.

## Powering Down

---

If you need to power down or remove the SRP module, first enter the **halt** command to temporarily suspend the system's operation. See *JUNOS System Basics Configuration Guide, Chapter 5, Managing the System* for more information.



**CAUTION:** If you do not use the **halt** command before removing or powering down an SRP module, the system's NVS card might become corrupted.

---

If you shut down the system improperly, it runs an investigation of the file allocation table (FAT) the next time it reboots.

## The Next Step

---

If you have problems powering up the system, see “Troubleshooting” on page 77 for help.

If the system boots properly, see “Accessing E-series Routers” on page 59.



## Chapter 7

# Accessing E-series Routers

This chapter discusses how to access the system to manage it. Managing your router includes both configuring and monitoring it. For basic information on the management of the system, see *JUNOS System Basics Configuration Guide, Chapter 5, Managing the System*.

This chapter contains the following sections:

- Setting Up Management Access on page 59
- Console Port Setup on page 59
- Telnet Setup on page 62
- SNMP on page 63
- The Next Step on page 64

## Setting Up Management Access

---

Before you power up the system, you must set up a management console. (See “Connecting to a Console Terminal” on page 49.) You use the console to communicate with the system during the power-up process, set an IP address, and manage the system using the command-line interface (CLI).

You can monitor and manage the router through either of these methods:

- Console terminal—Connect a console (PC, Macintosh, or UNIX workstation) directly to the system's RS-232 serial port.
- Remote console—Connect 10/100Base-T port on the SRP IOA to an Ethernet network, and run Telnet from a remote console.

For initial access to the system, you need to physically connect your console directly to the system's RS-232 port. Through this connection you use the CLI to set an IP address on the system. After you configure the IP address, you can access the system remotely (for example, via Telnet).

## Console Port Setup

---

You can connect a console terminal (PC, Macintosh, or UNIX workstation) directly to the SRP IOA via the RS-232 terminal port. When you connect a console directly to the system, you can configure the system without an IP address.

To communicate with the system, you must have a terminal emulation program running on your PC or Macintosh. You can use any terminal emulation program, such as HyperTerminal. A UNIX workstation can use the emulator TIP.

## ***Using HyperTerminal***

If your console uses a version of Microsoft Windows (such as Windows XP or Windows NT 4.0) that supports the HyperTerminal application, you can access the system via HyperTerminal.

1. Click the Start button and select Programs, Accessories, Communications, and HyperTerminal.
2. In the HyperTerminal window, select HyperTerminal.
3. In the Connection Description dialog box, enter a name for your router (for example, e320) in the Name field.
4. Select any icon to represent your terminal emulation, and click OK.
5. In the Connect To dialog box, in the Connect using field, select the appropriate COM port to use (for example, COM1), and click OK.
6. In the COM1 Properties dialog box, select the following settings:
  - Bits per second: 9600
  - Data bits: 8
  - Parity: None
  - Stop bits: 1
  - Flow control: Xon/Xoff
7. Click OK.


## ***Connecting Directly to the Router***

When you connect a console directly to the system, use a cable appropriate for your terminal connector. The cable must have a female DB-9 connector to attach to the RS-232 port on the system.

The console port is considered a data terminal equipment interface (DTE). Direct connection to a terminal or PC (which also have DTE interfaces) requires a crossover cable.

To connect a console directly to the system:

1. Connect the female DB-9 connector to the RS-232 port on the router's SRP IOA. See Figure 28 on page 61.

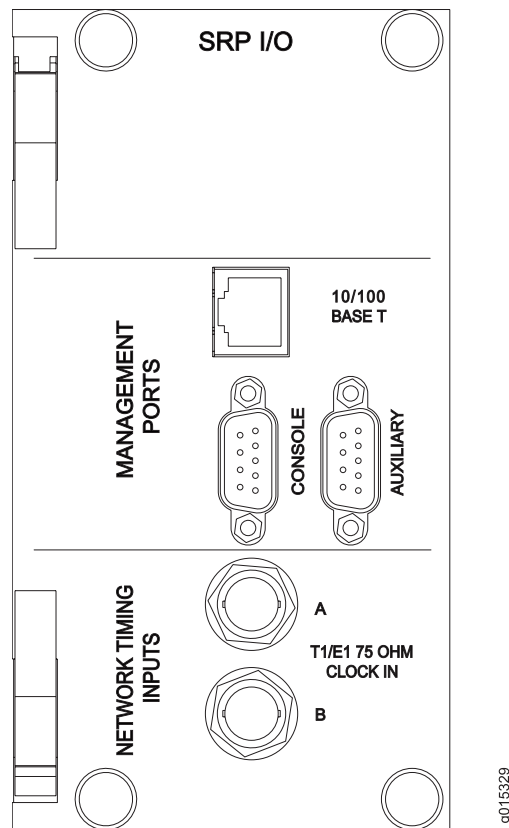**Figure 28: Router Management Ports**

2. Connect the crossover adapter connector to your PC's serial port.
3. Power up the system.

When you power up the system, the CLI appears on your console's screen. The system is now in User Exec mode, and you can begin configuration. For more information on using the CLI and configuring the system, see the *JUNOS System Basics Configuration Guide*.



**NOTE:** Direct access through the RS-232 serial port enables you to monitor the system while it boots.

## Assigning an IP Address

When your console is ready to communicate with the system, power up the system. (See “Powering Up the Router” on page 55.) Then set an IP address for the system. The system powers up in User Exec mode. To assign an IP address:

1. Enter the **enable** command at the User Exec prompt.

```
host1>enable
```

```
host1#
```

The system is now in Privileged Exec mode.

2. Set an IP address on the Ethernet interface:
  - Specify the identifier of the FastEthernet interface in the format: *slot/adaptor/port*.
  - Use an IP address valid for the system.

```
host1#configure terminal
```

Enter configuration commands, one per line. End with CNTL/Z.

```
host1(config)#interface FastEthernet 6/0/0
```

```
host1(config-if)#ip address 10.10.7.3 255.255.255.0
```

3. Continue to configure the system's parameters as needed.

After you have assigned an IP address to the system, you can communicate remotely by running Telnet over an Ethernet network. See “Telnet Setup” on page 62.

## Telnet Setup

---

When you have configured an IP address for the system, you can run Telnet from a host to access the system through its Ethernet port. To connect the Ethernet port to the network:

1. Connect an Ethernet cable (RJ-45) to the system's 10/100Base-T (RJ-45) port on the SRP IOA. See Figure 28 on page 61.
2. Connect the other end of the cable to the appropriate Ethernet network for an out-of-band connection.

Before you can access the system with Telnet, you must either configure a password for Telnet access or disable the password requirement from the management console. In the following example, you disable the password.

1. Enter the **enable** command.

```
host1>enable
```

```
host1#
```

The system is now in Privileged Exec mode.

2. Enter the **configure** command.

```
host1#configure terminal
```

Enter configuration commands, one per line. End with CNTL/Z.

```
host1(config)#
```

The system is now in Global Configuration mode.

3. Enter the **line** command.

```
host1(config)#line vty 0 4
```

```
host1(config-line)#
```



The system is now in Line Configuration mode.

4. Disable the password.

```
host1(config-line)#no login
```



**NOTE:** In this example, you disabled the password requirement, but you can choose to set a password instead. See *JUNOS System Basics Configuration Guide, Chapter 8, Passwords and Security* for information on setting a password.

---

5. Run Telnet from a host on the same Ethernet network as the system.
6. Enter the IP address of the system to open the Telnet session.

The User Exec prompt appears when the Telnet session to the system is established.

```
host1>
```

7. Enter the **enable** command.

```
host1>enable
host1#
```

The system is now in Privileged Exec mode.

8. Enter the **configure** command.

```
host1#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
host1(config)#
```

The system is now in Global Configuration mode, from which you can configure the system. See *JUNOS System Basics Configuration Guide, Chapter 2, Command-Line Interface*.



**CAUTION:** Do not change the IP address for the Ethernet interface that you are using to communicate with the system. If you change the address, you will lose the Telnet session.

---

## SNMP

---

The system supports Simple Network Management Protocol (SNMP), a standard management protocol for IP networks. You can configure the system as an SNMP agent.

As an SNMP agent, the system provides access to management information that it maintains. See *JUNOS System Basics Configuration Guide, Chapter 4, Configuring SNMP* for information on SNMP. See *JUNOS Command Reference Guide A to M* and

*JUNOS*e Command Reference Guide N to Z for the commands that are available for configuring the system as an SNMP agent.

## **The Next Step**

---

See “Maintaining the Router” on page 67.

### **Part 3**

# **Hardware Maintenance, Replacement, and Troubleshooting Procedures**

- Maintaining the Router on page 67
- Troubleshooting on page 77



## Chapter 8

# Maintaining the Router

This chapter lists the tools, items, and steps needed for installing and uninstalling router components. Other maintenance procedures must be performed by an authorized Juniper Networks technician.

This chapter contains the following sections:

- Required Tools and Items on page 67
- Storing Modules and Components on page 67
- Cleaning the System on page 68
- Upgrading NVS Cards on SRP Modules on page 68
- Replacing an NVS Card on page 70
- Replacing Fan Trays on page 71
- Installing an Air Filter on page 73
- Replacing a Power Distribution Unit on page 74

### Required Tools and Items

---

You need the following tools and other items to replace router components:

- Flathead and Phillips screwdrivers
- Insulated adjustable wrench
- Antistatic wrist strap
- Antistatic bags (or other protective packaging to hold components)
- Plastic boots or other protective covers for fiber-optic SC and LC connectors

### Storing Modules and Components

---

Retain the packaging in which a module or component was shipped, and use this packaging to store the item. Modules are shipped in antistatic bags and protective packaging. Components, such as transceivers and nonvolatile storage (NVS) cards, are shipped in antistatic plastic containers within an antistatic padded box.



**CAUTION:** Failure to store electronic modules and components correctly can lead to damage of these items.

---

Follow these guidelines for storing modules and components:

- Store each module in a separate antistatic bag.
- Store components in an antistatic plastic container. Some of these containers can accommodate several components in separate compartments.
- Do not store multiple modules or components in an antistatic bag or container where they can touch other items.
- (Optional) Store the item in its antistatic bag or container within the protective packaging or padded box that the item was shipped in.

---

## Cleaning the System

---

Dust is attracted to the where the air intake vents are located. Clean the area with a dry cloth every few weeks to prevent excessive accumulation of dust. This cleaning helps to maintain the efficiency of the cooling system and to prevent damage to electronic components.



**WARNING:** Do not insert any metal object, such as a screwdriver, or place your hand into an open slot or the backplane when the router is on. Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. These actions prevent electric shock and serious burns.

---



**CAUTION:** When cleaning the system, wear an antistatic wrist strap connected to an ESD grounding jack. This action helps to protect modules from damage by electrostatic discharge.

---

---

## Upgrading NVS Cards on SRP Modules

---

This section describes how to install higher-capacity NVS cards on switch route processor (SRP) modules. The procedure you use depends on the number of SRP modules in the system. A new NVS card already contains the software release you ordered.



**NOTE:** The new NVS card must contain the same software release that you are running on the system.

---

## Upgrading a System That Contains One SRP Module

If the system contains only one SRP module, you must power down the system before you upgrade the NVS card.



**CAUTION:** If you do not use the **halt** command before removing or powering down an SRP module, the system's NVS card can become corrupted.

---

To upgrade the NVS card on a system that contains one SRP module:

1. Enter the **halt** command.

See *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules* for information about the **halt** command.

---



**WARNING:** Do not insert any metal object, such as a screwdriver, or place your hand into an open slot or the backplane when the router is on. Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. These actions prevent electric shock and serious burns.

---



**CAUTION:** When handling modules, use an antistatic wrist strap connected to an ESD grounding jack. This action helps to protect the module from damage by electrostatic discharge.

---

2. Connect the antistatic wrist strap to an ESD grounding jack on the router.
3. Power down the system.
4. Remove the SRP module.
5. Replace the NVS card on the SRP module. (See “Replacing an NVS Card” on page 70.)
6. Reinsert the SRP module into the chassis.
7. Power up the system. (See “Powering Up the Router” on page 55.)

## Upgrading a System That Contains Two SRP Modules

In a system that contains two SRP modules, you can upgrade the NVS cards on the SRP modules without powering down the system.



**WARNING:** Do not insert any metal object, such as a screwdriver, or place your hand into an open slot or the backplane when the router is on. Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. These actions prevent electric shock and serious burns.

---



**CAUTION:** When handling modules, use an antistatic wrist strap connected to an ESD grounding jack. This action helps to protect the module from damage by electrostatic discharge.

---

To upgrade the NVS cards on the SRP modules in a system that contains two SRP modules:

1. Wear an antistatic wrist strap and connect it to one an ESD grounding jack on the router.
2. Halt the redundant SRP module.

**host1#halt standby-srp**

3. Remove the redundant SRP module from the chassis.
4. Replace the NVS card on this SRP module. (See “Replacing an NVS Card” on page 70.)
5. Reinsert the SRP module into the chassis.
6. When this SRP module is available, synchronize the SRP modules.

**host1#synchronize**

7. When the SRP modules are synchronized, reboot the SRP module that you upgraded.

**host1#reload standby-srp**

8. When this SRP module is available, synchronize the SRP modules.

**host1#synchronize**

9. When the SRP modules are synchronized, force the redundant SRP module to take over from the primary SRP module.

**host1#srp switch**

10. Halt the redundant (former primary) SRP module.

**host1#halt standby-srp**

11. Immediately remove the former primary SRP module.
12. Repeat Steps 4–8 for the former primary SRP module.

---

## Replacing an NVS Card

---

To replace an NVS card in slot 0 or slot 1 of an SRP module:




**CAUTION:** Before you insert or remove an NVS card from a running SRP module, we strongly recommend that you halt the SRP module or shut down the router.



Failure to do this can result in file corruption in one or both cards. See *JUNOS System Basics Configuration Guide, Chapter 6, Managing Modules* for information about the **halt** command.

1. Obtain an antistatic container for the NVS card you plan to remove. (See “Storing Modules and Components” on page 67.)
2. Be sure you have halted the SRP module using the **halt** command. See “Upgrading a System That Contains One SRP Module” on page 69.
3. With a small flathead screwdriver, remove the faceplate from the NVS card slot on the SRP module.
4. Eject the NVS card. (See Figure 29 on page 71.)
  - Slot 0—Insert a paperclip or similar device in the hole beneath slot 0 to eject the NVS card.
  - Slot 1—Use a screwdriver or similar device to depress the button beneath slot 1 and eject the card.

**Figure 29: NVS Card Slots and Eject Buttons**

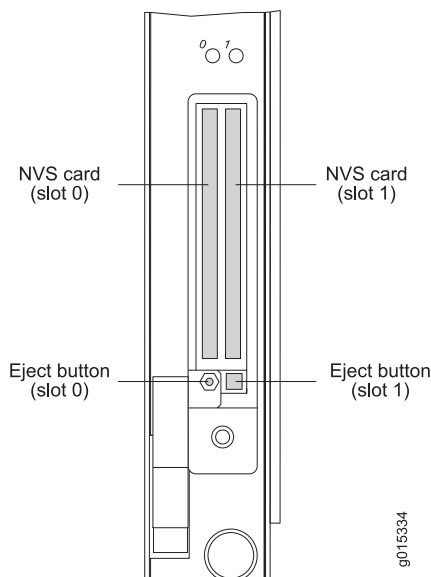

5. Remove the NVS card and place it in the antistatic container.
6. Insert the new NVS card into the slot and push it until it clicks into place.
7. Replace the faceplate on the NVS card slot.

## Replacing Fan Trays

A tray of cooling fans provides forced air cooling for components in the router. The fan tray is hot-swappable; you can replace it without powering down the system.

However, if you do not replace the fan tray within 60 seconds, the system enters thermal protection mode. For information about thermal protection mode, see “Monitoring Temperatures of Modules” on page 83. You can monitor fan status by observing the LEDs on the SRP module or on the fan tray behind the faceplate. For complete LED information, see “Understanding Status LEDs to Troubleshoot” on page 78.



**NOTE:** On the SRP module or fan tray, if the red FAN FAIL LED is illuminated, either a critical or non-critical failure exists. Fan tray LEDs are located behind the fan tray bezel.

---



**CAUTION:** If the FAN FAIL LED on the SRP module is illuminated and none of the fans are spinning when you remove the fan tray, quickly power down the system until a new fan tray is available. Operating a router with inadequate air circulation can damage the modules.

---

## Removing an E320 Fan Tray

To remove the fan tray:

1. Place a flathead screwdriver in the groove where the top bezel meets the chassis on the top of the system, and lever the top bezel off the front of the system.
  2. With an appropriate screwdriver, loosen the captive screws located at the corners of the fan tray.
- 



**WARNING:** Do not place your fingers near the fans when removing the fan tray. The blades might still be moving.

---

3. Pull the fan tray halfway out of the shelf until it stops on the safety catch.
4. Pull both red safety handles upward while gripping the sides of the fan tray and pull the tray out slightly until the safety catch is released.
5. Place one hand under the fan tray and the other on the front handle and continue to pull the fan tray out of the chassis.

Use two hands to hold the fan tray after it comes out of the chassis.

## Installing an E320 Fan Tray

To install the fan tray:



**CAUTION:** Do not use the fan tray handle to carry the fan tray assembly. Use the handle only to push the tray into the chassis.

---

1. With two hands hold the tray horizontally or so that the captive screws point toward you and you can read text on the labels.
2. Place the bottom corners of the tray housing in the fan tray compartment and push toward the back of the chassis until the tray stops.

An electrical connector on the back of the fan tray pairs with an electrical connector at the back of the shelf.

3. With an appropriate screwdriver, tighten the captive screws.


Alternate between screws when tightening them to ensure that the electrical connectors at the back of the tray fit tightly.

4. Fold down the fan tray handle and push the top bezel back on the front of the system.

## Installing an Air Filter

Air filters are hot-swappable; you do not have to power down the system to replace the filter. The filter is located behind the fan tray bezel located at the bottom of the front of the system. Remove the bezel to access the air filter. See Figure 30 on page 73.

**Figure 30: Installing an Air Filter into an E320 Router**

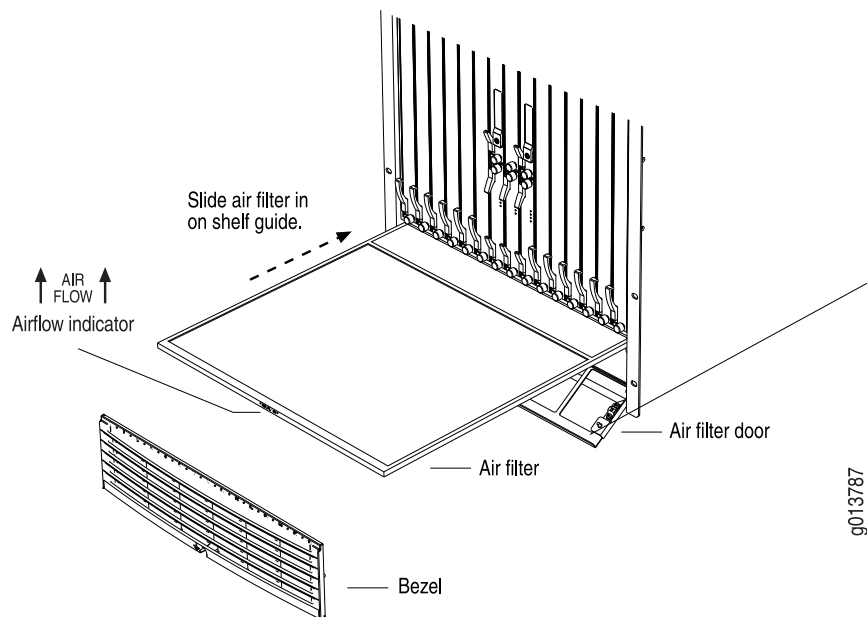

To install an air filter:

1. Ground yourself by using an antistatic wrist strap or other device and connect it to one of the ESD grounding jacks.
2. Remove the front bezel by grabbing the edges and pulling straight out toward you.

3. Unscrew the two captive screws on the air filter door and swing the door down to open it.
4. Remove the old air filter (if present).
5. Insert the new filter by sliding it in on the shelf guides. Be sure the mesh side is facing up.
6. Close the door, tighten the captive screws, and snap the bezel on.

## Replacing a Power Distribution Unit

---

To replace a power distribution unit (PDU):


1. Power down the router. See “Powering Down” on page 57.
2. Remove the clear plastic guard covering the PDU.



**WARNING:** Be sure the power source is turned off and all power switches are in the OFF position.

---

3. Disconnect the power cables and grounding cables. See Figure 31 on page 75.
4. With an appropriate screwdriver, loosen the screws located at the corners of the PDU.
5. Using two hands, pull the PDU out of the chassis.
6. Install the new PDU and tighten the screws.
7. Reconnect the power cables and grounding cables. See “Cabling the Router for Power” on page 50
8. Replace the clear plastic guard.
9. Power up the router. See “Powering Up the Router” on page 55.

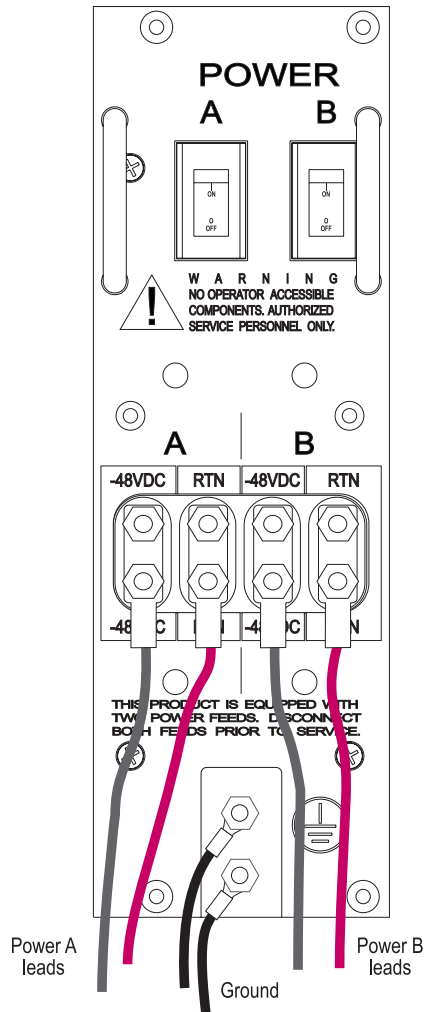**Figure 31: PDU**



## Chapter 9

# Troubleshooting

This chapter explains how you can troubleshoot a specific problem, such as abnormal LED activity or no system power, when you power up the router. It contains the following sections:

- Diagnosing Problems on page 77
- Troubleshooting Power Failures on page 78
- Understanding Status LEDs to Troubleshoot on page 78
- Monitoring Temperatures of Modules on page 83
- Resetting Line Modules and SRP Modules on page 84
- Double-Bit Errors on SRP Modules on page 84

### Diagnosing Problems

---

When you first encounter a system problem:

1. Make sure power connections are secure attached.
2. Observe the system's LEDs carefully.
3. Make sure cable connections on the system modules are securely attached.

If a problem is beyond the scope of this chapter, see “Contacting Customer Support and Returning Hardware” on page 109 for further instructions.



**NOTE:** Running the **show version**, **show hardware**, and **show environment** commands is often a good first step when trying to troubleshoot a problem.

---

### Initialization Sequence

Each line module is initialized independently. As a result, the command-line interface (CLI) on the switch route processor (SRP) module might become available before the line modules have completed initialization. Commands relating to a line module might fail if the module has not completed initialization. Use the **show version** command to display line module status. Do not enter commands for a line module until its state is online.

## Troubleshooting Power Failures

The system's distributed power system is designed to consume low levels of power and dissipate low levels of heat. See “System Specifications” on page 89 for specifications of power consumption and heat dissipation. If you suspect a power problem, see Table 10 on page 78.

**Table 10: Causes of Power Failures**

| Symptom                   | Possible Problems   | Actions  |
|---------------------------|---|--|
| System does not power up. | <ul style="list-style-type: none"> <li>■ System is not receiving power.</li> <li>■ Module's power supply has malfunctioned.</li> <li>■ Power source cannot handle system load.</li> </ul> | <p>The following actions apply to all of the possible problems:</p> <ol style="list-style-type: none"> <li>1. Verify that all power connections are correct.</li> <li>2. Verify that the power supply is delivering the correct voltage, current, and wattage to the system. See “System Specifications” on page 89.</li> <li>3. If the system still does not operate, contact the Juniper Networks Technical Assistance Center (JTAC).</li> </ol> |
| System shuts down.        | <ul style="list-style-type: none"> <li>■ Temperature is too high.</li> <li>■ Power is lost.</li> </ul>  | <p>The following actions apply to all of the possible problems:</p> <ol style="list-style-type: none"> <li>1. Verify that power connections are properly attached.</li> <li>2. Verify that system is receiving power.</li> <li>3. Look to see whether or not the LEDs are lit.</li> <li>4. Run diagnostics on SRP and line modules.</li> <li>5. If system does not reset, contact JTAC.</li> </ol>   |

## Understanding Status LEDs to Troubleshoot

Module LEDs can show you the immediate status of a module and alert you to a problem with the module or one of its ports. We recommend you familiarize yourself with LED activity so that you can easily detect and correct a module-related problem with minimal or no system downtime.

### LED Identification

Most modules have two sets of status LEDs. The top set indicates basic functional status of the router or module. The bottom set indicates system status for that module, such as port status (line modules and IOAs) or fan status (SRP modules). See Figure 32 on page 79 and Figure 33 on page 79 for LED locations and labeling. See Table 11 on page 80 for descriptions of LED activity for all modules and IOAs.



Figure 32: Typical IOA LEDs


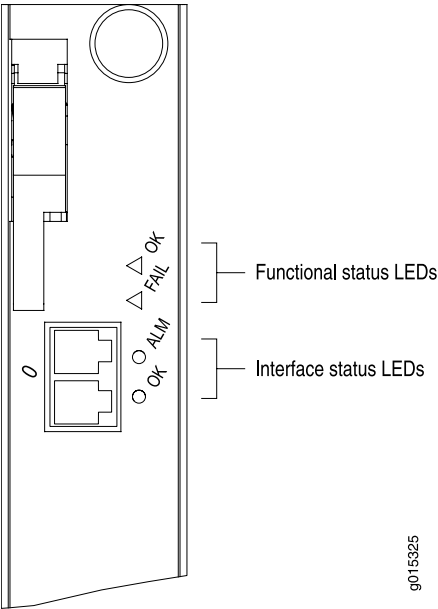


Figure 33: SRP IOA Module LEDs



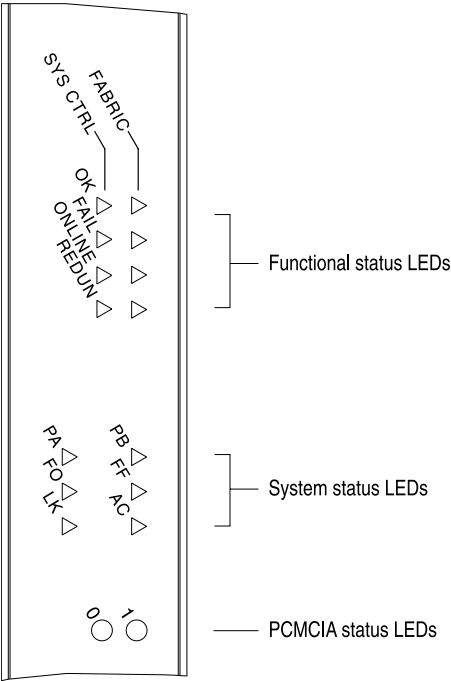

**NOTE:** The primary SRP module illuminates the REDUNDANT LED when the SRP module is part of a redundancy group and it is up and running (or ready to take over). The standby SRP module monitors an activity signal from the primary SRP module to determine its state; it does not shadow the operations of the primary SRP module. If the standby SRP module detects that the primary SRP module is not active (and high-availability mode is not enabled), it reboots the system and takes control. If high-availability mode has been enabled, automatic switchover occurs with near hitless failover.

**Table 11: LED Identification and Activity Descriptions**

| LED Location  | LED Label | LED Indicator | LED Color | OFF to ON   | ON to OFF   |
|---|-----------|---------------|-----------|---|---|
| <b>All modules</b>  |           |               |           |   |   |
|   | OK        | Module status | Green     | Self-test passed  | Failure detected  |
|   | FAIL      | Module status | Red       | Failure detected  | Diagnostic test running   |
|   | ONLINE    | Module status | Green     | Module online   | Module offline  |
| <b>Line module</b>  |           |               |           |   |   |
|   | REDUN     | Redundancy    | Green     | Module is active, and a standby module is available   | Module is active, and no standby module is available  |
| <b>SFM module</b>   |           |               |           |   |   |
|   | REDUN     | Redundancy    | Green     | N + 1 redundancy is enabled; 2 SRPs and 3 SFMs must be installed and working.<br><br>When LED is lit, you can remove the module without interrupting service. | One of the five fabric slices is down or not installed.<br><br>N + 1 redundancy is not enabled. |
| <b>SRP module</b>   |           |               |           |   |   |
|   | REDUN     | Redundancy    | Green     | Module is the spare system controller, is up, and is ready to take the role of the online system controller.  | Module is no longer acting as the spare system controller.                                      |
|   | PA        | Power A       | Green     | Power is online on source A.  | Power is off.   |
|   | PB        | Power B       | Green     | Power is online on source B.  | Power is off.   |
|   | FO        | Fan online    | Green     | Fan is online.  | Critical fan failure.   |
|   | FF        | Fan failure   | Red       | Critical fan failure.   | Fan is online.  |
| <b>NOTE:</b> You can run the <b>show environment</b> command to see whether a noncritical fan failure exists. |           |               |           |   |   |

**Table 11: LED Identification and Activity Descriptions** *(continued)*

| LED Location | LED Label | LED Indicator                                      | LED Color | OFF to ON   | ON to OFF  |
|--------------|-----------|--|-----------|---|--|
|              | LK        | Ethernet link                                      | Green     | Ethernet link is up.  | Ethernet link is down.   |
|              | AC        | Ethernet activity                                  | Green     | Blinks when Ethernet traffic is on link.                          | No Ethernet traffic is on link.  |
| <b>IOAs</b>  |           | <b>NOTE:</b> Not all IOAs have the following LEDs. |           |   |  |
|              | ALM       | Port status  | Yellow    | The remote end of the link is experiencing loss of signal (FERF). | No FERF present, port is working correctly.                              |
|              |           | Port status  | Red       | Port is experiencing loss of signal.                              | Port is working correctly; in sync.                                      |
|              | OK        | Port status  |           | Physical link is connected properly and is functioning properly.  | Physical link is not connected properly and is not functioning properly. |

## LED Activity

When the system boots, it runs a series of tests for each module installed in the system, and the LEDs display various configurations. See Table 12 on page 81 and Table 13 on page 82 to understand normal and abnormal LED activity.



**NOTE:** When you reboot the system after installing a new version of the software, the line modules appear to boot twice.

**Table 12: Normal Activity of Functional Status LEDs During Booting**

| OK  | FAIL | ONLINE | Status Process  |
|-----|------|--------|---|
| off | off  | off    | 1. Module is in the power-up restart state; the FAIL LED stays on briefly.                  |
| off | on   | off    | 2. Module is initializing, and diagnostic tests are running; the FAIL LED stays on briefly. |
| on  | off  | off    | 3. Module passed the diagnostics; the system boots.   |
| on  | off  | on     | 4. Module is now up and running.  |

If the system detects an error during booting, the FAIL LED lights. Some failure conditions can cause the module not to boot. In this case, the LEDs might all be off. The system then resets the module.

If the operational software detects an error, the FAIL LED lights. Some errors can cause a module reset. Crash information is displayed at the console on the next reboot.

**Table 13: Troubleshooting Abnormal LED Activity on Modules**

| Diagnostic Signs   | Possible Problems  | Actions  |
|--|--|--|
| <ul style="list-style-type: none"> <li>■ POWER A (PA) LED is not lit</li> <li>■ POWER B (PB) LED is not lit</li> </ul> | <ul style="list-style-type: none"> <li>■ System is not receiving power from Power A.</li> <li>■ System is not receiving power from Power B.</li> </ul>   | <ol style="list-style-type: none"> <li>1. Make sure Power A and Power B terminal connections are securely attached.</li> <li>2. Verify that power switches are on.</li> <li>3. Make sure connections to power sources are securely attached.</li> <li>4. If system still does not operate, contact the Juniper Networks Technical Assistance Center.</li> </ol>  |
| FAIL LED lights  | <ul style="list-style-type: none"> <li>■ The line module and IOA are incompatible.</li> <li>■ A hardware failure, such as a failed module.</li> </ul>  | <ol style="list-style-type: none"> <li>1. Make sure that the line modules and IOAs are compatible; replace if necessary.</li> <li>2. If you replaced the IOA only, issue the <b>reload slot slot_number</b> command.</li> <li>3. If you replaced the line module or if there was a hardware failure, the system is supposed to automatically reset the module.</li> <li>4. If the condition persists, contact the Juniper Networks Technical Assistance Center.</li> </ol> |
| <ul style="list-style-type: none"> <li>■ FAN OK LED does not light</li> <li>■ FAN FAIL LED lights</li> </ul>           | <ul style="list-style-type: none"> <li>■ Fan is not working properly or has slowed down.</li> <li>■ Fan needs replacement.</li> </ul>  | Contact the Juniper Networks Technical Assistance Center; the system must be serviced.   |
| LINK LED is not lit  | <ul style="list-style-type: none"> <li>■ Ethernet connection is down.</li> </ul>   | <ol style="list-style-type: none"> <li>1. Make sure that Ethernet cables are properly connected to both the Ethernet port and the appropriate network device.</li> <li>2. If the condition persists, contact the Juniper Networks Technical Assistance Center.</li> </ol>  |
| ALM LED is red   | <ul style="list-style-type: none"> <li>■ System does not recognize a port connection.</li> <li>■ Cabling is not connected properly.</li> <li>■ Cable is faulty.</li> <li>■ Clocking problem exists.</li> </ul> | <ol style="list-style-type: none"> <li>1. Make sure that all cables are firmly plugged into the ports and the attached network device.</li> <li>2. Verify that cables are clean.</li> <li>3. Test for faulty cables.</li> <li>4. Verify clock source and configuration.</li> <li>5. Reset the system.</li> </ol> <p><b>NOTE:</b> Problem is corrected when normal LED activity occurs.</p>   |

**Table 13: Troubleshooting Abnormal LED Activity on Modules** *(continued)*

| Diagnostic Signs   | Possible Problems   | Actions   |
|--|---|---|
| ALM LED is yellow  | <ul style="list-style-type: none"> <li>■ Far end receive failure (FERF) exists.</li> </ul>  | <ol style="list-style-type: none"> <li>1. Correct FERF problem.</li> <li>2. Reset the system.</li> </ol> <p><b>NOTE:</b> Problem is corrected when normal LED activity occurs.</p>  |
| PA, FO, and LK LEDs on SRP module are on, but are off on LM and SFM module | <ul style="list-style-type: none"> <li>■ Thermal protection mode has been enabled.</li> <li>■ System temperature is too high.</li> <li>■ Vents are blocked.</li> <li>■ Fans are not operating.</li> </ul> | <ol style="list-style-type: none"> <li>1. Look at your console for a message indicating the problem. If you have the system log set to a severity of WARNING or higher, a Warning message indicates the failure.</li> <li>2. Issue the <b>show environment</b> command to display the temperatures. If the temperature is too high, power down the system.</li> <li>3. Regulate temperature.</li> <li>4. Reset the system.</li> </ol> |

## Monitoring Temperatures of Modules

You can view the temperature of each module by issuing the **show environment all** and **show environment table** commands. In addition, the system generates detailed log messages if the temperature of a module is outside normal operating limits.

For example, if the temperature of any forwarding controller exceeds 212°F (100°C), a message appears on the console and the event is added to the system log. If you receive this message, report it to your customer service representative.

If the temperature of any module exceeds the upper temperature limit, the system immediately goes into thermal protection mode. After the system has entered thermal protection mode, you must resolve the cause of the high temperature quickly.

**Table 14: Troubleshooting High-Temperature Conditions**

| Cause of High Operating Temperature        | Symptoms   | Resolution  |
|--|--|---|
| Air vents to system are blocked            | Space around system does not meet specifications. (See “System Specifications” on page 89.)  | Increase space around system.   |
| Ambient temperature exceeds specifications | Ambient temperature exceeds specifications. (See “System Specifications” on page 89.)  | Provide extra cooling or heating in the room where the system is located. |
| One or more cooling fans have failed       | <ul style="list-style-type: none"> <li>■ FAN OK LED (FO) on SRP module is not illuminated.</li> <li>■ FAN FAIL LED (FF) on SRP module is illuminated.</li> </ul> | Replace fan tray. (See “Maintaining the Router” on page 67.)              |

**Table 14: Troubleshooting High-Temperature Conditions** *(continued)*

| Cause of High Operating Temperature | Symptoms                           | Resolution   |
|-------------------------------------|------------------------------------|--|
| A module fails                      | FAIL LED on module is illuminated. | Replace module. (See “Installing Modules” on page 25.) |

When you have resolved the cause of the high temperature, the system automatically resumes operation. For example, if the system entered thermal protection mode and you replaced the fan tray, a chassis reboot is not required. The system automatically restores power to the LM and SFM modules.

## Resetting Line Modules and SRP Modules

Line modules and SRP modules have two recessed buttons that enable you to reset the software or module. You can use the NMI button to reset the software on the module and the module reset button to reset the module. See Figure 5 on page 8.

If a line module fails to respond for an extended time, a software problem might exist with that module. You can depress the NMI button with a paper clip to suspend the current software task. Depending on the situation, this action might also reset the software on the module.

If depressing the software reset button fails to correct the issue with the line module, depress the module reset button. This action reboots the line module.

The buttons work in the same way for the SRP module. Depressing the module reset button on an SRP module is equivalent to rebooting the router and causes all the line modules to reboot.

## Double-Bit Errors on SRP Modules

SRP modules include error checking and correction (ECC) to protect their SDRAM. ECC provides error detection of single-bit and double-bit errors and correction of single-bit errors for the SDRAM as follows:

- If ECC detects a single-bit error, it automatically corrects the error, and operation continues.
- If ECC detects a double-bit error, it logs the error, stops the main processor on the controller, and takes the SRP module offline.

## Detecting Double-Bit Errors

The following message appears on the console when ECC detects a double-bit error:

```
ALERT 05/10/2004 13:10:33 os: failed: ECC DOUBLE BIT ERROR OCCURRED
Address = 0xe95db10
Data (Upper 32Bits) = 0xe95db20
Data (Lower 32Bits) = 0x55d06c
```

```

ECC Data Bits = 0x2b
ECC 1Bit Error Counter = 0x0
*** YOU MUST PERFORM A HARD RESET TO CONTINUE ***
ALERT 05/10/2004 13:10:34 os: PROCESSOR EXCEPTION: 0x200n

```

When ECC detects a double-bit error in a system that contains a redundant SRP module, the redundant module becomes active and the system continues to operate. However, you must still troubleshoot the SRP module with the double-bit error. When ECC detects a double-bit error in a system that does not contain a redundant SRP module, you must troubleshoot the SRP module immediately. See “Fixing Double-Bit Errors” on page 85.

### ***Fixing Double-Bit Errors***

To fix a double-bit error:

1. Remove the second SRP module, if there is one.
2. Reboot the system with the module reset button on the primary SRP module. (See Figure 5 on page 8.)

These actions attempt to correct a transient double-bit error. However, if the console displays a memory test failure for the SRP module after you reboot, or if the FAIL LED on the SRP module stays on during rebooting, the SDRAM is permanently damaged and needs replacing. In this event, call the Juniper Networks Technical Assistance Center to arrange for repair.





## **Part 4**

# **Appendixes**

- System Specifications on page 89
- Installation Guidelines and Requirements on page 93
- Cable Pinouts on page 105
- Contacting Customer Support and Returning Hardware on page 109
- Declaration of Conformity on page 115



## Appendix A

# System Specifications

This chapter lists the system specifications, requirements, and certifications for the router.

- E120 Router Specifications on page 89
- E320 Router Specifications on page 91

### E120 Router Specifications

**Table 15: E120 Router Specifications**

| Category                          | Specification   |
|-----------------------------------|---|
| <b>Weight</b>                     |   |
| Chassis only                      | 51 lb (23.1kg)  |
| Chassis fully configured          | Approximately 107 lb (48.5 kg)  |
| <b>Dimensions</b>                 |   |
| Chassis only                      | 11.25 (H) x 17.45 (W) x 25.10 (D) inches; 28.57 x 44.32 x 63.75 cm  |
| <b>Environmental Requirements</b> |   |
| <i>Pending</i>                    |   |
| Ambient operating temperature     | <ul style="list-style-type: none"><li>■ Long term: 41° to 104° F (5° to 40° C)</li><li>■ Short term: 23° to 122° F (–5° ° to 50° C)</li></ul> |
| Ambient operating humidity        | <ul style="list-style-type: none"><li>■ Long term: 5 % to 85 % (noncondensing)</li><li>■ Short term: 5 % to 95 % (noncondensing)</li></ul>    |
| Ambient storage temperature       | –40° ° to 158° F (–40° ° to 70° C), 95 % relative humidity  |
| Ambient storage humidity          | 5 % to 95 % (noncondensing)   |
| <b>Heat Dissipation</b>           |   |
| 1920 W, 6553 BTU/hour maximum     |   |
| <b>DC Input</b>                   |   |
| Voltage                           | –40 to –72 VDC  |

**NOTE:** If the voltage rises above –40 VDC, the system powers off. The system does not power on again until the input voltage reaches –43 +/– 0.5 VDC.

**Table 15: E120 Router Specifications** *(continued)*

| Category  | Specification   |
|---|---|
| Current   | 40 A @ -48 VDC  |
| Power   | 1920 W  |
| Redundancy (input power)                              | 2 independent line feeds  |
| <b>Space Requirements</b>                             | <ul style="list-style-type: none"> <li>■ 3 feet (90 cm) behind router or rack</li> <li>■ Do not block air vents on sides of the router</li> <li>■ Do not place equipment that exhausts hot air to left on the right of the router.</li> </ul>   |
| <b>Airflow</b>  | <ul style="list-style-type: none"> <li>■ Air intake occurs from the right side of the router.</li> <li>■ Air is exhausted out of the left side of the router.</li> </ul>  |
| <b>NEBS Certification Level 3</b>                     | <i>Pending</i>  |
| <b>Safety Agency Certification</b>                    | <ul style="list-style-type: none"> <li>■ AS/NZS 60950:2000 Safety of Information Technology Equipment</li> <li>■ CAN/CSA-C22.2, No. 60950-1-03, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements</li> <li>■ EN60825-1, Safety of Laser Products - Part 1: Equipment Class, Requirements, and User's Guide (2001)</li> <li>■ EN 60950-1:2001, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements</li> <li>■ IEC 60950-1(2001-10) Ed. 1.0 Information Technology Equipment - Safety - Part 1: General Requirements</li> <li>■ Low Voltage Directive (73/23/EEC)</li> <li>■ UL 60950-1, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements</li> </ul> |
| <b>Electromagnetic Emissions Agency Certification</b> | <ul style="list-style-type: none"> <li>■ AS/NZS CISPR 22:2004</li> <li>■ EMC Directive (89/336/EEC)</li> <li>■ EN 300 132-2 (Narrowband and Wideband)</li> <li>■ EN55022 Class A (CISPR-22 Class A)</li> <li>■ EN55024, Annex C for WAN Equipment Performance Criteria A, B, and C</li> <li>■ EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-6</li> <li>■ ETSI 300-386, Telecommunication Network Equipment; ElectroMagnetic Compatibility (EMC) requirements</li> <li>■ FCC Part 15 Class A</li> <li>■ IECS-03 Issue 3 Class A</li> <li>■ VCCI (Voluntary Control Council for Interference by Information Technology Equipment)</li> </ul>   |

## E320 Router Specifications

**Table 16: E320 Router Specifications**

| Category                                 | Specification  |
|--|--|
| <b>Weight</b>                            |  |
| Chassis only                             | 88 lb (39.9 kg)  |
| Chassis fully configured                 | Approximately 215 lb (97.5 kg)   |
| <b>Dimensions</b>                        |  |
| With cable management bracket and bezels | 24.5 (H) x 19 (W) x 28 (D) inches; 62.23 x 48.26 x 71.12 cm  |
| Chassis only                             | 24.5 (H) x 19 (W) x 25 (D) inches; 62.23 x 48.26 x 63.5 cm   |
| <b>Environmental Requirements</b>        |  |
| NEBS GR-63-CORE compliant                |  |
| Ambient operating temperature            | <ul style="list-style-type: none"> <li>■ Long term: 41° to 104° F (5° to 40° C)</li> <li>■ Short term: 23° to 122° F (–5° to 50° C)</li> </ul>   |
| Ambient operating humidity               | <ul style="list-style-type: none"> <li>■ Long term: 5% to 85% (noncondensing)</li> <li>■ Short term: 5% to 95% (noncondensing)</li> </ul>  |
| Ambient storage temperature              | –40° to 158° F (–40° to 70° C), 95% relative humidity  |
| Ambient storage humidity                 | 5% to 95% (noncondensing)  |
| <b>Heat Dissipation</b>                  |  |
| 3840 W, 13106 BTU/hour maximum           |  |
| <b>DC Input</b>                          |  |
| Voltage                                  | –40 to –72 VDC   |
|  | <b>NOTE:</b> If the voltage rises above –40 VDC, the system powers off. The system does not power on again until the input voltage reaches –43 +/– 0.5 VDC.  |
| Current                                  | 80 A @ –48 VDC   |
| Power                                    | 3840 W maximum   |
| Redundancy (input power)                 | 2 independent line feeds   |
| <b>Space Requirements</b>                |  |
|  | <ul style="list-style-type: none"> <li>■ 3 feet (90 cm) behind router or rack</li> <li>■ Do not block air vents on front, sides, top, or back of the router</li> </ul>   |
| <b>Airflow</b>                           |  |
|  | <ul style="list-style-type: none"> <li>■ Air intake occurs in the front and left and right sides of the router.</li> <li>■ Air is exhausted out of the top of the router.</li> <li>■ Exhaust air from components installed below the router is directed by an integral plenum out the back. See Figure 34 on page 97.</li> </ul> |

**Table 16: E320 Router Specifications** *(continued)*

| Category  | Specification   |
|---|---|
| <b>NEBS Certification Level 3</b>                     | <ul style="list-style-type: none"> <li>■ SR-3580 (FD-15): Network Equipment Building System (NEBS) Criteria Levels, Issue 1, November 1995</li> <li>■ GR-63-CORE: Network Equipment Building System (NEBS) Requirements: Physical Protection, Issue 2, April 2002</li> <li>■ GR-1089 (LSSGR, FD-15): Electromagnetic Compatibility and Electrical Safety - Generic Criteria for Network Telecommunications Equipment, Issue 2, Revision 1, February 1999</li> </ul>   |
| <b>Safety Agency Certification</b>                    | <ul style="list-style-type: none"> <li>■ AS/NZS 60950:2000 Safety of Information Technology Equipment</li> <li>■ CAN/CSA-C22.2, No. 60950-1-03, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements</li> <li>■ EN60825-1, Safety of Laser Products - Part 1: Equipment Class, Requirements, and User's Guide (2001)</li> <li>■ EN 60950-1:2001, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements</li> <li>■ IEC 60950-1(2001-10) Ed. 1.0 Information Technology Equipment - Safety - Part 1: General Requirements</li> <li>■ Low Voltage Directive (73/23/EEC)</li> <li>■ UL 60950-1, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements</li> </ul> |
| <b>Electromagnetic Emissions Agency Certification</b> | <ul style="list-style-type: none"> <li>■ AS/NZS 3548:1995 (CISPR 22 Class A)</li> <li>■ EMC Directive (89/336/EEC)</li> <li>■ EN55022 Class A (CISPR-22 Class A)</li> <li>■ EN55024, Annex C for WAN Equipment Performance Criteria A, B, and C</li> <li>■ ETSI 300-386, Telecommunication Network Equipment; ElectroMagnetic Compatibility (EMC) requirements</li> <li>■ FCC Part 15 Class A</li> <li>■ IECS-03 Issue 3 Class A</li> <li>■ VCCI (Voluntary Control Council for Interference by Information Technology Equipment)</li> </ul>  |

## Appendix B

# Installation Guidelines and Requirements

This chapter reviews preinstallation considerations such as electrical, environmental, and safety compliances for the router. For complete system specifications, see “System Specifications” on page 89.

This chapter contains the following sections:

- Your Preinstallation Responsibilities on page 93
- Environmental Requirements on page 93
- Regulatory Compliances on page 94
- Safety Guidelines on page 94
- Equipment Rack Requirements on page 95
- Cabling Recommendations on page 97
- Product Reclamation and Recycling Program on page 98
- Hardware Compliance on page 99

## Your Preinstallation Responsibilities

---

Complete the following tasks before installing the system:

- Verify that the electrical supply meets all AC and DC power requirements. See “System Specifications” on page 89.
- Verify that the site meets all environment specifications. See “Environmental Requirements” on page 93 and “System Specifications” on page 89.
- Verify that the cables you plan to use meet the specifications, and review the cabling recommendations. See “Cabling Recommendations” on page 97.
- Verify the operation of all telephone circuits, digital services, and T1 facilities required for installation.
- Ensure that all IP requirements are met, such as IP addresses, subnet masks, and any specific routing protocol information.

## Environmental Requirements

---

See “System Specifications” on page 89 for complete environmental specifications.

Choose a location for the router that is dry, relatively dust free, well ventilated, and air conditioned. If you install equipment in a rack, be sure that the floor is capable of supporting the combined weight of the rack and the installed equipment. Place the router in a location with sufficient access to power and network cables.

Like other network devices, the router generates a significant amount of heat. You must provide a balanced environment so that the router performs properly and safely. See “System Specifications” on page 89 for acceptable ranges of temperature and humidity.

Be sure to allow enough space around the router for adequate ventilation. Inadequate ventilation can cause the system to overheat.



**CAUTION:** Do not block the air vents on the router. Otherwise, the router might overheat.

---

## Regulatory Compliances

---

See “System Specifications” on page 89, for a complete list of regulatory compliance requirements, including safety, EMC, and telecommunications.

## Safety Guidelines

---

For your safety, before installing the system, review all safety warnings in this section.



**WARNING:** The recommended maximum ambient temperature is 40° C (104° F). For safe operation take into consideration the internal temperature within the rack.

---



**WARNING:** Install equipment in the rack from the bottom upward. Doing this helps maintain the stability of the rack and reduces the chance of the rack tipping over.

---



**WARNING:** Do not insert any metal object, such as a screwdriver, into an open slot or the backplane. Doing so can cause electric shock and serious burns.

---



**WARNING:** Three people are required to install the router in a rack: two to lift the system into position and one to screw it to the rack.

---



**WARNING:** Connect the router or rack to ground (earth), and ensure that a reliable grounding path is maintained in the rack.

---





---

**WARNING:** Do not work on the system or connect or disconnect cables during lightning activity.

---



---

**WARNING:** Be sure circuit breakers for the power source are in the OFF position before attaching power cables.

---



---

**WARNING:** Before servicing the router, turn off the power.

---



---

**WARNING:** Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. Metal objects heat up when connected to power and ground and can cause serious burns or become welded to the terminals.

---



---

**CAUTION:** Evaluate the overall loading of the branch circuit before you install any equipment into a rack.

---

## Equipment Rack Requirements

---

When allocating equipment rack space, consider the following:

- Type of equipment racks recommended for the router
- Number of equipment racks required to hold your current router configuration
- Future expansion

Make sure your distribution rack meets basic mechanical and space requirements and complies with conventional standards. In the United States, use EIA-310-D Cabinets, Racks, Panels, and Associated Equipment, September 1992.

## Mechanical Requirements

Follow these mechanical requirements for your rack:

- Select from the following rack options:
  - Two-post rack—a freestanding enclosed cabinet with two mounting posts in the front
  - Telco-type rack—two adjacent mounting posts that you must secure to the floor or an overhead structure

- Four-post rack—a freestanding open rack, either open or closed
- The rack must have at least two mounting posts.
- The distance between the mounting holes in the two posts must be 18.31 inches  $\pm$  .063 inch, as specified in the EIA-310-D.
- A fully loaded rack with three E320 routers must structurally support at least 645 pounds (293 kilograms).
- An optional mounting kit is available for mid-chassis mounting. Contact your Juniper Networks sales representative for more information.

### **Space Requirements**

If you use an enclosed rack for the router, ensure that there is a minimum of 3 inches of clearance between the inner side wall and the router. This clearance space ensures adequate air flow.

### **Proper Rack Installation**


To confirm proper equipment rack installation, verify the following:

- Racks are installed and electrically grounded according to manufacturer instructions.
- Equipment racks are anchored to the floor and, when possible, anchored to the ceiling as well.
- Equipment rack installations comply with applicable local, state, and national codes.



**CAUTION:** To maintain airflow requirements for an E320 router, a plenum must be installed above the E320 router before any other piece of equipment is installed above it.

---

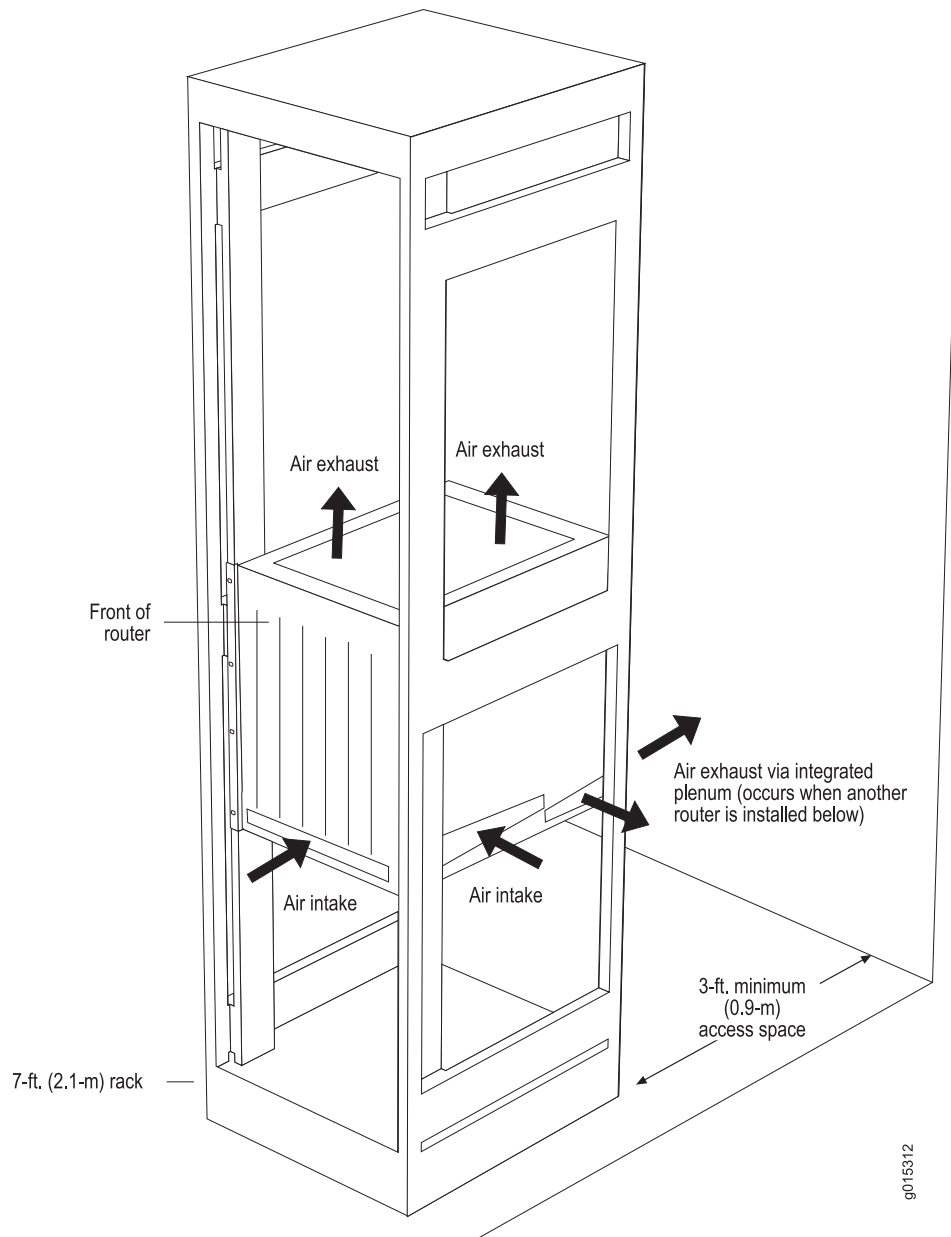**Figure 34: Airflow for the E320 Router**

## Cabling Recommendations

Comply with the following recommendations:

- Ensure that cable distance and rate limits meet IEEE-recommended maximum speeds and distances for signaling purposes. For information about attenuation and power loss in optical fiber cables see:
  - ANSI T1.646a-1997 Telecommunications – Broadband ISDN - Physical Layer Specification for User-Network Interfaces Including DS1/ATM (1997)

- ANSI T1.646-1995 Telecommunications – Broadband ISDN - Physical Layer Specification for User-Network Interfaces Including DS1/ATM (1995)
- Ensure that power cables deliver sufficient power to the system.
- Attach laser fiber connectors only to Class 1 laser devices in accordance with IEC 60825-1, Safety of Laser Products - Part 1.
- Route cables so that they do not restrict ventilation or airflow.
- Route cables so that modules and field-replaceable units are easily accessible.
- Route cables in a logical direction to prevent loss of connectivity to other equipment in the rack, associated equipment in adjacent racks, or to the backbone network.
- Consider using cable-management brackets to keep network cables untangled and orderly and to prevent cables from hindering access to other slots.
- For specifications on cables for line modules, see the *E120 and E320 Module Guide*.

For additional cable recommendations, consult the document GR-63–CORE: Network Equipment Building System (NEBS) Requirements: Physical Protection, Issue 2, April 2002.


## Product Reclamation and Recycling Program

---

Juniper Networks is committed to environmentally responsible behavior. As part of this commitment, we continually work to comply with environmental standards such as the European Union's *Waste Electrical and Electronic Equipment* (WEEE) Directive and *Restriction of Hazardous Substances* (RoHS) Directive.

These directives and other similar regulations from countries outside the European Union regulate electronic waste management and the reduction or elimination of specific hazardous materials in electronic products. The WEEE Directive requires electrical and electronics manufacturers to provide mechanisms for the recycling and reuse of their products. The RoHS Directive restricts the use of certain substances that are commonly found in electronic products today. Restricted substances include heavy metals, including lead, and polybrominated materials. The RoHS Directive, with some exemptions, applies to all electrical and electronic equipment.

In accordance with Article 11(2) of Directive 2002/96/EC (WEEE), products put on the market after 13 August 2005 are marked with the following symbol or include it in their documentation: a crossed-out wheeled waste bin with a bar beneath.

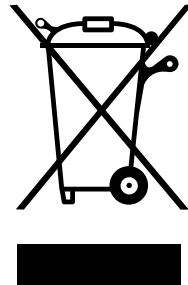

Juniper Networks provides recycling support for our equipment worldwide to comply with the WEEE Directive. For recycling information, go to <http://www.juniper.net/environmental>, and indicate the type of Juniper Networks equipment that you wish to dispose of and the country where it is currently located, or contact your Juniper Networks account representative.

Products returned through our reclamation process are recycled, recovered, or disposed of in a responsible manner. Our packaging is designed to be recycled and should be handled in accordance with your local recycling policies.

## Hardware Compliance

---

The router meets the hardware compliance requirements in this section.

### ***Federal Communications Commission (FCC) Statement***

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This equipment is designed for use with properly shielded and terminated cables. Refer to the installation sections of this manual before operation.

Reference: CFR 47, Part 15J, Sect 15.105 April 18, 1989

**Caution:** Changes or Modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### ***FCC Requirements for Consumer Products***

This equipment complies with FCC rules, Part 68. On the back side of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.

If this equipment causes harm to the telephone network, the Telephone Company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.

If you experience trouble with this equipment, please contact the manufacturer for warranty/repair information. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

### ***Food and Drug Administration, Center for Devices and Radiological Health***

This equipment complies with 21 CFR 1040.10 and 1040.11 for the safe use of lasers.

### ***Canadian Department of Communications Radio Interference Regulations***

This Class B (or Class A, if so indicated on the registration label) digital apparatus meets the requirements of the Canadian Interference-Causing Equipment Regulations.

### ***Réglement sur le brouillage radioélectrique du ministère des communications***

Cet appareil numérique de la Classe B (ou Classe A, si ainsi indiqué sur l'étiquette d'enregistrement) respecte toutes les exigences du Règlement sur le Matériel Brouilleur du Canada.

### ***Industry Canada Notice CS-03***

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or

equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

**Notice:** The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

### ***Avis CS-03 d'Industrie Canada***

L'étiquette du ministère des Communications du Canada indique que l'appareillage est certifié, c'est-à-dire qu'il respecte certaines exigences de sécurité et de fonctionnement visant les réseaux de télécommunications. Le ministère ne garantit pas que l'appareillage fonctionnera à la satisfaction de l'utilisateur. Avant d'installer l'appareillage, s'assurer qu'il peut être branché aux installations du service de télécommunications local. L'appareillage doit aussi être raccordé selon des méthodes acceptées. Le client doit toutefois prendre note qu'une telle installation n'assure pas un service parfait en tout temps.

Les réparations de l'appareillage certifié devraient être confiées à un service d'entretien canadien désigné par le fournisseur. En cas de réparation ou de modification effectuées par l'utilisateur ou de mauvais fonctionnement de l'appareillage, le service de télécommunications peut demander le débranchement de l'appareillage.

Pour leur propre sécurité, les utilisateurs devraient s'assurer que les mises à la terre des lignes de distribution d'électricité, des lignes téléphoniques et de la tuyauterie métallique interne sont raccordées ensemble. Cette mesure de sécurité est particulièrement importante en milieu rural.

**Attention:** Les utilisateurs ne doivent pas procéder à ces raccordements eux-mêmes mais doivent plutôt faire appel aux pouvoirs de réglementation en cause ou à un électricien, selon le cas.

**Avis:** Veuillez prendre note que pour tout appareillage supportant des lignes de type "loopstart," l'indice d'équivalence de la sonnerie (IES) assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface. La terminaison d'une interface téléphonique peut consister en une combinaison de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5. Le REN figure sur l'étiquette "FCC Rules Part 68" située sur le support du module ou à l'arrière de l'unité.

### **D.O.C. Explanatory Notes: Equipment Attachment Limitations**

The Canadian Department of Communications label identifies certified equipment. This certification meets certain telecommunication network protective, operational and safety requirements. The department does not guarantee the equipment will operate to the users satisfaction.

Before installing the equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above condition may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**Caution:** Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

### **Notes explicatives du ministère des Communications: limites visant les accessoires**

L'étiquette du ministère des Communications du Canada indique que l'appareillage est certifié, c'est-à-dire qu'il respecte certaines exigences de sécurité et de fonctionnement visant les réseaux de télécommunications. Le ministère ne garantit pas que l'appareillage fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer l'appareillage, s'assurer qu'il peut être branché aux installations du service de télécommunications local. L'appareillage doit aussi être raccordé selon des méthodes acceptées. Dans certains cas, le câblage interne du service de télécommunications utilisé pour une ligne individuelle peut être allongé au moyen d'un connecteur certifié (prolongateur téléphonique). Le client doit toutefois prendre note qu'une telle installation n'assure pas un service parfait en tout temps.

Les réparations de l'appareillage certifié devraient être confiées à un service d'entretien canadien désigné par le fournisseur. En cas de réparation ou de modification effectuées par l'utilisateur ou de mauvais fonctionnement de l'appareillage, le service de télécommunications peut demander le débranchement de l'appareillage.

Pour leur propre sécurité, les utilisateurs devraient s'assurer que les mises à la terre des lignes de distribution d'électricité, des lignes téléphoniques et de la tuyauterie métallique interne sont raccordées ensemble. Cette mesure de sécurité est particulièrement importante en milieu rural.



**Attention:** Les utilisateurs ne doivent pas procéder à ces raccordements eux-mêmes mais doivent plutôt faire appel aux pouvoirs de réglementation en cause ou à un électricien, selon le cas.

### ***EC Declaration of Conformity***

The EC Declaration of Conformity is available in “Declaration of Conformity” on page 115.

### ***Voluntary Control Council for Interference (VCCI) Statement for Japan***

|  |
|--|
| <p>この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用する<br/>と電波妨害を引き起こすことがあります。この場合には使用者が適切な対策<br/>を講ずるよう要求されることがあります。</p> <p style="text-align: right;">VCCI-A</p> |
|--|

The preceding translates as:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.  
VCCI-A



Appendix C

# Cable Pinouts

This appendix lists the cables and connector pinout assignments for the cables used with the router.


- SRP IOA on page 105

## SRP IOA

The SRP IOA module provides three management ports (console, auxiliary, 10/100Base-T Ethernet). You can connect a console directly to the RS-232 serial console port or debug auxiliary port using a shielded straight-through cable with a female DB-9 connector on one end and a male DB-25 with a crossover adapter on the DB-25 end. These ports are called serial ports, RS-232 ports, or console ports. These ports are considered a data terminal equipment interface (DTE). Direct connection to a terminal or PC (which also have DTE interfaces) requires a crossover cable.

- See Figure 35 on page 105 and Table 17 on page 105 for the pinout of the console port.
- See Figure 35 on page 105 and Table 18 on page 106 for the pinout of the auxiliary port.
- See Table 19 on page 107 for the pinout of the Ethernet port.

**Figure 35: SRP IOA Console Port and Auxiliary Port Pinout**

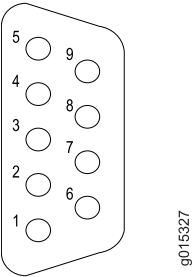

**Table 17: SRP IOA – RS-232 Console Connector Pinout**

| Pin | Signal |
|-----|--------|
| 1   | DCD    |

**Table 17: SRP IOA – RS-232 Console Connector Pinout** *(continued)*

| Pin | Signal |
|-----|--------|
| 2   | RXD    |
| 3   | TXD    |
| 4   | DTR    |
| 5   | GND    |
| 6   | DSR    |
| 7   | RTS    |
| 8   | CTS    |
| 9   | RNG    |

**Table 18: SRP IOA – RS-232 Auxiliary Connector Pinout**

| Pin | Signal     |
|-----|------------|
| 1   | no connect |
| 2   | RXD        |
| 3   | TXD        |
| 4   | DTR        |
| 5   | no connect |
| 6   | DSR        |
| 7   | no connect |
| 8   | no connect |
| 9   | no connect |

After you have configured an IP address on the system, you can connect using a host running Telnet over the 10/100Base-T Ethernet port on the SRP IOA. The router is shipped with a straight-through cable having a male RJ-45 Ethernet connector on each end.

See Table 19 on page 107 for the pinouts of the Ethernet cable's RJ-45 connector.

**Table 19: SRP IOA – RJ-45 Connector Pinout**

| Pin | Signal     |
|-----|------------|
| 1   | TX +       |
| 2   | TX –       |
| 3   | RX +       |
| 4   | no connect |
| 5   | no connect |
| 6   | RX –       |
| 7   | no connect |
| 8   | no connect |

To facilitate connecting the system to a terminal, the system is shipped with one of each of the following cable adapters:

- DB-9 female to RJ-45 female crossover null modem adapter
- DB-9 female to RJ-45 female straight-through adapter

Table 20 on page 107 lists the pinouts for the crossover adapter.

**Table 20: DB-9 – RJ-45 Crossover Adapter Pinout**

| DB-9 Pin | Signal | RJ-45 Pin  |
|----------|--------|------------|
| 1        | DCD    | 1          |
| 2        | RXD    | 3          |
| 3        | TXD    | 2          |
| 4        | DTR    | 6          |
| 5        | GND    | 5          |
| 6        | DSR    | 4          |
| 7        | RTS    | 8          |
| 8        | CTS    | 7          |
| 9        | RNG    | no connect |

Table 21 on page 108 lists the pinout for the straight-through adapter.

**Table 21: DB-9 – RJ-45 Straight-Through Adapter Pinout**

| DB-9 Pin | RS-232 Signal Name | RJ-45 Pin  | Ethernet Signal Name |
|----------|--------------------|------------|----------------------|
| 1        | DCD                | 1          | TX +                 |
| 2        | RXD                | 2          | TX –                 |
| 3        | TXD                | 3          | RX +                 |
| 4        | DTR                | 4          | no connect           |
| 5        | GND (signal)       | 5          | no connect           |
| 6        | DSR                | 6          | RX –                 |
| 7        | RTS                | 7          | no connect           |
| 8        | CTS                | 8          | no connect           |
| 9        | RNG                | no connect | none                 |

## Appendix D

# Contacting Customer Support and Returning Hardware

See the Juniper Networks Web site for complete customer service information:

- <http://www.juniper.net/support/guidelines.html>

This appendix contains the following sections:

- Contacting Customer Support on page 109
- Return Procedure on page 109
- Locating Component Serial Numbers on page 110
- Information You Might Need to Supply to JTAC on page 111
- Tools and Parts Required on page 112
- Returning Products for Repair or Replacement on page 112

## Contacting Customer Support

---

For your convenience, we provide multiple options for requesting and receiving technical support from the Juniper Networks Technical Assistance Center (JTAC):

- By the Web using Juniper Networks, Inc. Case Manager:

<https://www.juniper.net/cm/index.jsp>

- By telephone:

From the US, Canada, and Mexico at 1-888-314-JTAC

From all other locations at 408-745-9500

## Return Procedure

---

When you need to return a component, follow this procedure:

1. Determine the part number and serial number of the component. For instructions, see “Locating Component Serial Numbers” on page 110.

2. Obtain a Return Materials Authorization (RMA) number from the Juniper Networks Technical Assistance Center (JTAC). See “Information You Might Need to Supply to JTAC” on page 111.

Provide the following information in your e-mail message or during the telephone call:

- Part number and serial number of component
- Your name, organization name, telephone number, and fax number
- The shipping address for the replacement component, including contact name and phone number
- Description of the failure

The support representative validates your request and issues an RMA number for return of the component.

3. Pack the routing node or component for shipment, performing the procedure described in “Returning Products for Repair or Replacement” on page 112.

## Locating Component Serial Numbers

---


Before contacting Juniper Networks to request a Return Materials Authorization (RMA), you must find the serial number on the chassis or component. To list all the chassis modules and their serial numbers, enter the following command:

```
host1#show hardware
```

You can also find the serial numbers on the modules. ID labels are usually applied near the ejector. See Figure 36 on page 111.

Fan trays are not listed in the **show hardware** command output. You must remove the fan tray bezel to view the serial number ID label.

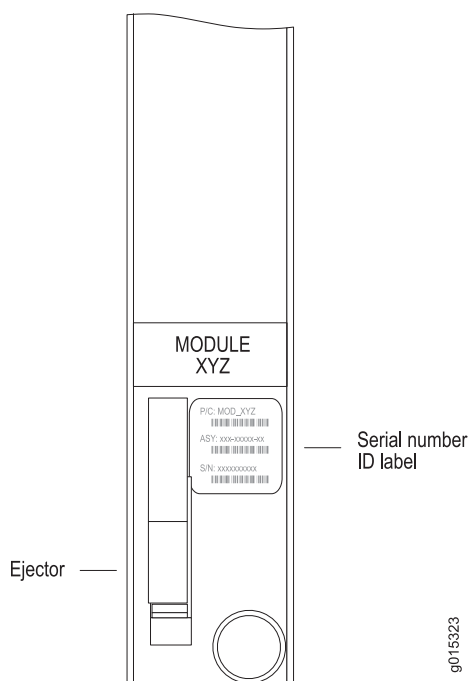

**Figure 36: Representative Module Serial Number ID Label**

## Information You Might Need to Supply to JTAC

When requesting technical support from the JTAC by phone, be prepared to provide the following information:

- Priority level
- Indication of what activity was being performed on the router when the problem occurred
- Problem detail and configuration data, obtained by these commands:
  - **show version**
  - **show hardware**
  - **show environment**
  - **show configuration**

When a new request for technical support is submitted, the JTAC engineer:

1. Opens a case and assigns a number.
2. Begins troubleshooting, diagnostics, and problem replication (if appropriate).
3. Provides you with periodic updates on problem status and escalates the problem as appropriate according to escalation management guidelines.
4. Closes the case when you agree that the problem has been resolved.

## Tools and Parts Required

---

To remove components from the chassis or the chassis from a rack prior to returning the chassis or components for repair or replacement, you need the following tools and parts:

- Mechanical lift, if available
- 3/8-inch wrench or nut driver
- Blank filler panels
- Electrostatic bag or antistatic mat
- Electrostatic discharge (ESD) grounding wrist strap
- Flat-blade (—) screwdriver
- Phillips (+) screwdrivers, numbers 1 and 2
- Plastic boots or other protective cover for fiber-optic SC and LC connectors
- Wire cutters

## Returning Products for Repair or Replacement

---

In the event of a hardware failure, please contact Juniper Networks to obtain a Return Material Authorization (RMA) number. This number is necessary to ensure proper tracking and handling of returned material at the factory. Do not return any hardware until you have received an RMA. Juniper Networks reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the shipper via collect freight.

See the customer support Web page for complete repair and return policies and procedures.

## Packing Instructions for Returning a Chassis

If possible, use the original shipping crate, pallet, and packing materials in which the chassis was originally shipped. If these materials are unavailable, use comparable shipping material, or contact your Juniper Networks representative for information on approved packaging material.

To pack the chassis for shipment, follow these steps:

1. Ground yourself by using an antistatic wrist strap or other device.
2. Issue the proper shutdown commands to halt your system.
3. Switch all power switches to the OFF position.
4. Remove all cables from the chassis.
5. Remove all major components from the chassis, including line modules, IOAs, SRP modules, SFM modules, fan trays, and cable management systems.
6. Remove the chassis from the rack and bolt it to the shipping pallet.

7. Cover the chassis with an ESD bag and place packing foam on top of and around the chassis.
8. Place the crate cover over the chassis and fasten the cover to the pallet.



## Appendix E

# Declaration of Conformity

- Declaration of Conformity – E120 Router on page 115
- Declaration of Conformity – E320 Router on page 116

### Declaration of Conformity – E120 Router

---

#### Declaration of Conformity

Juniper Networks, Inc.  
10 Technology Park Drive  
Westford, Massachusetts 01886 USA

declares that under our sole responsibility the product(s)

**Broadband Router**  
**Model E120**

is in conformity with the provisions of the following EC Directives, including all amendments,  
and with national legislation implementing these directives:

**Low Voltage Directive 73/23/EEC**  
**EMC Directive 89/336/EEC**

and that the following harmonized standards have been applied:

EN 60950-1:2000 + A11  
EN 60825-1:1994 + A1 + A2  
EN 300 386 V1.3.3:2005  
EN 300 132-2 (Narrowband and Wideband)  
EN 55024:1998 + A1 + A2  
EN 55022:1998 + A1 (2000) + A2 (2003) Class A,  
EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-6

Place  
Westford, MA

Signature  
Susanne Delisle

Date  
06/20/2007

## Declaration of Conformity – E320 Router

---

### Declaration of Conformity

Juniper Networks, Inc.  
10 Technology Park Drive  
Westford, Massachusetts 01886 USA

declares that under our sole responsibility the product(s)

**E-series Routing Platforms  
E320, including all plug-in modules**

are in conformity with the provisions of the following EC Directives, including all amendments,  
and with national legislation implementing these directives:

**Low Voltage Directive 73/23/EEC  
EMC Directive 89/336/EEC**

and that the following harmonized standards have been applied:

EN 60950:2000  
EN 60825-1:1994 + A1 + A2  
EN 300 386 V1.3.1:2001  
EN 55022:1998EN 61000-3-2, EN 61000-3-3, EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN  
61000-4-5, EN 61000-4-6, EN 61000-4-11

Place  
Westford, MA

Signature  
David Schilling

Date  
06/24/2005

---

## **Part 5**

# **Index**

- Index on page 119





# Index

## Symbols

|                        |                |
|------------------------|----------------|
| 10/100Base-T port..... | 47, 49         |
| –48 VDC power.....     | 13, 51, 90, 91 |

## A

|                                     |        |
|-------------------------------------|--------|
| abnormal LED activity.....          | 77, 82 |
| access, management.....             | 12, 59 |
| setting up console.....             | 59, 61 |
| SNMP.....                           | 12, 63 |
| Telnet setup.....                   | 62     |
| accessing, fan tray.....            | 71     |
| adapters, I/O.....                  | 3, 11  |
| agency certification.....           | 89, 91 |
| air filter.....                     | 35     |
| replacing.....                      | 73     |
| airflow.....                        | 93     |
| rack-mounted installation and.....  | 23     |
| specifications.....                 | 89, 91 |
| alarm ports.....                    | 47     |
| amperage.....                       | 89, 91 |
| antistatic bags and containers..... | 67     |
| assembly numbers, locating.....     | 110    |
| assigning an IP address.....        | 61     |
| audience for documentation.....     | xi     |
| auxiliary port.....                 | 10, 49 |

## B

|  |           |
|--|-----------|
| bays, upper and lower, right and left..... | 3, 12, 38 |
| BNC connector.....                         | 48        |
| booting                                    |           |
| LED activity.....                          | 81        |

## C

|                               |     |
|-------------------------------|-----|
| cable management bracket..... | 24  |
| cables                        |     |
| connecting.....               | 47  |
| failure.....                  | 82  |
| IOA module.....               | 49  |
| pinouts.....                  | 105 |
| power distribution unit.....  | 50  |
| recommendations.....          | 97  |

|  |           |
|--|-----------|
| required.....                          | 46        |
| SRP IOA.....                           | 47, 49    |
| cabling                                |           |
| SRP IOA.....                           | 49        |
| cabling router.....                    | 45        |
| cabling SRP IOA.....                   | 47        |
| Case Manager.....                      | 109       |
| certification.....                     | 89, 91    |
| chassis.....                           | 3         |
| circulation, air.....                  | 23        |
| classification, packet.....            | 11        |
| cleaning the router.....               | 68        |
| CLI (command-line interface).....      | 12        |
| clock source input ports.....          | 48        |
| clocking problems.....                 | 82        |
| command-line interface.....            | 12        |
| compliance                             |           |
| product reclamation and recycling..... | 98        |
| regulatory.....                        | 99        |
| components                             |           |
| returning.....                         | 19, 67    |
| storing.....                           | 67        |
| configuring cables.....                | 45, 97    |
| configuring management access.....     | 59        |
| configuring Telnet.....                | 62        |
| connecting console to the router.....  | 60        |
| connectors, pinouts.....               | 105       |
| console                                |           |
| for management access.....             | 59, 61    |
| ports                                  |           |
| 10/100Base-T.....                      | 47        |
| RS-232.....                            | 47        |
| console port.....                      | 10, 49    |
| consumption, power.....                | 89, 91    |
| conventions                            |           |
| notice icons.....                      | xii       |
| conventions defined                    |           |
| icons.....                             | xii       |
| syntax.....                            | xii       |
| text.....                              | xii       |
| crossover cable.....                   | 105       |
| current (electrical) requirements..... | 89, 91    |
| customer support.....                  | xvii, 109 |
| contacting JTAC.....                   | xvii      |

**D**

|                                    |            |
|------------------------------------|------------|
| damaged components, returning..... | 19         |
| DB-9 connector.....                | 47, 49     |
| DC power.....                      | 13, 51, 53 |
| detecting double-bit error.....    | 84         |
| diagnosing problems.....           | 77         |
| diagnostic LEDs.....               | 78         |
| dimensions of E120 router.....     | 89         |
| dimensions of E320 router.....     | 91         |
| dissipation, heat.....             | 89, 91     |
| distribution rack.....             | 23, 95     |
| documentation set                  |            |
| comments on.....                   | xvii       |
| double-bit errors                  |            |
| detecting.....                     | 84         |
| troubleshooting.....               | 85         |

**E**

|                                  |        |
|----------------------------------|--------|
| E120 router                      |        |
| assigning IP address to.....     | 61     |
| cabling.....                     | 45     |
| cabling recommendations.....     | 97     |
| cleaning.....                    | 68     |
| dimensions.....                  | 89     |
| electrical requirements.....     | 89     |
| environmental requirements.....  | 93     |
| equipment rack requirements..... | 95     |
| Ethernet cable.....              | 49     |
| installing.....                  | 21     |
| installing modules.....          | 25     |
| lifting.....                     | 17     |
| management access.....           | 59     |
| mechanical requirements.....     | 95     |
| modules.....                     | 7      |
| power requirements.....          | 89     |
| powering down.....               | 57     |
| powering up.....                 | 55     |
| safety guidelines.....           | 94     |
| site planning.....               | 93     |
| slot numbering.....              | 28     |
| space requirements.....          | 89, 96 |
| troubleshooting.....             | 77, 78 |
| unpacking.....                   | 17     |
| views.....                       | 3      |
| E320 router                      |        |
| assigning IP address to.....     | 61     |
| cabling.....                     | 45     |
| cabling recommendations.....     | 97     |
| cleaning.....                    | 68     |
| dimensions.....                  | 91     |
| electrical requirements.....     | 91     |
| environmental requirements.....  | 93     |
| equipment rack requirements..... | 95     |
| Ethernet cable.....              | 49     |
| installing.....                  | 21     |

|   |        |
|---|--------|
| installing modules.....                   | 25     |
| lifting.....                              | 17     |
| management access.....                    | 59     |
| mechanical requirements.....              | 95     |
| modules.....                              | 7      |
| power requirements.....                   | 91     |
| powering down.....                        | 57     |
| powering up.....                          | 55     |
| safety guidelines.....                    | 94     |
| site planning.....                        | 93     |
| slot numbering.....                       | 28     |
| space requirements.....                   | 91, 96 |
| troubleshooting.....                      | 77, 78 |
| unpacking.....                            | 17     |
| views.....                                | 3      |
| EIA distribution rack.....                | 23     |
| ejectors, module.....                     | 37     |
| electrical requirements.....              | 89, 91 |
| electronic equipment, recycling.....      | 98     |
| electrostatic discharge, precautions..... | 35     |
| environmental requirements.....           | 93     |
| ESD grounding jack.....                   | 35     |
| Ethernet link.....                        | 82     |
| external timing ports.....                | 47     |

**F**

|                                     |        |
|-------------------------------------|--------|
| fabric slices.....                  | 9      |
| failover, SRP modules.....          | 13     |
| failures                            |        |
| fans.....                           | 83     |
| general.....                        | 82     |
| FAN FAIL LED.....                   | 71     |
| FAN OK LED.....                     | 71     |
| fan tray.....                       | 13     |
| hot-swapping.....                   | 71     |
| fans                                |        |
| failure.....                        | 71, 83 |
| installing.....                     | 72     |
| location.....                       | 13     |
| redundancy.....                     | 13     |
| removing.....                       | 72     |
| status.....                         | 71     |
| far end receive failure.....        | 82     |
| FERF (far end receive failure)..... | 82     |
| filter, air.....                    | 73     |
| flash cards.....                    | 9      |
| redundancy.....                     | 13     |

**G**

|                                |    |
|--------------------------------|----|
| Global Configuration mode..... | 62 |
| ground wires required.....     | 51 |
| grounding jacks.....           | 51 |

**H**

|   |            |
|---|------------|
| halt command.....                                   | 40, 57     |
| hardware  |            |
| cable configuration.....                            | 45, 97     |
| reclamation and recycling.....                      | 98         |
| redundancy features.....                            | 13         |
| repairing and replacing.....                        | 36         |
| hazardous materials, reclamation and recycling..... | 98         |
| heat dissipation.....                               | 89, 91, 93 |
| high-availability mode.....                         | 13         |
| hot-swapping fan trays.....                         | 71         |
| hot-swapping modules.....                           | 35         |
| humidity requirements.....                          | 89, 91     |
| HyperTerminal.....                                  | 60         |

**I**

|                            |       |
|----------------------------|-------|
| I/O adapter.....           | 3, 11 |
| icons defined, notice..... | xii   |
| installing IOA shelf.....  | 38    |
| installing modules         |       |
| IOAs.....                  | 39    |
| line modules.....          | 39    |
| order of installation..... | 34    |
| SFM modules.....           | 36    |
| slot numbering.....        | 28    |
| SRP IOA.....               | 36    |
| SRP modules.....           | 36    |
| installing NVS cards.....  | 68    |
| installing router.....     | 21    |
| site planning.....         | 93    |
| installing SFPs.....       | 42    |
| IOA module.....            | 3, 11 |
| cables.....                | 49    |
| combinations of.....       | 30    |
| installing.....            | 39    |
| removing.....              | 40    |
| SFPs.....                  | 41    |
| SRP.....                   | 47    |
| IOA shelf.....             | 3     |
| installing.....            | 38    |
| IP address, assigning..... | 61    |

**J**

|                       |     |
|-----------------------|-----|
| JTAC, contacting..... | 109 |
|-----------------------|-----|

**L**

|   |        |
|---|--------|
| lead in equipment, reclamation and recycling..... | 98     |
| LEDs.....   | 78     |
| abnormal activity.....                            | 77, 82 |
| fans.....   | 71     |
| normal activity.....                              | 81     |
| lifting router.....                               | 17     |
| Line Configuration mode.....                      | 61     |

|                                 |       |
|---------------------------------|-------|
| line modules.....               | 3, 10 |
| installing.....                 | 39    |
| LEDs.....                       | 78    |
| pairing with other modules..... | 32    |
| removing.....                   | 40    |
| slot numbering.....             | 28    |
| LM (line module).....           | 10    |
| location, for routers.....      | 93    |

**M**

|  |        |
|--|--------|
| maintenance, system.....                           | 67     |
| management   |        |
| ports  |        |
| 10/100Base-T.....                                  | 49     |
| auxiliary.....                                     | 49     |
| RS-232.....  | 49     |
| management access.....                             | 12, 59 |
| setting up console.....                            | 59, 61 |
| SNMP.....  | 12, 63 |
| Telnet setup.....                                  | 62     |
| Management Information Bases.....                  | 12     |
| management port.....                               | 10     |
| managing modules.....                              | 34     |
| manuals  |        |
| comments on.....                                   | xvii   |
| mechanical requirements for distribution rack..... | 95     |
| MIBs (Management Information Bases).....           | 12     |
| module reset button.....                           | 84     |
| modules.....                                       | 7      |
| failure.....                                       | 82     |
| hot-swapping.....                                  | 35     |
| installing.....                                    | 25, 36 |
| order of installation.....                         | 34     |
| IOAs.....  | 11     |
| line.....  | 10     |
| managing.....                                      | 34     |
| removing.....                                      | 40     |
| repairing and replacing.....                       | 36     |
| replacing.....                                     | 34     |
| resetting.....                                     | 84     |
| self-testing.....                                  | 78     |
| SFM.....   | 9      |
| SRP.....   | 7      |
| storing.....                                       | 67     |
| monitoring LEDs.....                               | 78     |
| monitoring temperature.....                        | 83     |
| mounting kits.....                                 | 95     |
| mounting posts for rack.....                       | 95     |

**N**

|                         |        |
|-------------------------|--------|
| network management..... | 12, 59 |
| setting up console..... | 59, 61 |
| SNMP.....               | 12, 63 |
| Telnet setup.....       | 62     |

|                           |        |
|---------------------------|--------|
| network timing ports..... | 47     |
| NMI button.....           | 84     |
| nonvolatile storage.....  | 9      |
| notice icons.....         | xii    |
| NVS cards.....            | 9      |
| installing.....           | 68, 70 |
| redundancy.....           | 13     |
| storing.....              | 67     |

**O**

|                                   |    |
|-----------------------------------|----|
| order of module installation..... | 34 |
|-----------------------------------|----|

**P**

|   |        |
|---|--------|
| packaging, recycling.....                           | 99     |
| packet classification.....                          | 11     |
| packing instructions.....                           | 112    |
| passwords, Telnet.....                              | 62     |
| PC-CARD.....  | 9      |
| PCMCIA slot, SRP modules.....                       | 9      |
| PDU.....  | 22     |
| cabling.....  | 50     |
| replacing.....                                      | 74     |
| pinouts, E-series router cables and connectors..... | 105    |
| planning site for installation.....                 | 93     |
| plenum.....   | 23     |
| ports   |        |
| alarm.....  | 47     |
| console.....  | 47     |
| external timing.....                                | 47     |
| status LEDs.....                                    | 78     |
| power   |        |
| cabling power distribution unit.....                | 50     |
| consumption, system.....                            | 89, 91 |
| dissipation.....                                    | 89, 91 |
| failures.....                                       | 78, 82 |
| problems.....                                       | 78     |
| source A.....                                       | 82     |
| source B.....                                       | 82     |
| specifications.....                                 | 89, 91 |
| power distribution unit                             |        |
| replacing.....                                      | 74     |
| Power Distribution Unit (PDU).....                  | 22     |
| power input module, cabling.....                    | 50     |
| power switches.....                                 | 50, 55 |
| powering down router.....                           | 57     |
| powering up router.....                             | 55     |
| preinstallation responsibilities.....               | 93     |
| preparing site for installation.....                | 93     |
| Privileged Exec command mode.....                   | 55     |
| problems.....                                       | 82     |
| product numbers, locating.....                      | 110    |

**Q**

|                                     |    |
|-------------------------------------|----|
| QoS, packet classification for..... | 11 |
|-------------------------------------|----|

**R**

|   |                |
|---|----------------|
| rack, distribution.....                               | 23             |
| reclamation and recycling.....                        | 98             |
| recycling Juniper Networks equipment.....             | 98             |
| redundancy.....                                       | 13             |
| fans.....   | 13             |
| NVS cards.....  | 13             |
| power.....  | 13             |
| SRP module.....                                       | 13             |
| regulatory requirements.....                          | 99             |
| release mechanisms for SFPs.....                      | 43             |
| removing components.....                              | 67             |
| removing modules.....                                 | 40             |
| removing SFPs.....                                    | 43             |
| repacking components.....                             | 112            |
| repairing hardware components.....                    | 36             |
| replacing components.....                             | 67             |
| replacing modules.....                                | 34             |
| replacing NVS cards.....                              | 68, 69, 70     |
| replacing SFPs.....                                   | 41, 42         |
| reset button.....                                     | 84             |
| resetting modules.....                                | 84             |
| Restriction of Hazardous Substances (RoHS) Directive, |                |
| recycling equipment.....                              | 98             |
| Return Materials Authorization.....                   | 109            |
| returning product.....                                | 109            |
| RJ-45 connector.....                                  | 47, 49         |
| RMA (Return Materials Authorization).....             | 109            |
| RoHS (Restriction of Hazardous Substances) Directive, |                |
| recycling equipment.....                              | 98             |
| RS-232 port.....                                      | 47, 49, 59, 60 |

**S**

|                                   |                         |
|-----------------------------------|-------------------------|
| safety                            |                         |
| agency certification.....         | 89, 91                  |
| guidelines.....                   | 94                      |
| self-testing, modules.....        | 78                      |
| serial numbers, locating.....     | 110                     |
| SFM (switch fabric module).....   | 3, 9                    |
| installing.....                   | 36                      |
| removing.....                     | 40                      |
| switch fabric slice.....          | 10                      |
| SFPs (small form-factor pluggable |                         |
| transceivers).....                | 11, 41                  |
| installing.....                   | 42                      |
| removing.....                     | 43                      |
| storing.....                      | 67                      |
| show interface command.....       | 44                      |
| show version command.....         | 39, 40, 41, 56, 77, 111 |
| single-bit errors.....            | 84                      |
| site planning.....                | 93                      |

size  
     of E120 router.....89  
     of E320 router.....91  
     of rack.....96  
 slices, fabric.....9  
 slot combinations.....30, 32  
 slot disable command.....40  
 slot groups.....28  
     overloading.....82  
 slot numbering.....25, 28  
 small form-factor pluggable transceivers.....41  
 SNMP for management access.....12, 63  
 space requirements.....23, 89, 91, 93  
 specifications  
     airflow.....89, 91  
     dimensions.....89, 91  
     distribution rack.....95  
     electrical.....89, 91  
     heat dissipation.....89, 91  
     space.....89, 91  
     weight.....89, 91  
 SRP (switch route processor) module.....3, 7  
     errors on.....84  
     installing.....36  
     IOA.....10  
     PCMCIA slot.....9  
     powering down.....57  
     redundancy.....13  
     removing.....40, 57  
     switch fabric slice.....7, 10  
 SRP IOA.....10  
     cabling.....47, 49  
     installing.....36  
     removing.....40  
 starting router.....55  
 static electricity, protecting against.....67  
 storing, modules and components.....67  
 support, technical *See* technical support  
 switch fabric modules.....3  
 switch fabric slices.....9, 10  
 switch router processor modules.....3  
 switches, power.....50, 55  
 switchover, SRP modules.....13  
 synchronization, SRP modules.....69  
 syntax conventions defined.....xii  
 system maintenance.....67

## T

technical support.....109  
     contacting JTAC.....xvii  
 Telnet connection to router.....62  
 temperature  
     excessive.....82, 83  
     monitoring.....83  
     requirements.....82, 93

text conventions defined.....xii  
 thermal protection mode.....13, 71, 83  
 timing port.....10  
 tools required  
     cabling router.....46  
     installing modules.....36  
     removing components.....67, 112  
     unpacking router.....17  
 troubleshooting.....77, 78  
     booting.....82  
     cables.....82  
     clocking.....82  
     double-bit errors.....85  
     Ethernet link.....82  
     fans.....78, 83  
     LED activity for.....78  
     modules.....78, 82  
     power failure.....78, 82  
     safety guidelines.....94

## U

uninstalling modules.....40  
 unpacking router.....17  
 upgrading NVS cards.....68

## V

ventilation.....23

## W

Waste Electrical and Electronic Equipment (WEEE)  
     Directive, recycling equipment.....98  
 WEEE (Waste Electrical and Electronic Equipment)  
     Directive, recycling equipment.....98  
 weight  
     of E120 router.....89  
     of E320 router.....91  
     of rack.....93, 95

