



Junos[®] Space

Virtual Appliance Installation Guide

Release

11.1

Published: 2011-02-07

Revision 1

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Junos Space Virtual Appliance Installation Guide
Copyright © 2011, Juniper Networks, Inc.
All rights reserved. Printed in USA.

Revision History

February 2011—Junos Space Virtual Appliance Installation Guide, Release 11.1, Revision 1

The information in this document is current as of the date listed in the revision history.

END USER LICENSE AGREEMENT

READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer's principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer's principal office is located outside the Americas) (such applicable entity being referred to herein as "Juniper"), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. "Software" also includes updates, upgrades and new releases of such software. "Embedded Software" means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

- a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
- b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.
- c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
- d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
- e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the

Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14 (ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

Table of Contents

Part 1	Overview	
Chapter 1	Virtual Appliance Overview	3
	Junos Space Virtual Appliance Overview	3
	Virtual Appliance Deployment	3
	Recommendations for Deploying Virtual Appliances on the VMware ESX Server	4
	Configuring an NTP Time Source For Each Appliance	4
	Understanding How Nodes Are Connected in a Fabric	5
	Understanding How Junos Space Uses Ethernet Interfaces eth0 and eth3	6
Part 2	Deploying	
Chapter 2	Deploying the Junos Space Virtual Appliance	9
	Deploying a Junos Space Virtual Appliance	9
	Installing the VMware ESX Server	10
	Extracting Files from the Junos Space Virtual Appliance Package	10
	Converting a Virtual Appliance to a Virtual Machine by Using the OVF Tool	11
	Increasing RAM and Virtual Processors (CPU) for a Junos Space Virtual Appliance	12
	Adding Disk Resources for a Junos Space Virtual Appliance	13
Part 3	Configuring	
Chapter 3	Configuring the Junos Space Virtual Appliance	17
	Configuring Basic Settings for a Junos Space Virtual Appliance	17
	Configuring an Appliance that is the First Node in a Cluster or that Will Not Be Added to an Existing Cluster	17
	Configuring an Appliance to Add to an Existing Cluster	21
	Changing Network and System Settings for a Junos Space Virtual Appliance	23
	Changing the Password	24
	Setting Routing Options	24
	Adding DNS Servers	25
	Setting the System Time	25
	Retrieve Logs	25
	Expand VM Drive Size	26
	Setting Security Options	26
	(Debug) Run Shell	27

Part 4	Upgrading	
Chapter 4	Upgrading The Junos Space Virtual Appliance	31
	Junos Space Software Upgrade Overview	31
	Upgrading Junos Space Software	32
	Junos Space 11.1 Release Highlights	32
	Before You Begin	33
	Upgrading Junos Space Release 1.4 or 2.0 to Release 11.1	33
Part 5	Index	
	Index	37

List of Tables

Part 1	Overview	
Chapter 1	Virtual Appliance Overview	3
	Table 1: How Junos Space IP Addresses Function	6
Part 2	Deploying	
Chapter 2	Deploying the Junos Space Virtual Appliance	9
	Table 2: Files in the space-11.1R1.x Directory	11

PART 1

Overview

- [Virtual Appliance Overview on page 3](#)

CHAPTER 1

Virtual Appliance Overview

- Junos Space Virtual Appliance Overview on page 3
- Understanding How Nodes Are Connected in a Fabric on page 5
- Understanding How Junos Space Uses Ethernet Interfaces eth0 and eth3 on page 6

Junos Space Virtual Appliance Overview

The Junos Space Virtual Appliance consists of preconfigured Junos Space software with a built-in operating system and application stack that is easy to deploy, manage, and maintain.

A Junos Space Virtual Appliance includes the same software and all the functionality available in a Junos Space physical appliance. However, you must deploy the virtual appliance on the VMware ESX or ESXi Server, which provides a CPU, hard disk, RAM, and a network controller, but requires installation of an operating system and applications to become fully functional.

Just as you can install additional physical appliances to create a fabric to provide scalability and availability, you can deploy multiple virtual appliances to create a fabric that provides the same scalability and high availability as a fabric of physical appliances.

You can create a fabric of JA1500 Junos Space appliances, Junos Space virtual appliances, or a hybrid fabric of both physical and virtual appliances.

Virtual Appliance Deployment

The Junos Space Virtual Appliance is stored in the Open Virtualization Format (OVF) 1.0 and is packaged as an ***.ovf** file, which is a **tar** file that contains all the files of the Junos Space Virtual Appliance. OVF is not a bootable format, and you must deploy each Junos Space Virtual Appliance to a hosted ESX or ESXi server before you can run the Junos Space Virtual Appliance.

You can deploy a Junos Space Virtual Appliance on a VMware ESX server, version 3.5. or higher, or ESXi version 4.0 or higher to convert the Junos Space Virtual Appliance to a virtual machine. After the Junos Space Virtual Appliance is converted to a virtual machine, you use the VMware vSphere client that is connected to the VMware ESX (or ESXi) Server to deploy the Junos Space Virtual Appliance on the server.



NOTE: Where the Junos Space Virtual Appliance documentation references “ESX server” you can use either the ESX server Version 3.5 or later, or ESXi server, Version 4.0 or later.

Recommendations for Deploying Virtual Appliances on the VMware ESX Server

The CPU, RAM, and disk space provided by the VMware ESX server must meet or exceed the documented CPU, RAM, and disk space requirements for deploying a Junos Space Virtual Appliance. In addition, Juniper recommends that, for a multi-node fabric, you deploy the first and second virtual appliance on separate VMware ESX servers to ensure failover support.

The distributed Junos Space Virtual Appliance files are created with 5 GB of disk space, and you add an additional 40GB of disk resources when you first deploy the virtual appliance to a VMware ESX server. In many cases, the 45 GB of disk space will be sufficient; however, if the percent of Junos Space disk resources utilized reaches 80% capacity, Juniper recommends that you add another 40 GB of disk space to your virtual appliance. You can monitor the percent of disk space utilized in the Fabric Monitor inventory panel in the Junos Space user interface.

Configuring an NTP Time Source For Each Appliance

To ensure consistent behavior among all nodes in a multi-node fabric, each node's time must be synchronized with every other node in the fabric. When you configure the first Junos Space Virtual Appliance (and JA1500 Junos Space Appliance) with an NTP server, you ensure that, if the first node (which is used to synchronize time for all nodes in the fabric) goes down, all other nodes in the fabric remain synchronized. Additional nodes installed into the same fabric will automatically get their time setting from the first node in the fabric without any additional NTP server configuration.



NOTE: By default, Junos Space translates time so that the time displayed in the user interface corresponds to Junos Space server time, but the time is mapped to the local time zone of your client computer.

To ensure time remains synchronized across all nodes in the fabric, Juniper strongly recommends that you add an NTP server to the first appliance (physical or virtual) during initial set up.



NOTE: You must add the NTP server before you add the appliance/node to the fabric from the Junos Space user interface.

Related Documentation

- Understanding How Nodes Are Connected in a Fabric on page 5
- Fabric Management Overview
- Deploying a Junos Space Virtual Appliance on page 9
- Configuring Basic Settings for a Junos Space Virtual Appliance on page 17

- Changing Network and System Settings for a Junos Space Virtual Appliance on page 23
- Adding a Fabric Node
- Viewing Nodes in the Fabric

Understanding How Nodes Are Connected in a Fabric

Each Junos Space appliance (physical or virtual) that you install and configure is represented as a single node in the fabric. You can add nodes without disrupting the services that are running on the fabric. When you install and configure the first appliance, Junos Space automatically creates a fabric with one node. For each additional appliance you install and configure, you must add a node to logically represent the appliance in the fabric. You add nodes to the fabric from the **Administration** workspace in the Junos Space user interface. Each node that you add to the fabric increases the resource pool for the node functions to meet the scalability and availability requirements of your network. By default, Junos Space automatically enables node functionality across the nodes in the fabric to distribute workload. The nodes in the fabric work together to provide a virtualized resource pool for each of the node functions: load balancer, database, and application logic.

In a fabric comprising two or more nodes, Junos Space provides failover when a node functioning as the active server (load balancer server or database server) goes down. By default, Junos Space marks a particular node down and routes failover requests to the node that Junos Space designates as standby server. Junos Space uses a heartbeat mechanism to check whether the nodes in the fabric are running. When a node functioning as the active server fails (the appliance crashes or stops sending heartbeats), the node functioning as the standby server takes over all resources that were managed by the node functioning as active server. Because the nodes in a Junos Space fabric rely on IP multicast messages to discover each other, you should make sure that IP multicast packets are reachable among all nodes in the Junos Space fabric.

To add, manage, and monitor the nodes in the fabric, a Junos Space user connects to a single Web IP address. The IP address of first (active) node and second (standby) node, and the Web (virtual) IP address must all be in the same subnet. The Web IP needs to work on both the first and second node in the fabric. When both nodes are in same subnet, and the first (active) node goes down, the second (standby) node becomes the active node and packets continue to be directed from the router, to the Junos Space Web IP, and then to the second node, because both nodes are in same subnet. However, if the second (standby) node is configured in a different subnet than the first (active) node, and the first node goes down, the second node becomes the active node, but because the Web IP now points to the different subnet of the second node, all packets originally destined for first node won't be received by the second node.

Related Documentation

- Junos Space Virtual Appliance Overview on page 3
- Fabric Management Overview
- Adding a Fabric Node
- Viewing Nodes in the Fabric

Understanding How Junos Space Uses Ethernet Interfaces eth0 and eth3

Junos Space is designed to perform best using only eth0 if the managed devices are routable, using in-bound management. Use eth3 for a device management subnet if the managed devices are non-routable or on an out-of-band management subnet.

Table 1 on page 6 describes how Junos Space interfaces intentionally function:

Table 1: How Junos Space IP Addresses Function

/Interface	Function
eth0	SSH and device management if eth3 is not configured (node IP)
eth0:0	GUI interface with an instance of JBOSS running (GUI)
eth1	Not supported
eth2	Not supported
eth3	Device management when managed devices are on a subnet and not reachable by way of eth0.

Junos Space uses eth0 and eth3 interfaces as follows:

- Secure Shell Daemon (sshd) is listening on all IP addresses.
- The web interface is only on the VIP, the same subnet as eth0.
- Device management, outbound (discover) and inbound (post-discovery), including syslog and DMI, should be eth3, or eth0 if eth3 is not configured.

**Related
Documentation**

PART 2

Deploying

- [Deploying the Junos Space Virtual Appliance on page 9](#)

CHAPTER 2

Deploying the Junos Space Virtual Appliance

- Deploying a Junos Space Virtual Appliance on page 9

Deploying a Junos Space Virtual Appliance

You can use the VMWare OVF Tool to deploy one or more Junos Space virtual appliances on a VMWare ESX or ESXi host server.

The Junos Space Virtual Appliance requires a VMWare ESX server, version 3.5 or later, or VMWare ESXi server, version 4.0 or later that can support a virtual machine with the following configuration:

- 64-bit quad processor with at least 2.66 GHz
- 8 GB memory



NOTE: The ESX or ESXi host server must be configured to support the creation and operation of a virtual machine allocated with 8 GB memory. If the host server does not support this requirement, you will not be able to successfully deploy the Junos Space Virtual Appliance. The Junos Space OVF file is initially configured with 4 GB memory; however, during the configuration of the Virtual Appliance you must increase memory to 8 GB.

- One RJ-45 10/100/1000 Network Interface Connector
- 45 GB hard disk (5 GB initial disk resources + 40 GB disk resources to be added)



NOTE: The ESX or ESXi host server must include an Enterprise edition license, which might not be installed on host server by default. The Enterprise edition license provides the privileges that are required for adding disk resources to the Junos Space Virtual Appliance.



NOTE: Where the Junos Space Virtual Appliance documentation references “ESX server” you can use either the ESX server Version 3.5 or later, or ESXi server, Version 4.0 or later.

This topic includes the following tasks:

1. Installing the VMware ESX Server on page 10
2. Extracting Files from the Junos Space Virtual Appliance Package on page 10
3. Converting a Virtual Appliance to a Virtual Machine by Using the OVF Tool on page 11
4. Increasing RAM and Virtual Processors (CPU) for a Junos Space Virtual Appliance on page 12
5. Adding Disk Resources for a Junos Space Virtual Appliance on page 13

Installing the VMware ESX Server

To download the installation package for the VMware ESX server, go to <http://www.vmware.com/download/vi/>.

To view installation instructions for the VMware ESX server, go to http://www.vmware.com/support/pubs/vi_pubs.html.



NOTE: You can install the VMware vSphere client when you install the VMware ESX server, Version 4.0 or later or ESXi server, Version 4.0 or later. Earlier ESX server versions support the VMware Infrastructure client.

Extracting Files from the Junos Space Virtual Appliance Package

The Junos Space Virtual Appliance is created in the Open Virtualization Format (OVF) 1.0. The Junos Space package, named *.tar.gz, contains the OVF file and corresponding disk files.

To extract files from the Junos Space Virtual Appliance package:

1. Create a directory for the extracted Junos Space package files.

For example, from a Linux computer, use the following command:

```
mkdir Space
```

2. Use an extraction utility to extract all compressed files from the **space-11.1R1.x.tar.gz** package into the directory you created:

- The following example shows how to use the **tar** command to extract all files:

```
tar xvzf space-11.1R1.x.tar.gz /Space
```

This command creates a new directory named space-11.1R1.x.

- If you are using the WinZip utility to extract all files, follow these steps to avoid corrupting the extracted data:

- a. Double click the **space-11.1R1.x.tar.gz** file to open the file.
WinZip opens a dialog box that displays the following information:
 "Archive contains X number of files.
 <file_name(s).tar>
 "Should WinZip decompress it to temporary folder and open it?"
 - b. Click **No**.
 - c. Select the check box **Tar file smart CR/LF conversion**.
 - d. Extract the ***tar** file from the **.gz** archive to the desired folder.
 - e. Double-click on the ***tar** file to restart WinZip.
 - f. Clear the check box **Tar file smart CR/LF conversion**.
 - g. Extract the ***tar** file.
3. Verify that the Junos Space package files have been extracted to the new directory, for example:

```
cd Space/space-11.1R1.x
ls
```

The space-11.1R1.x directory includes the files described in Table 2 on page 11.

Table 2: Files in the space-11.1R1.x Directory

File Name	Description
space-11.1R1.x.mf	The manifest file.
space-11.1R1.x.ovf	The virtual appliance source file that is required to convert the virtual appliance to a virtual machine.
space-11.1R1.x-disk1.vmdk	The virtual disk file—a virtual partition with data and installed operating system (Microsoft Windows, Linux, Mac OS X, and so forth) that VMware uses to run as a virtual machine under the host operating system.

Converting a Virtual Appliance to a Virtual Machine by Using the OVF Tool

To deploy a Junos Space Virtual Appliance to an ESX server, you can use the OVF Tool 2.01. You convert the Junos Space Virtual Appliance (source) to a VMware Infrastructure virtual machine (destination) to deploy the Junos Space Virtual Appliance on a VMware ESX Server.

For complete information about using the VMware OVF Tool command-line utility, go to <http://www.vmware.com/support/developer/ovf/>.

To convert a Junos Space Virtual Appliance to a virtual machine:

1. From the OVF Tool command line, you enter the following information:
 - name for the virtual machine
 - datastore that can accommodate all files of the source virtual machine
 - path for the *.ovf file
 - Host system (IP address, user, and password)

The following sample command converts a Junos Space Virtual Appliance to a virtual machine:

```
/usr/bin/ovftool/ovftool --name=space1vm --datastore=datastore-linux01  
/tmp/vmachine/space-11.1R1.165552/space-11.1R1.165552.ovf  
vi://username:password@10.157.xxx.xxx
```

In the preceding sample command:

- **space1vm** is the name of the virtual machine.
- **datastore-linux01** is the datastore for the virtual machine source files.
- **/tmp/vmachine/space-11.1R1.165552/space-11.1R1.165552.ovf** is the path for the OVF file.
- **10.157.xxx.xxx** is the IP address of the host server.
- **username** specifies a user to access the host server.
- **password** specifies a password to access the host server.

Increasing RAM and Virtual Processors (CPU) for a Junos Space Virtual Appliance

The distributed Junos Space Virtual Appliance files are created with 4 GB of RAM and one virtual processor (CPU). To support Junos Space functionality, after deploying the Junos Space Virtual Appliance to the VMware ESX server, you must increase RAM and add virtual processors for the Junos Space Virtual Appliance.

To increase RAM and add virtual processors for the Junos Space Virtual Appliance:

1. Launch the VMware vSphere client that is connected to the ESX Server where the Junos Space Virtual Appliance is deployed.
2. Select the Junos Space Virtual Appliance from the inventory view.
3. If the Junos Space Virtual Appliance is powered on, you must power off the appliance to configure RAM and increase the number of virtual processors (CPUs). To power off the Virtual Appliance, right-click the Junos Space Virtual Appliance icon, and select **Power > Power Off**.
4. Select the **Summary** tab to view the Junos Space virtual machine settings for CPU and memory.

The default CPU setting is 1. The default memory setting is **4096 MB**.

5. Right-click the Junos Space Virtual Appliance icon, and select **Edit Settings** from the drop down menu.

The Virtual Machine Properties dialog box appears.

6. Select the **Hardware** tab.
7. Select **Memory**.
8. Increase memory to **8192 MB**.
9. From the **Hardware** tab, and select **CPUs**.
10. Set the value for **Number of virtual processors** field to **4**.
11. Click **OK**.

The number of virtual processors (CPU) for your Junos Space Virtual Appliance is increased to 4.

Adding Disk Resources for a Junos Space Virtual Appliance

The distributed Junos Space Virtual Appliance files are created with 5 GB of disk space. To support Junos Space functionality, after deploying the Junos Space Virtual Appliance to the VMware ESX server, you must add disk resources for the Junos Space Virtual Appliance.



NOTE: You must *add* a disk resource to increase disk space for a Junos Space Virtual Appliance. You cannot resize the existing disk by assigning a new size.

To add disk resources for the Junos Space Virtual Appliance:

1. In the VMware vSphere client, right-click the Junos Space Virtual Appliance icon, and select **Power > Power On**. The Junos Space Virtual Appliance must be powered on to add disk resources.
2. Right-click the Junos Space Virtual Appliance icon, and select **Edit Settings** from the drop down menu.

The Virtual Machine Properties window is displayed.

3. Select the **Hardware** tab, and click **Add**.

The Select Device Type window is displayed.

4. Select **Hard Disk**.
5. Click **Next**.

The Select a Disk window appears.

6. Select **Create a new Virtual disk**.
7. Click **Next**.

The Create Disk window appears.

8. Set the **Disk Size** field to **40 GB**.

The Location option should remain at the default setting **Store with the virtual machine**.

9. Click **Next**.

The Advanced Options window is displayed.

10. Leave the default settings unchanged, and click **Next**.

The Ready to Complete window is displayed.

11. Review your selected options, and click **Finish**.

The Virtual Machine Properties window displays the new virtual disk in the Hardware list.

12. Click **OK** to create the new virtual disk.

A status bar shows progress at the bottom of the window.



NOTE: After the new virtual disk is created, the Junos Space node must be scanned to detect the additional disk space that you added. To start the scan for additional disk space, you select the **Expand VM Drive Size** option in the Junos Space Settings Menu, immediately after you configure basic settings for your Junos Space Virtual Appliance.

The next step is to configure basic settings for your deployed Junos Space Virtual Appliance. To configure basic settings for the appliance, you access the console in the VMware vSphere client.

To deploy another Junos Space Virtual Appliance, you complete the all the preceding steps (and configure basic settings) for each Junos Space Virtual Appliance that you want to create.

Related Documentation

- [Configuring Basic Settings for a Junos Space Virtual Appliance on page 17](#)
- [Junos Space Virtual Appliance Overview on page 3](#)
- [Understanding How Nodes Are Connected in a Fabric on page 5](#)
- [Adding a Fabric Node](#)
- [Viewing Nodes in the Fabric](#)

PART 3

Configuring

- [Configuring the Junos Space Virtual Appliance on page 17](#)

CHAPTER 3

Configuring the Junos Space Virtual Appliance

- Configuring Basic Settings for a Junos Space Virtual Appliance on page 17
- Changing Network and System Settings for a Junos Space Virtual Appliance on page 23

Configuring Basic Settings for a Junos Space Virtual Appliance

After you deploy a Junos Space Virtual Appliance to a VMware ESX or ESXi server, you must enter basic network and machine information to make your Junos Space Virtual Appliance accessible to the network. You must also increase the virtual appliance drive space.

To configure a deployed Junos Space Virtual Appliance, the VMware vSphere client must be connected to the VMware ESX or ESXi server on which the virtual appliance is running.

This topic includes the following tasks:

- Configuring an Appliance that is the First Node in a Cluster or that Will Not Be Added to an Existing Cluster on page 17
- Configuring an Appliance to Add to an Existing Cluster on page 21

Configuring an Appliance that is the First Node in a Cluster or that Will Not Be Added to an Existing Cluster

To configure the settings of a Junos Space appliance that is the first node in a cluster or that will not be added to an existing cluster:

1. Power on the Junos Space Virtual Appliance:
 - a. From the VMware vSphere client, right-click on the Junos Space Virtual Appliance and select **Power** > **Power On** from the drop-down menu.
 - b. Select the Console tab.

The VMware vSphere Client console screen displays the Junos Space login prompt.
2. At the Junos Space login prompt, enter **admin** as your default login name and press Enter.
3. Enter **abc123** as your default password and press Enter.

Junos Space prompts you to change your default password.

4. Enter the default password again.
5. Enter a new password.

Passwords should include both alpha and numeric characters and be at least 6 characters in length. All passwords are case-sensitive.

6. Reenter your new password.
7. Enter a new IP address for interface **eth0**.



NOTE: The first and second appliance or virtual appliance that you configure in a cluster (fabric) must be in the same subnet.

To understand how Junos Space uses Ethernet interfaces **eth0** and **eth3**, see “Understanding How Junos Space Uses Ethernet Interfaces eth0 and eth3” on page 6.

8. Enter a new subnet mask for interface **eth0**.
9. Enter the default gateway as a dotted decimal IP address.
10. Enter the nameserver address in dotted decimal notation for interface **eth0**.
11. Enter Device Management IP interface information:

If you want to configure a separate interface for device management:

- Enter **y** when prompted to configure a separate interface for device management.
- Enter a new IP address for interface **eth3**.
- Enter a new subnet mask for interface **eth3**.

If you do not want to configure a separate interface for device management, enter **n** when prompted.

12. Enter **n** when prompted “Will this Junos Space system be added to an existing cluster?”
13. Enter the IP address for Web access.



NOTE: The IP address for Web access must be in the same subnet as the IP address for interface **eth0** but must be a different IP address.

14. Add an NTP server to synchronize the node with an external NTP source. For example, you can specify ntp.juniper.net as the external NTP server.
15. Enter the display name for this node.

This is the logical node name that Junos Space displays for the first node in a Junos Space cluster.
16. Enter a password for the cluster maintenance mode administrator.



NOTE: This is the password that a maintenance mode administrator must specify to access maintenance mode and shutdown all Junos Space nodes in the fabric. When in maintenance mode, an administrator can troubleshoot the Junos Space system or perform database restore operations.

17. Enter the password for cluster maintenance mode.

The Settings Summary is displayed, as shown in the following example.

```

Getting Started Summary Performance Events Console

Settings Summary:

1> IP Change: eth0 is 10.1 1.59.221 / 255.255.224.0
2> Default Gateway = 10.1 1.32.1 on eth0
3> DNS add: 10.1.1.191.252
4> Create as first node or standalone
5> Web IP address is 10.1 1.59.222
6> NTP add: ntp.juniper.net
7> Node display name is "space1"
8> Password for Junos Space maintenance mode is set.

A> Apply settings
C> Change settings
Q> Quit and set up later
R> Redraw Menu

Choice [ACQR]: _

```

18. Confirm that the information in the Settings Summary is correct:

- If all summary information is correct, enter **A** to apply the settings.
- If any summary information is not correct, enter **C** to change the settings.

When you enter **C**, you will be prompted to reenter all the basic configuration information that you have configured up to this point.

When you enter **A** to apply the settings, the Junos Space Settings Menu is displayed, as shown in the following example.

Junos Space Settings Menu

- ```

1> Change Password
2> Set Routing
3> Set DNS Servers
4> Change Time Options
5> Retrieve Logs
6> Expand VM Drive Size
7> Security
8> (Debug) run shell

```

Q> Quit  
R> Redraw Menu

Choice [1-8,QR]:

19. Enter **6** to Expand VM drive size.

Junos Space displays the prompt to expand VM (virtual appliance) drive size, as shown in the following example.


Choice [1-8,QR]: 6

This process will scan this node for additional drive space that you may have added.  
During this process, performance on this node may be significantly slowed.  
Continue? [y/n]

20. Enter **y** to start a scan for the 40 GB of additional drive space that you added when you deployed the virtual appliance.

21. Enter the admin password when prompted.

Junos Space starts a scan for the 40 GB of additional drive space that you added when you deployed the virtual appliance. When the scan completes, Junos Space displays the results to verify that the file system size was increased to include the new logical volume. The following example shows the results of a scan for additional drive space.

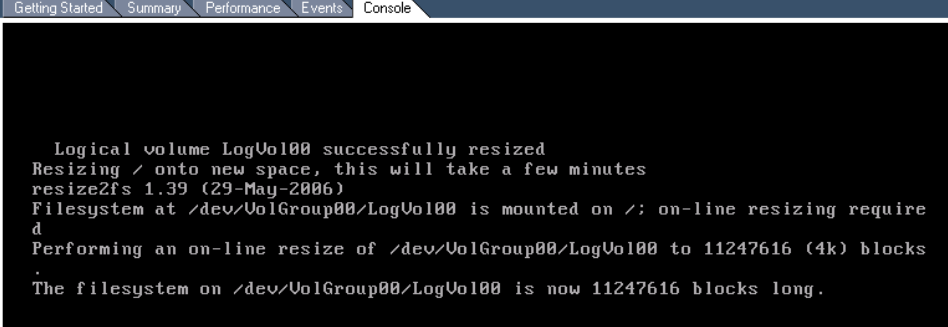

```

Getting Started Summary Performance Events Console
Logical volume LogVol100 successfully resized
Resizing / onto new space, this will take a few minutes
resize2fs 1.39 (29-May-2006)
Filesystem at /dev/VolGroup00/LogVol100 is mounted on /; on-line resizing require
d
Performing an on-line resize of /dev/VolGroup00/LogVol100 to 11247616 (4k) blocks
.
The filesystem on /dev/VolGroup00/LogVol100 is now 11247616 blocks long.

```

The Junos Space Settings Menu is displayed.

22. Enter **Q** to exit the Junos Space Settings Menu.

The configuration of the Junos Space Virtual Appliance is now complete.



**NOTE:** To log in to Junos Space from a Web browser, enter **super** as the default user name and **juniper123** as the password.

## Configuring an Appliance to Add to an Existing Cluster

To configure the basic settings of a Junos Space appliance that will be added to an existing cluster:

1. Power on the Junos Space virtual appliance:
  - a. From the VMware vSphere client, right-click on the Junos Space Virtual Appliance and select **Power** > **Power On** from the drop-down menu.
  - b. Select the Console tab and then click inside the console display screen.

The VMware vSphere client console screen displays the Junos Space login prompt.

2. At the Junos Space login prompt, enter **admin** as your default login name and press Enter.

3. Enter **abc123** as your default password and press Enter.

Junos Space prompts you to change your default password.

4. Enter the default password again.

5. Enter a new password.

All passwords are case-sensitive.

6. Reenter your new password.

7. Enter a new IP address for interface **eth0**.



**NOTE:** The first and second appliance or virtual appliance that you configure in a cluster (fabric) must be in the same subnet.

8. Enter a new subnet mask for interface **eth0**.
9. Enter the default gateway as a dotted decimal IP address.
10. Enter the nameserver address in dotted decimal notation for interface **eth0**.

11. Enter Device Management IP interface information:


If you want to configure a separate interface for device management:

- Enter **y** when prompted to configure a separate interface for device management.
- Enter a new IP address for interface **eth3**.
- Enter a new subnet mask for interface **eth3**.

If you do not want to configure a separate interface for device management, enter **n** when prompted.

12. Enter **y** when prompted “Will this Junos Space system be added to an existing cluster?”

The Settings Summary is displayed, as shown in the following example.

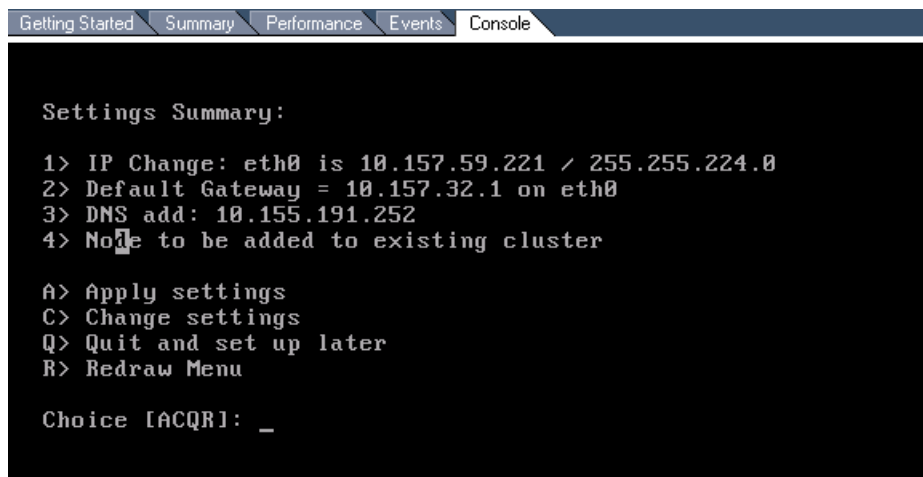

```

Getting Started Summary Performance Events Console
Settings Summary:
1> IP Change: eth0 is 10.157.59.221 / 255.255.224.0
2> Default Gateway = 10.157.32.1 on eth0
3> DNS add: 10.155.191.252
4> Note to be added to existing cluster

A> Apply settings
C> Change settings
Q> Quit and set up later
R> Redraw Menu

Choice [ACQR]: _

```

13. Confirm that the information in the Settings Summary is correct:

- If all summary information is correct, enter **A** to apply the settings.
- If any summary information is not correct, enter **C** to change the settings.

When you enter **C**, you will be prompted to reenter all the basic configuration information that you have configured up to this point.

When you enter **A** to apply the settings, the Junos Space Settings Menu is displayed, as shown in the following example.

#### Junos Space Settings Menu

```

1> Change Password
2> Set Routing
3> Set DNS Servers
4> Change Time Options
5> Retrieve Logs
6> Expand VM Drive Size
7> Security
8> (Debug) run shell

Q> Quit
R> Redraw Menu

```

Choice [1-8,QR]:

14. Enter **6** to Expand VM drive size.

Junos Space displays the prompt to expand VM (virtual appliance) drive size, as shown in the following example.


Choice [1-8,QR]: 6

This process will scan this node for additional drive space that you may have added. During this process, performance on this node may be significantly slowed.  
Continue? [y/n]



15. Enter **y** to start a scan for the 40 GB of additional drive space that you added when you deployed the virtual appliance.
16. Enter the admin password when prompted.

Junos Space start a scan for the 40 GB of additional drive space that you added when you deployed the virtual appliance. When the scan completes, Junos Space displays the results to verify that the file system size was increased to include the new logical volume. The following example shows the results of a scan for additional drive space.

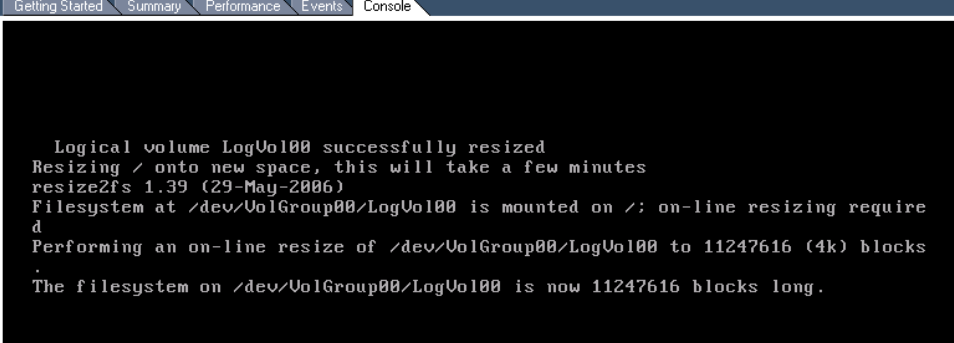

```

Getting Started | Summary | Performance | Events | Console

Logical volume LogVol00 successfully resized
Resizing / onto new space, this will take a few minutes
resize2fs 1.39 (29-May-2006)
Filesystem at /dev/VolGroup00/LogVol00 is mounted on /; on-line resizing require
d
Performing an on-line resize of /dev/VolGroup00/LogVol00 to 11247616 (4k) blocks
.
The filesystem on /dev/VolGroup00/LogVol00 is now 11247616 blocks long.

```

When the scan for additional drive space completes, the Junos Space Settings Menu is displayed.

17. Enter **Q** to exit the Junos Space Settings Menu.

The basic configuration of the Junos Space Virtual Appliance is now complete.

For each appliance that you add to an existing fabric, you must add the node in the Junos Space user interface, as described in [Adding a Fabric Node](#).



**NOTE:** To log in to Junos Space from a Web browser, enter “super” as the default user name and “juniper123” as the password.

#### Related Documentation

- [Logging In To the System](#)
- [Changing Network and System Settings for a Junos Space Virtual Appliance on page 23](#)
- [Junos Space Virtual Appliance Overview on page 3](#)

## Changing Network and System Settings for a Junos Space Virtual Appliance

You can change some of the basic configuration options that you configured when you first installed and set up your Junos Space Virtual Appliance. You can also change system time defaults and retrieve system log files your virtual appliance.

Each time you log in from the Junos Space system console, the Junos Space Appliance Settings menu is displayed. Follow the system prompts from the menu to set or modify

any menu options. Password changes take effect immediately. Any configuration changes you make do not take effect until you apply the changes.

You can perform the following tasks from the Junos Space Appliance Settings menu:

- Changing the Password on page 24
- Setting Routing Options on page 24
- Adding DNS Servers on page 25
- Setting the System Time on page 25
- Retrieve Logs on page 25
- Expand VM Drive Size on page 26
- Setting Security Options on page 26
- (Debug) Run Shell on page 27

## Changing the Password

To change your password:

1. From the Junos Space Appliance Settings menu, enter **1** at the prompt.
2. Enter **y** when prompted to change the password for an admin user.
3. Type the new password and press Enter.
4. Retype the new password and press Enter.

Your password is updated and the setup program returns you to the main menu.

## Setting Routing Options

To modify the default gateway for the management interface (eth0) or the device management interface (eth3). See also “Understanding How Junos Space Uses Ethernet Interfaces eth0 and eth3” on page 6.

1. From the Junos Space Appliance Settings menu, enter **2** at the prompt.
2. Enter one of the following options:
  - Enter **1** to change the default gateway for the management interface (eth0).  
Follow the prompts to change the IP address of the default gateway and return to the main menu.
  - Enter **2** to change the default gateway for the device management interface (eth3).  
Follow the prompts to change the IP address of the default gateway and return to the main menu.



**NOTE:** Option 2 is available only when a device management interface (eth3) was specified during the initial configuration of the virtual appliance.

---

## Adding DNS Servers

You can add up to three DNS servers. Enter each one using dotted decimal notation (for example, 10.157.191.252). Each addition returns you to the main menu.

To add a DNS server:

1. From the Junos Space Appliance Settings menu, enter **3** at the prompt.
2. Enter **1** to add a nameserver.
3. Enter the new nameserver in dotted decimal notation.

Repeat Step 1 through Step 3 to add another DNS server.

## Setting the System Time

When you configure each Junos Space Virtual Appliance with an NTP server, you ensure that, if the first node (which is used to synchronize time for all nodes in the fabric) goes down, all other nodes in the fabric remain synchronized. To ensure this behavior, all nodes in a fabric should be configured with the same external NTP source that you configured for the first appliance.

To change time options for an appliance:

1. From the Junos Space Appliance Settings menu, enter **4** at the prompt.
2. Enter **2** to set NTP servers.

NTP servers automatically set the system clock based on external time sources.

3. Enter one of the following values at the prompt:

- **1** to enable or disable NTP.
- **2** to add an NTP server.

The remaining numbered options let you remove an NTP server from the list.

4. Follow the prompts to enable, set, or delete the NTP servers and return to the main menu.

## Retrieve Logs

To retrieve system log files, you can use SecureCopy (SCP) if the network is functional, or a USB device if the network is down.



.....  
**NOTE:** To save the system log file to a USB device, the device must be connected to the Junos Space appliance.  
.....

To retrieve system logs:

1. From the Junos Space Appliance Settings menu, enter **5** at the prompt.

2. Choose a method for retrieving log files from the Retrieve Logs submenu:

- a. To save the log files to USB , enter 1 and follow the prompts.

Junos Space retrieves the log files on all cluster members and combines them into a tar file. Once the file is created, you can copy the file onto a USB device.

- b. To save the log files using SCP enter 2 and follow the prompts.

Junos Space retrieves the log files on all cluster members and combine them into a tar file. Once the file is created, you can transfer the file to a remote SCP server.

## Expand VM Drive Size

To increase disk space on a Junos Space Virtual Appliance, you must first add a disk resource in the VMWare Infrastructure Client to create a new virtual disk. Then you initiate a scan for the additional drive space that you added from the VMWare Infrastructure Client to increase the file system size.



NOTE: The Junos Space Virtual Appliance must be powered on to increase disk space.

To expand the Virtual Machine drive size:

1. Enter **6** to expand the VM drive size.
2. Enter **y** to initiate a scan for the additional drive space you added when you deployed the virtual appliance.

When the scan completes, Junos Space displays the results to verify that file system size was increased to include the new logical volume.

## Setting Security Options

By default, the firewall and SSH security options are enabled on the Junos Space appliance.



NOTE: Juniper recommends that, in most cases, the firewall remains enabled. However, if you are using Service Now to send email or SNMP notifications or using Service Now through a proxy server, you must disable the firewall. In addition, if the Service Now application is running in a multi-node fabric (node cluster), the firewall must be disabled across each node in the fabric.

To enable or disable the firewall:

1. From the Junos Space Appliance Settings menu, enter **7** at the prompt.
2. Change the firewall setting:
  - If the firewall is currently enabled, enter **1** to disable the firewall.
  - If the firewall is currently disabled, enter **1** to enable the firewall.

To enable or disable SSH:

1. From the Junos Space Appliance Settings menu, enter **7** at the prompt.
2. Change the SSH setting:
  - If SSH is currently enabled, enter **2** to disable SSH.
  - If SSH is currently disabled, enter **2** to enable SSH.

### (Debug) Run Shell

To run shell commands to debug Junos Space:

1. From the Junos Space Appliance Settings menu, enter **8** and follow the prompts.

#### **Related Documentation**

- [Downloading Troubleshooting System Log Files Using the CLI](#)



## PART 4

# Upgrading

- Upgrading The Junos Space Virtual Appliance on page 31





## CHAPTER 4

# Upgrading The Junos Space Virtual Appliance

- Junos Space Software Upgrade Overview on page 31
- Upgrading Junos Space Software on page 32

## Junos Space Software Upgrade Overview

---

To upgrade software for the Junos Space Virtual Appliance, you upload the Junos Space image file to your existing fabric and perform the software upgrade in the Junos Space user interface. When you perform an upgrade, all appliances (nodes) in the fabric are upgraded with the new software.

To ensure a successful upgrade of your Junos Space appliances, complete the following tasks.

- Back up all your Junos Space data files before you begin the upgrade process.
- Download the Junos Space software image from the Juniper Networks software download Web site.
- Complete the steps to upgrade your current Junos Space software to the latest software version.



NOTE: To perform a Junos Space upgrade, you must have super administrator or system administrator access privileges.

- Validate that the software is successfully installed by logging in to the user interface.  
To view the version of the installed Junos Space software, select the Help icon in the user interface banner, and click on the **About** panel.
- Upload the License Key that was sent to you when you purchased the Junos Space software upgrade.

### Related Documentation

- Upgrading Junos Space Software on page 32

## Upgrading Junos Space Software

---

To upgrade software for the Junos Space Virtual Appliance, you download the Junos Space Upgrade image file from the Juniper Networks software download site onto the local client file system. You upload the Junos Space image file to your local file system using the Platform > Administration > Manage Applications Upgrade Platform action. When you perform an upgrade, all appliances (nodes) in the fabric are upgraded with the new software.



CAUTION: The Junos Space Upgrade supports only two consecutive releases.



CAUTION: You can not upgrade directly from Junos Space release 1.0, 1.1, or 1.2 to release 11.1. Instead, you must upgrade indirectly to Junos Space release 1.3 or 1.4 before upgrading to release 11.1.

- Junos Space 11.1 Release Highlights on page 32
- Before You Begin on page 33
- Upgrading Junos Space Release 1.4 or 2.0 to Release 11.1 on page 33

## Junos Space 11.1 Release Highlights

The Junos Space Upgrade Release 11.1 includes:

### Junos Space Release 11.1 Contents

- Network Application Platform Release 11.1 (The platform provides the operating environment for Junos Space, therefore upgrade using the Platform > Administration > Manage Application Upgrade Platform action.)
- Service Now Release 11.1
- Service Insight Release 11.1

### Available Hot-Pluggable Applications

The following applications are hot-pluggable in Junos Space Release 11.1. Hot-pluggable applications mean that adding removing, and upgrading occurs while Junos Space is still running, and without service interruption. A hot-pluggable application is packaged separately and has an separate image file for installing and upgrading.

- Ethernet Design Release 11.1
- Network Activate Release 11.1
- QoS Design 11.1
- Security Design Release 11.1
- Virtual Control Release 11.1

## Before You Begin

Before you upgrade the Junos Space Software, ensure that you are aware of the following:

- Upgrading to Junos Space release 11.1 clears existing user preferences set using the User Preference global action icon at the right in the title bar of Application Chooser.
- We recommend that you:
  - Back up the Junos Space database before you begin the upgrade process. See also Application Management Overview.
  - Clear the Web browser cache before logging in to the upgraded Junos Space software.
- You must log in as the default super administrator or system administrator to upgrade Junos Space.

## Upgrading Junos Space Release 1.4 or 2.0 to Release 11.1

The Platform provides the running environment for all Junos Space applications, so upgrading it causes operation interruption.



NOTE: When upgrading Junos Space from release 1.4 or release 2.0 to 11.1, the Network Application Platform and Service Now and Service Insight applications are upgraded only. Junos Space release 1.4 or release 2.0 applications are disabled. You must upgrade release 1.4 or 2.0 disabled applications to release 11.1 (see Upgrading a Junos Space Application) or uninstall them (see Uninstalling a Junos Space Application. Do not add disabled Junos Space Release 11.1 applications using Platform > Administration > Manage Applications > Add Application.

To upgrade Junos Space from release 1.2 or release 2.0 to release 11.1, see Upgrading the Network Application Platform.

### Related Documentation

- Application Management Overview
- Managing Junos Space Applications



## PART 5

# Index

- Index on page 37



# Index

## C

|                       |    |
|-----------------------|----|
| cluster               |    |
| configuring           |    |
| additional nodes..... | 21 |
| first node.....       | 17 |

## D

|                        |    |
|------------------------|----|
| debugging, system..... | 27 |
|------------------------|----|

## F

|                       |    |
|-----------------------|----|
| fabric                |    |
| configuring           |    |
| additional nodes..... | 21 |
| first node.....       | 17 |
| failover support..... | 5  |
| firewall              |    |
| default setting.....  | 26 |
| disabling.....        | 26 |

## I

|               |   |
|---------------|---|
| installation  |   |
| overview..... | 3 |

## J

|                                            |    |
|--------------------------------------------|----|
| Junos Space software                       |    |
| base application.....                      | 32 |
| hot-pluggable applications.....            | 32 |
| upgrade highlights.....                    | 32 |
| upgrade scenarios.....                     | 32 |
| upgrading , before you begin.....          | 33 |
| Junos Space virtual appliance              |    |
| configuring.....                           | 9  |
| converting to a virtual machine using OVF  |    |
| Tool.....                                  | 11 |
| disk resources, adding.....                | 13 |
| files, extracting from package.....        | 10 |
| RAM, increasing.....                       | 12 |
| Virtual processor CPU, increasing.....     | 12 |
| VMware ESX or ESXi server, installing..... | 10 |

## N

|                             |    |
|-----------------------------|----|
| node                        |    |
| adding to cluster.....      | 21 |
| configuring first node..... | 17 |
| nodes                       |    |
| active.....                 | 5  |
| connections.....            | 5  |
| failover.....               | 5  |
| IP multicast packets.....   | 5  |
| standby.....                | 5  |
| Web IP.....                 | 5  |
| NTP server                  |    |
| adding.....                 | 25 |
| configuring .....           | 4  |
| disabling.....              | 25 |
| enabling.....               | 25 |

## P

|                                    |    |
|------------------------------------|----|
| password                           |    |
| changing on virtual appliance..... | 24 |

## R

|                                        |    |
|----------------------------------------|----|
| routing                                |    |
| changing default gateway settings..... | 24 |
| changing static routing settings.....  | 24 |

## S

|                                       |        |
|---------------------------------------|--------|
| software, Junos Space, upgrading..... | 31, 32 |
| SSH                                   |        |
| default setting.....                  | 26     |
| disabling.....                        | 26     |
| system settings                       |        |
| changing.....                         | 23     |
| debugging.....                        | 27     |
| DNS servers.....                      | 25     |
| firewall.....                         | 26     |
| logs.....                             | 25     |
| NTP server.....                       | 25     |
| password.....                         | 24     |
| routing.....                          | 24     |

|                    |    |
|--------------------|----|
| SSH.....           | 26 |
| time.....          | 25 |
| VM drive size..... | 26 |

## U

|                                     |        |
|-------------------------------------|--------|
| upgrading Junos Space software..... | 31, 32 |
|-------------------------------------|--------|

## V

|                                                |    |
|------------------------------------------------|----|
| virtual appliance                              |    |
| adding disk resources.....                     | 13 |
| adding DNS servers.....                        | 25 |
| changing password.....                         | 24 |
| configuration.....                             | 9  |
| configuring NTP time source.....               | 4  |
| deployment                                     |    |
| CPU.....                                       | 4  |
| disk space.....                                | 4  |
| Open Virtualization Format (OVF).....          | 3  |
| overview.....                                  | 3  |
| RAM.....                                       | 4  |
| VMWare.....                                    | 3  |
| extracting files from Junos Space package..... | 10 |
| increasing RAM and CPU.....                    | 12 |
| increasing VM disk space.....                  | 26 |
| installation overview.....                     | 3  |
| installing VMware ESX or ESXi Server.....      | 10 |
| retrieving logs.....                           | 25 |